


2.7 Display Panel, Diagnostics

Diagnostics Display Panel

General

The display panel complies with the Premium standard

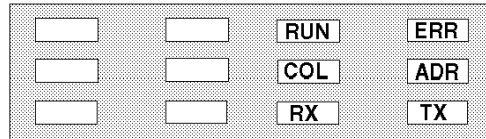

Diagnostics

Meaning of the diagnostics LEDs:

RUN	ERR	COL	ADR	TX	RX	Meaning
O	P	ns	ns	ns	ns	Module not operational.
O	F	O	O	O	O	Module not configured or configuration error.
F	F	O	O	O	O	Module running self-test.
P	O	O	O	F	O	Ethernet communication sending.
P	O	O	O	O	F	Ethernet communication receiving.
P	O	O	O	F	F	Ethernet communication in sending/receiving.
P	O	F	O	F	O	Module has detected collision.
P	O	O	P	O	O	Duplicate MAC address.
O	O	O	P	O	O	Network address beyond limits.

P = Permanently on, F = flashing, O = Off, ns = not significant