


Wiring

Wiring diagram for factory settings

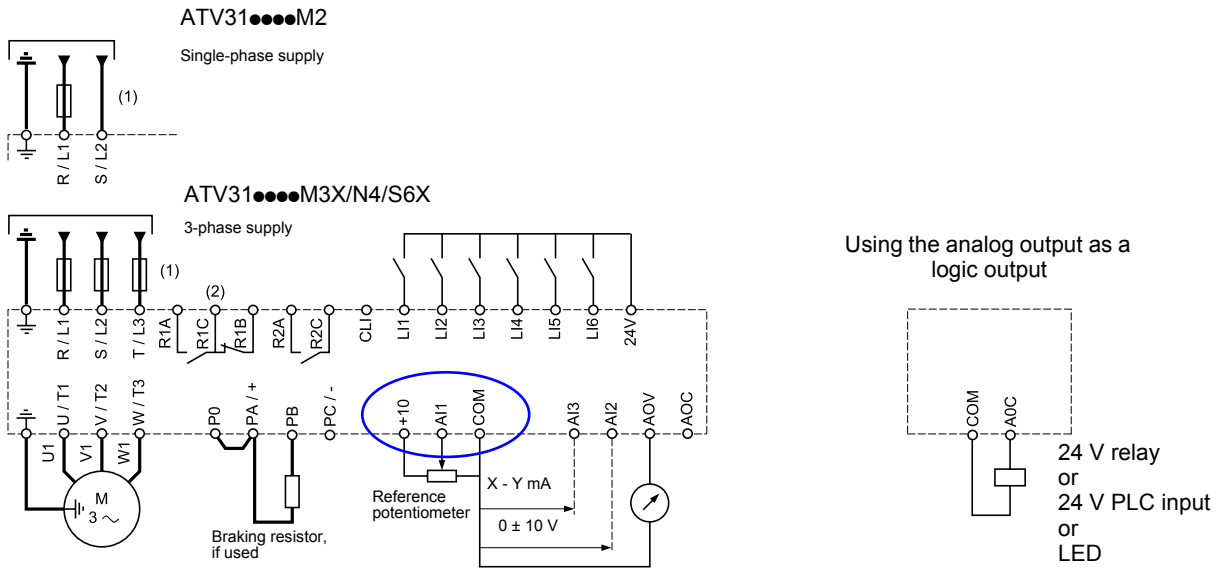

- (1) Line choke, if used (single phase or 3-phase)
- (2) Fault relay contacts, for remote indication of the drive status.

Note: Fit interference suppressors to all inductive circuits near the drive or coupled to the same circuit (relays, contactors, solenoid valves, etc).

Choice of associated components:
Please refer to the catalogue.

Logic input switch

This switch assigns the logic input common link to 0V, 24 V or "floating":

