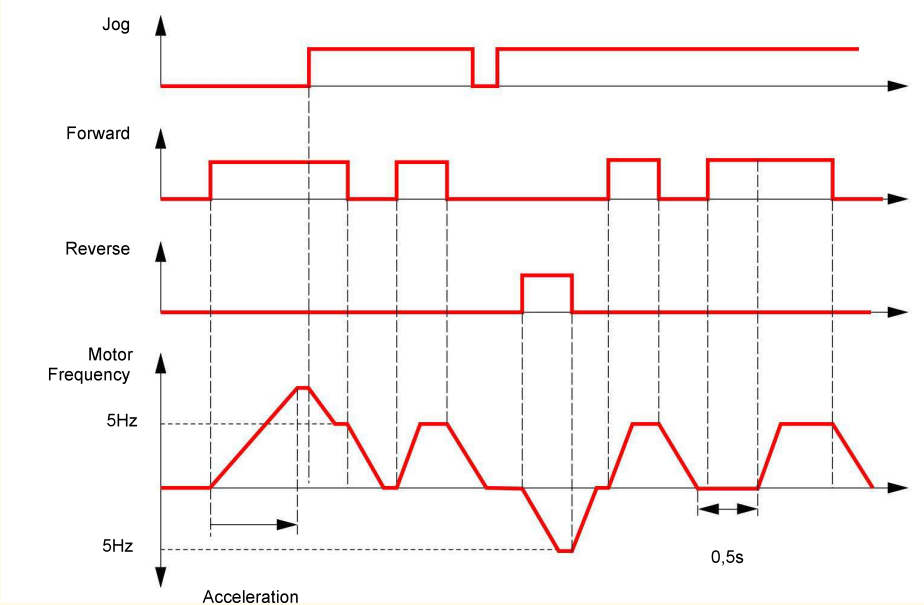
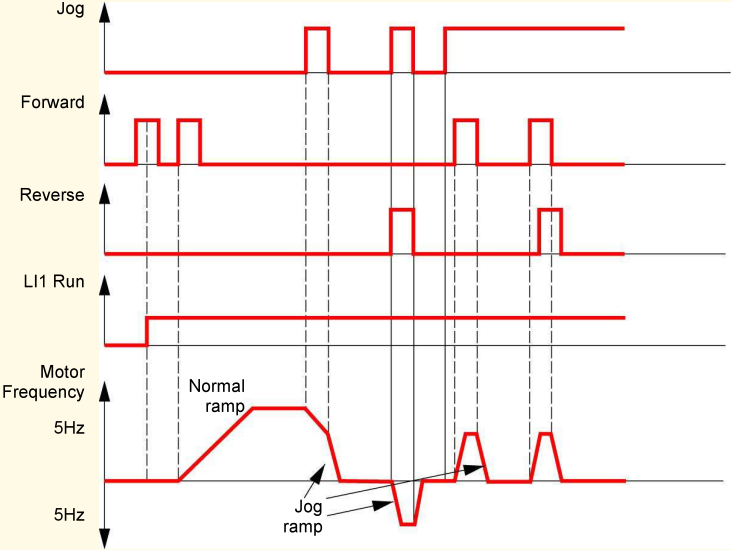


Configuration Mode - Complete menu (FULL)

I-D-
drc-
ctl-
FUN-
Flt-
CON-

| Code | Name/Description | Adjustment range | Factory setting |
|--------------------------------|--|------------------|-----------------|
| FUN- | Function menu (continued) | | |
| JOG | <input type="checkbox"/> Jog assignment | | n0 |
| n0 L1H L2H L3H L4H | <p>This parameter provides step by step control of motor running, using a logic input associated with a 2 and 3-wire control logic input. The jog frequency is fixed at 5 Hz. Acceleration and deceleration ramps taken into account in the Jog function are 0.1 s.</p> <ul style="list-style-type: none"> <input type="checkbox"/> Function inactive. <input type="checkbox"/> L1h: LI1 active high <input type="checkbox"/> L2h: LI2 active high <input type="checkbox"/> L3h: LI2 active high <input type="checkbox"/> L4h: LI4 active high <p>2-wire control</p>  <p>3 wire control</p>  | | |