



9.0 Wiring Diagrams - 750WP 2 Wire Infracan


1a). Automatic operation

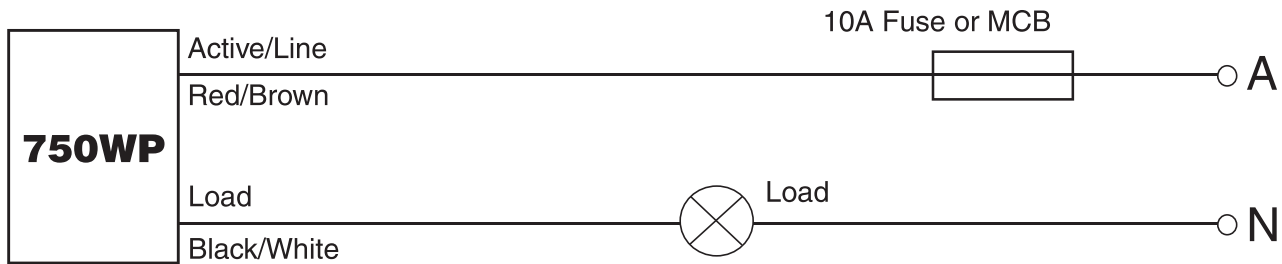

1b). Automatic with manual override ON or OFF

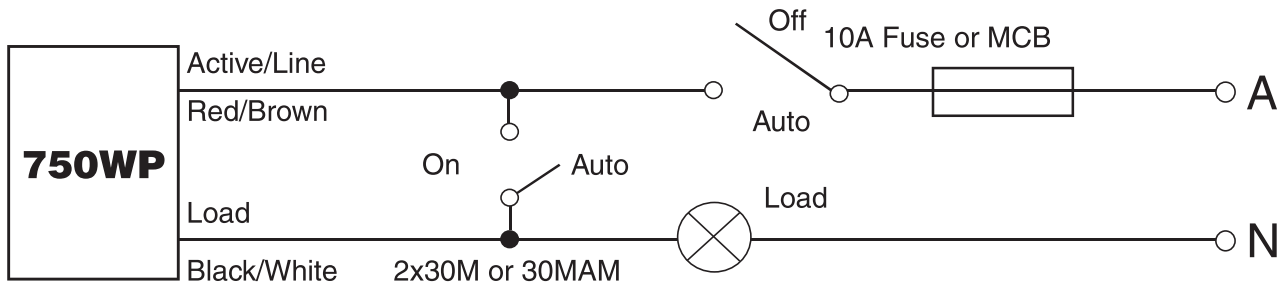

1c). ON, OFF or automatic operation using a 3 position switch

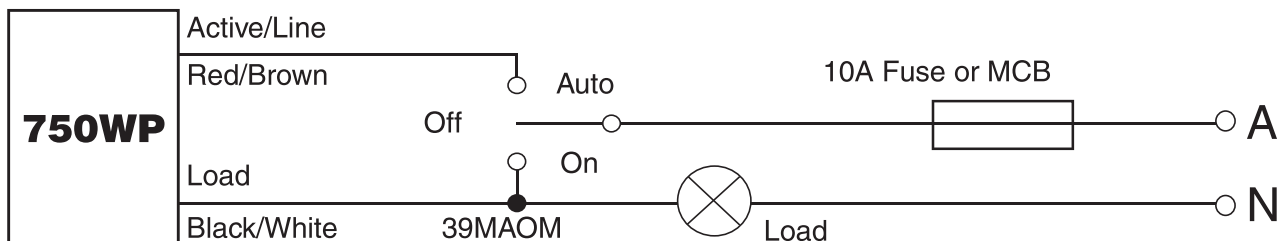

Note:

- When switching to AUTO for any of the above configurations the Infracan will turn on. Allow 30 seconds plus time-on period for the sensor to stabilise for normal operation. Wiring diagram 1(a), without override switches is preferred as there is no settling period.
- More than one 750WP CANNOT be connected in parallel to a common load. If parallel connection of multiple devices to control a common load is required, use Cat. No. 750WPR.

