

1. 좌측 메뉴중 System Settings 에 들어가서 기본적인 Email 발송 환경을 설정합니다. SMTP Server 이름과 보낼사람 Email 주소는 필수로 입력하여야 합니다.

The screenshot shows the PowerChute Business Edition web interface. On the left is a dark blue navigation menu with the following items: PowerChute Business Edition, 10.219.182.63, Unknown Device, Server Shutdown, Shutdown Settings, System Settings (highlighted in yellow), Shutdown Now, Events, Data Log, Help, and Logout. The main content area is titled 'System Settings' and contains three sections: 'Communication Type' with a 'Signaling Type' dropdown set to 'Smart'; 'Device Communication Port' with a 'Communications Port' dropdown set to 'COM1'; and 'E-Mail Settings' with fields for 'SMTP Server' (mail2.apcc.com), 'From E-Mail Address' (pcbeagent@apcc.com), 'Basic E-Mail Authentication' (checkbox), 'Server Username', 'Server Password', and 'Confirm Password'.

SMTP E-mail Settings

Use the SMTP E-mail fields to configure PowerChute Business Edition to send e-mail notification messages, as follows:

- **Server Name:** 사용할 SMTP 서버 주소를 입력하십시오. (예 : mail2.yourdomain.com).
- **Account Name:** Power Chute 프로그램이 나중에 ‘보낸이’ 에 사용할 이메일 주소를 입력하십시오.(예: emorris@server6.com).
- **Basic E-Mail Authentication:** 만약 고객님의 이메일서버가 basic email authentication 을 지원하고 보안메일을 발송하고 싶다면 이부분에 체크하십시오.
- **Server Username:** 보안메일을 보낼시 사용되는 Email 서버 이름을 입력하십시오.
- **Server Password:** 보안메일을 확인할때 사용될 Email 서버 비밀번호를 입력하십시오. 비밀번호가 일치하지 않는다면 이메일 확인이 안됩니다.
- **Confirm Password:** 비밀번호 확인

2. Event 에 Receipts 에 들어가 메일을 받을사람 주소를 추가합니다.

The screenshot shows the PowerChute Business Edition web interface. On the left is a dark blue navigation sidebar with the following menu items: Unknown Device, Server Shutdown, Events (highlighted), Logs, Actions, Recipients (highlighted), Configure Log, Data Log, Help, and Logout. The main content area has a top header with the APC by Schneider Electric logo and the IP address 10.219.182.63. Below the header, there are two sections: 'Event Recipients' and 'E-mail Recipients'. Under 'E-mail Recipients', the email address 'maure@apc.com' is listed, with an 'Add Email Recipient' link to its right. Below that is the 'Broadcast Recipients' section, which shows the IP address '10.219.182.63' and an 'Add Broadcast Recipient' link to its right.

3. Event action 에 들어가서 원하는 Event 를 선택하고 “Enable E-mail” 을 선택하고 Apply 를 누르면 이메일 셋팅이 완료됩니다.

The screenshot shows the PowerChute Business Edition web interface for configuring an event action. The left sidebar is the same as in the previous screenshot, with 'Events' and 'Actions' highlighted. The main content area has a top header with the APC by Schneider Electric logo and the IP address 10.219.182.63. Below the header, there are several sections: 'Power Failed', 'Event Description', 'E-mail', 'Notification', and 'Command File'. Under 'Event Description', there is a text description: 'The UPS has gone on battery due to a power failure. This condition can also be caused by p'. Under 'E-mail', the 'Enable E-mail' checkbox is checked. Under 'Notification', there are three unchecked checkboxes: 'Notify All Connected Users', 'Notify Configured Users', and 'Enable Repeat Notifications'. Below these is a 'Repeat Notification Every' field with two dropdown menus set to '0' and the text 'Minutes : Seconds'. Under 'Command File', the 'Enable Command File Execution' checkbox is unchecked.