

Adding of additional currency in Ecostruxure Power Build.

- Additional currency can only be added by a user having Admin rights in Ecostruxure Power Build

To add additional currency, follow the steps below

The screenshot shows the Ecostruxure Power Build interface. The top navigation bar includes the logo and a 'MENU' button. The main content area is titled 'Configure quote & BOM Okken or Blokset' and displays a list of projects, including 'Projects (147)', 'SR-188737', 'Vijayendra', and '110kW_380V'. A search bar and 'Latest News' section are also visible.

The 'Overall parameters' form is shown below, with the 'Main currency' field highlighted in orange and the 'Add new currency' button also highlighted in orange. The form includes fields for Logo, Main currency (set to INR), Language (set to English), and CSV separator (set to ;). The 'Add new currency' button is located to the right of the Main currency field.

1. First set Main currency

2. Click 'Add new...'

The 'Default Values' table is also visible, showing the last update and last change dates for various parameters:

Parameter	Last Update
Values last updater	Vijayanandan Kumarasamy
Values last change	20/03/2019 14:10
Local Costs	
Costs last updater	Vijayendra V G
Part costs last change	05/11/2019 12:37
Part processing costs last change	26/04/2018 09:46
PD costs last change	05/11/2019 12:22
Labor wiring costs last change	25/04/2018 15:13
Labor assembly costs last change	30/01/2018 14:32
Electrical labor assembly costs last change	23/08/2017 10:42
SE Device costs last change	05/11/2019 12:38
SE Core Part costs last change	05/11/2019 12:38
Vendor Part costs last change	02/10/2018 10:34
Auxiliaries & Measurement costs last change	25/04/2018 15:14
Custom library costs last change	25/04/2018 15:14
Other costs last change	05/11/2019 12:26

The 'User Management' section is also visible, containing a 'User management tool' button.

Overall parameters

Logo [Select image](#)
Only PNG, GIF or JPG files are allowed (5MB max).

Main currency: INR

Currency 2: AED

Currency rate: 1

Language: English

CSV separator: ;

Click on Dropdown menu to select the required additional currency

Default Values

Values last updater	Vijayanandan Kumarasamy
Values last change	20/03/2019 14:10

Local Costs

Costs last updater	Vijayendra V G
Part costs last change	05/11/2019 12:37
Part processing costs last change	26/04/2018 09:46
PD costs last change	05/11/2019 12:22
Labor wiring costs last change	25/04/2018 15:13
Labor assembly costs last change	30/01/2018 14:32
Electrical labor assembly costs last change	23/08/2017 10:42
SE Device costs last change	05/11/2019 12:38
SE Core Part costs last change	05/11/2019 12:38
Vendor Part costs last change	02/10/2018 10:34
Auxiliaries & Measurement costs last change	25/04/2018 15:14
Custom library costs last change	25/04/2018 15:14
Other costs last change	05/11/2019 12:26

User Management

[User management tool](#)

Overall parameters

Logo [Select image](#)
Only PNG, GIF or JPG files are allowed (5MB max).

Main currency: INR

Currency 2: USD

Currency rate: 1

Language: English

CSV separator: ;

Default Values

Values last updater	Vijayanandan Kumarasamy
Values last change	20/03/2019 14:10

Local Costs

Costs last updater	Vijayendra V G
Part costs last change	05/11/2019 12:37
Part processing costs last change	26/04/2018 09:46
PD costs last change	05/11/2019 12:22
Labor wiring costs last change	25/04/2018 15:13
Labor assembly costs last change	30/01/2018 14:32
Electrical labor assembly costs last change	23/08/2017 10:42
SE Device costs last change	05/11/2019 12:38
SE Core Part costs last change	05/11/2019 12:38
Vendor Part costs last change	02/10/2018 10:34
Auxiliaries & Measurement costs last change	25/04/2018 15:14
Custom library costs last change	25/04/2018 15:14
Other costs last change	05/11/2019 12:26

User Management

[User management tool](#)

Overall parameters

Logo [Select image](#)
Only PNG, GIF or JPG files are allowed (5MB max).

Main currency: INR

Currency 2: USD

Currency rate: 1

Language: English

CSV separator: ;

Set the conversion rate

Default Values

Values last updater	Vijayanandan Kumarasamy
Values last change	20/03/2019 14:10

Local Costs

Costs last updater	Vijayendra V G
Part costs last change	05/11/2019 12:37
Part processing costs last change	26/04/2018 09:46
PD costs last change	05/11/2019 12:22
Labor wiring costs last change	25/04/2018 15:13
Labor assembly costs last change	30/01/2018 14:32
Electrical labor assembly costs last change	23/08/2017 10:42
SE Device costs last change	05/11/2019 12:38
SE Core Part costs last change	05/11/2019 12:38
Vendor Part costs last change	02/10/2018 10:34
Auxiliaries & Measurement costs last change	25/04/2018 15:14
Custom library costs last change	25/04/2018 15:14
Other costs last change	05/11/2019 12:26

User Management

[User management tool](#)

Example: to enter new currency rate

Main Currency = INR

Additional currency = USD

1 USD = 78 INR Then the currency rate to be entered is $1/78 = 0.0128$

The screenshot shows the 'Overall parameters' configuration page in the EcoTruxure Power Build software. The page has a green header with the following tabs: 'Industrial Management', 'Default Values', 'Cost', 'Library', and 'Offer Documents'. The 'Overall parameters' section includes the following fields and controls:

- Logo:** A text input field with a 'Select image' button. Below it, a note states: 'Only PNG, GIF or JPG files are allowed (5MB max)'.
- Main currency:** A dropdown menu set to 'INR'.
- Currency 2:** A dropdown menu set to 'USD' with a trash icon to its right.
- Currency rate:** A text input field containing '0.0128' and a dropdown menu set to 'USD/INR'. Below it, a note states: 'To convert this currency into main currency'. A green 'Add new currency' button is located to the right of this field.
- Language:** A dropdown menu set to 'English'.
- CSV separator:** A text input field containing ':'.

At the bottom of the form, there are two buttons: 'Cancel' and 'Save'. An orange arrow points to the 'Save' button.

Click to save

Please Note:

1. This procedure is used to add an additional currency only. That means the costs are in the main currency and the conversion is done using the additional currency.
2. Maximum of two additional currencies can be added.