



data are not synchronized

my Device operate parameter list fault monitoring diagnostic custom logic FB diagram logic simulator

main settings

- control
- communication
- thermal
- current
- voltage
- power
- HMI
- user map
- Modified

description	value	default value	min value
full load current maximum	27 A		
motor full load current ratio	5 %FLCmax		
▼ operating mode			
motor operating mode	independent 3-wire		
▼ inputs / outputs			
▼ logic input assignment			
logic input 3 as external ready	disable	disable	
▼ rapid cycle			
rapid cycle lockout timeout	0 s	0 s	0 s
▼ local/remote control			
▼ local/remote channels			
remote control channel setting	network port	network port	
local control channel setting	terminal strip	terminal strip	
▼ transfer			
local/remote transfer mode	HMI port	bump	
▼ HMI keyboard			
local/remote key enable	disable	disable	
Stop key disable	no	no	
▼ terminal strip			
terminal strip for stop disable	no	no	
▼ diagnostic			
▼ on-off diagnostic			
diagnostic fault enable	disable	enable	
diagnostic warning enable	disable	enable	
		enable	
		A B C	
		manual fault reset	

As per user manual the fact to use "Terminal strip" for local control Channel disable LTMCU command.

Start and Stop LTMCU button are inactive.