

The following is a complete list of all **events** created by Powerchute Business Edition that will be logged in the Windows **Event** Viewer

1000 Monitoring Stopped  
1001 Monitoring Started  
1002 Communications Established  
1003 Utility Power Restored  
1004 UPS Self-Test Passed  
1005 Administrative Shutdown Scheduled  
1006 Shutdown Cancelled  
1009 UPS Battery Replaced  
1013 Overload Condition Solved  
1014 Runtime Calibration Started  
1015 Runtime Calibration Finished  
1016 System Shutdown Starting  
1017 UPS Returned From Bypass  
1020 Battery Communication Established  
1025 Shutdown In Progress  
1026 Administrative Shutdown Pending  
1027 Administrative Shutdown Cancelled  
1033 Battery Added  
1034 Battery Removed  
1040 Bypass Contactor OK  
1041 Bypass Relay Normal  
1042 Bypass User Initiated  
1050 Battery Disconnected  
1051 Battery Reconnected  
1052 Battery Installed  
1060 AVR Trim No longer Active  
1061 AVR Boost No Longer Active  
1102 UPS Internal Temperature In Bounds  
1200 Base Module Fan Normal  
1201 System Level Fan Normal  
1202 Site Wiring Normal  
1203 Battery Charger Normal  
1204 Main Relay Normal  
1205 Inverter Normal  
1206 Base Power Supply Normal  
1207 Output Load In Range  
1350 Bypass Ended

1366 Bypass Enabled  
1401 Contact Normal (Zone 1)  
1402 Contact Normal (Zone 2)  
1403 Contact Normal (Zone 3)  
1404 Contact Normal (Zone 4)  
1453 Temperature In Range (Probe 1)  
1454 Temperature In Range (Probe 2)  
1463 Humidity In Range (Probe 1)  
1464 Humidity In Range (Probe 2)  
2000 UPS On Battery  
2002 AVR Boost Active  
2003 Low Battery Condition  
2004 Runtime Calibration Aborted  
2007 AVR Trim Active  
2030 Smart Cell Signal Returned  
2037 Bypass Contactor Failed  
2040 Bypass Relay Malfunction  
2041 Bypass Contactor Stuck in Bypass  
2042 Bypass Contactor Stuck in On Position  
2043 Bypass Maintenance  
2044 Bypass Internal Fault  
3000 Lost Communication With UPS  
3001 UPS Output Overload  
3002 UPS Self-Test Failed  
3003 UPS Battery Is Discharged  
3004 Comm Lost While On Battery  
3005 Communication Not Established  
3006 Battery Communication Lost  
3010 Check Smart Cell Signal  
3014 Base Module Fan Fault  
3015 Base Power Supply Failure  
3016 Battery Needs Replacing  
3017 System Level Fan Fault  
3018 Main Relay Malfunction  
3020 Site Wiring Fault  
3021 Battery Charger Failure  
3022 Inverter Fault  
3030 Insufficient Runtime Available

3031 Output Load threshold Exceeded

3103 Contact Fault (Zone 1)

3104 Contact Fault (Zone 2)

3105 Contact Fault (Zone 3)

3106 Contact Fault (Zone 4)

3107 Maximum Internal Temperature Exceeded

3110 Humidity Out of Range (Probe 1)

3111 Humidity Out of Range (Probe 2)

3120 Temperature Out Of Range (Probe 1)

3121 Temperature Out Of Range (Probe 2)