


Figure 3-23. Storage Controller Card Cabling (Four 3.5-inch Hard Drive Chassis)

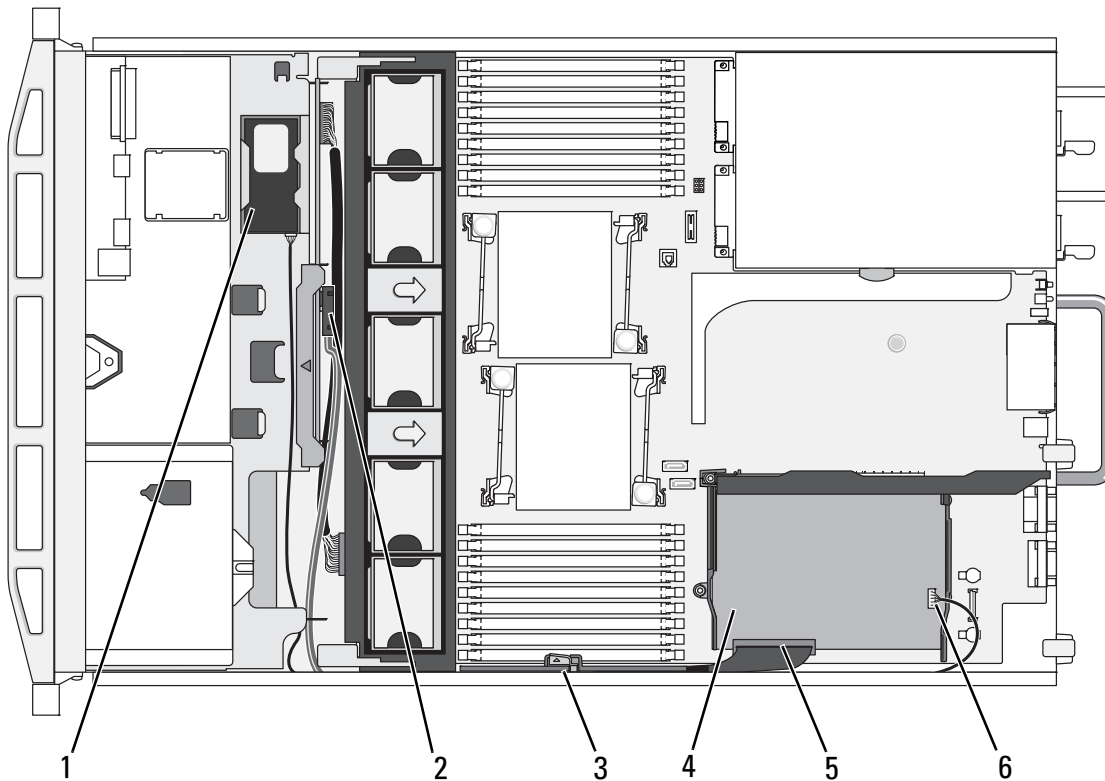

- | | | | |
|---|--------------------------|---|------------------------------------|
| 1 | RAID battery (PERC only) | 2 | SAS A connector on backplane |
| 3 | cable retention bracket | 4 | integrated storage controller card |
| 5 | SAS_0 connector | 6 | RAID battery connector (PERC only) |

RAID Battery

The information in this section applies only to systems with the optional PERC controller card.

Removing a RAID Battery

- 1 Pull back gently on the right edge of the battery bay and draw out the RAID battery from the battery carrier.
- 2 Disconnect the cable between the RAID battery and the storage controller card. See Figure 3-24.