

XUSL4E – How to increase OSSD

Wiring diagram of the association **XUSL4E** + **XPSUAT** + **XPSUEP** extension contacts unit in option, providing 6 or 10 NO safety outputs

Simply easy!™



Telemecanique

Sensors

XUSL4E – How to increase OSSD number

- Wiring diagram of the solution
XUSL4E + XPSUAT
+ XPSUEP (option)

