

The following is a complete list of all **events** created by Powerchute Business Edition that will be logged in the Windows **Event** Viewer

Open the event viewer and go to Windows Logs – Application

- 1000 Monitoring Stopped
- 1001 Monitoring Started
- 1002 Communications Established
- 1003 Utility Power Restored
- 1004 UPS Self-Test Passed
- 1005 Administrative Shutdown Scheduled
- 1006 Shutdown Cancelled
- 1009 UPS Battery Replaced
- 1013 Overload Condition Solved
- 1014 Runtime Calibration Started
- 1015 Runtime Calibration Finished
- 1016 System Shutdown Starting
- 1017 UPS Returned From Bypass
- 1020 Battery Communication Established
- 1025 Shutdown In Progress
- 1026 Administrative Shutdown Pending
- 1027 Administrative Shutdown Cancelled
- 1033 Battery Added
- 1034 Battery Removed
- 1040 Bypass Contactor OK
- 1041 Bypass Relay Normal
- 1042 Bypass User Initiated
- 1050 Battery Disconnected
- 1051 Battery Reconnected
- 1052 Battery Installed
- 1060 AVR Trim No longer Active
- 1061 AVR Boost No Longer Active
- 1102 UPS Internal Temperature In Bounds
- 1200 Base Module Fan Normal
- 1201 System Level Fan Normal
- 1202 Site Wiring Normal
- 1203 Battery Charger Normal
- 1204 Main Relay Normal
- 1205 Inverter Normal
- 1206 Base Power Supply Normal

1207 Output Load In Range
1350 Bypass Ended
1366 Bypass Enabled
2000 UPS On Battery
2002 AVR Boost Active
2003 Low Battery Condition
2004 Runtime Calibration Aborted
2007 AVR Trim Active
2030 Smart Cell Signal Returned
2037 Bypass Contactor Failed
2040 Bypass Relay Malfunction
2041 Bypass Contactor Stuck in Bypass
2042 Bypass Contactor Stuck in On Position
2043 Bypass Maintenance
2044 Bypass Internal Fault
3000 Lost Communication With UPS
3001 UPS Output Overload
3002 UPS Self-Test Failed
3003 UPS Battery Is Discharged
3004 Comm Lost While On Battery
3005 Communication Not Established
3006 Battery Communication Lost
3010 Check Smart Cell Signal
3014 Base Module Fan Fault
3015 Base Power Supply Failure
3016 Battery Needs Replacing
3017 System Level Fan Fault
3018 Main Relay Malfunction
3020 Site Wiring Fault
3021 Battery Charger Failure
3022 Inverter Fault
3030 Insufficient Runtime Available
3031 Output Load threshold Exceeded
3107 Maximum Internal Temperature Exceeded