

CONFIGURACION DE CONTACTOS DE ENTRADA:

Control ▾

Configuration ▾

Tests ▾

Logs ▾

About ▾

Outlet Groups

Power Settings

Shutdown

UPS

Self-Test Schedule

Scheduling

PowerChute Clients

Universal I/O ▸

Security ▸

Network ▸

Notification ▸

General ▸

Logs ▸

Temp & Humidity

Input Contacts

Output Relay

Control Policy

Home

Status ▾

Control ▾

Configuration ▾

Tests ▾

Logs ▾

About ▾

Input Contacts

Name	Alarm Status	State
Port 1 Zone A	✔ Normal	Open
Port 1 Zone B	✔ Normal	Open

Configuration

Input Contact : UIO1:Input Contact 1

Input Contact

☒ Enable

Name

Port 1 Zone A

Location

Port 1

Alarm Status

✓ Normal

State


Open

Normal State


☒ Open

☐ Closed

CONFIGURACION DE LOS CONTACTOS DE SALIDA:

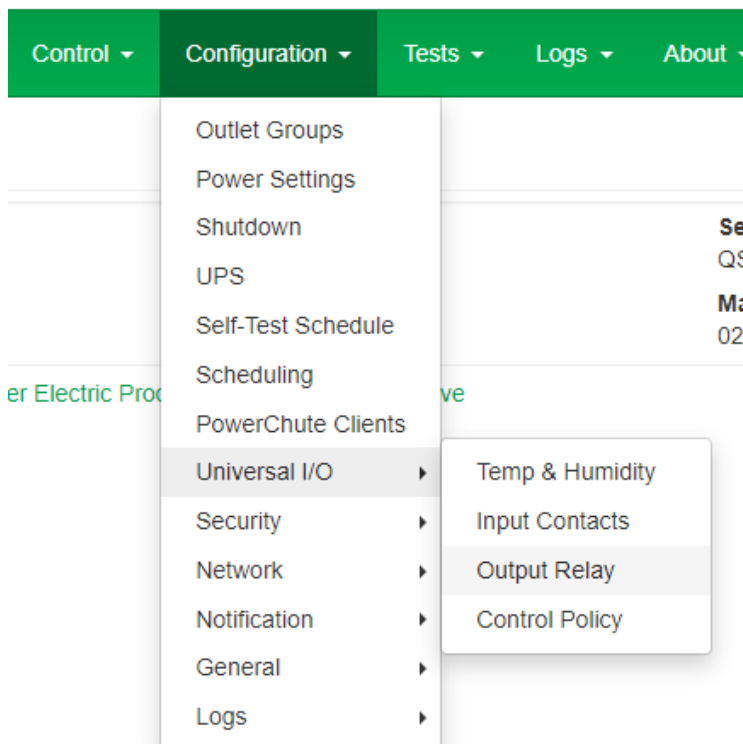

Output Relays

Name	State
Beacon Example	 Open
Edit	

Configuration

Output Relay : Port 1

Name

Beacon Example

Location

Port 1

State

Open

Normal State

- ☒ Open
- ☐ Closed

Control

☐ Close Relay

Delay [0 to 65535]

0seconds

Hold [0 to 65535]

0seconds