## How to Change the Application Units in ATV Process Drive using SoMove Software:

1- Go to Device => Customize Units

File View Communication	1.4	vice Toois Heip		1
□ □ # 8 ♥ 8 8 8 8 0 9 ? _ <b>1</b> × ■	<b>ゆるの</b> 図	Modfy topology Select printable data Refresh to read the data from device Control Panel	to PC	
My Device		Factory Settings Protection	:	Parameters Layout * Diagnost
	恒	Customize Units		
	9 ?	Save or Restore Conf Restart Device Import/Export ATV6xx ATV6xx HMI Personalization Help Autotuning	•	teristics Total ATV630D45M3 Te Type IP21/IP21Z Voltage 200240V/ThreePhase Power 45kW/60HP Current 176A
		Modify Topology	Device	

2- Select the units

D	1.0.1		Default Unit	
Pressure (SUPR):	1 Psi		0.1 Bar	
Flow Rate (SUFR) :	1 GPM	•	0.1 m3/h	
Temperature (SUTP) :	0.1°C		0.1°C	
Currency (SUCU) :	Euro	•	Euro	
2				