Altivar Machine ATV320

Variable Speed Drives for Asynchronous and Synchronous Motors

Programming Manual

03/2016





The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission of Schneider Electric.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2016 Schneider Electric. All rights reserved.

Table of Contents



	Safety Information	7
	About the Book1	11
Gen	eral Overview1	15
Chapter 1	Overview	17
•	Factory configuration	18
	, ,	
	Basic functions	
	Graphic display terminal option	
	· · · · · · · · · · · · · · · · · · ·	
	·	
	Description of the HMI	
	Structure of the menus	
Chapter 2		
	·	
	Initial steps	39
Prog	يramming ي	11
Chapter 3	Reference Mode (rEF)	13
	Introduction	14
	Organization tree	15
	Menu 4	16
Chapter 4	Monitoring Mode (MOn)	17
Factory configuration Application functions. Basic functions Graphic display terminal option Powering up the drive for the first time Remote display terminal option Structure of the parameter tables Finding a parameter in this document Description of the HIMI Structure of the menus Chapter 2 Setup Steps for setting-up the drive Initial steps Programming Chapter 3 Reference Mode (rEF) Introduction Organization tree Menu Chapter 4 Monitoring Mode (MOn) Introduction Organization tree Menu [MONIT. MOTOR] [I/O MAP] [I/O MAP] [MONIT. SAFETY] [MONIT. SAFETY] [MONIT. SAFETY] [MONIT. POWER TIME] [ALARMS] [OTHER STATE] [DIAGNOSTICS] [PASSWORD] Chapter 5 Configuration Mode (ConF) Introduction Organization tree		
	[MONIT. SAFETY]	
	[MONIT. FUN. BLOCKS]	
	[COMMUNICATION MAP]	
Chapter 1 Overview Factory configuration Application functions. Basic functions. Graphic display terminal option Powering up the drive for the first time. Remote display terminal option Structure of the parameter tables Finding a parameter in this document Description of the HMI Structure of the menus. Chapter 2 Setup Steps for setting-up the drive Initial steps Programming Chapter 3 Reference Mode (rEF) Introduction. Organization tree Menu Chapter 4 Monitoring Mode (MOn) Introduction. Organization tree Menu [MONIT. MOTOR] [I/O MAP] [MONIT. FUN. BLOCKS] [COMMUNICATION MAP] [MONIT. FUN. BLOCKS] [COMMUNICATION MAP] [MONIT. POWER TIME] [ALARMS] [OTHER STATE] [DIAGNOSTICS] [PASSWORD] Chapter 5 Configuration Mode (ConF) Introduction. Organization tree	·	
Chapter 5	Configuration Mode (ConF)	
	Introduction	78
	Organization tree	79
	My Menu	30

	Factory Settings	
	Macro Configuration	
	[SIMPLY START]	
	[SETTINGS]	
	[MOTOR CONTROL]	
	[INPUTS / OUTPUTS CFG]	
	[COMMAND][FUNCTION BLOCKS]	
	[APPLICATION FUNCT.] (FUn-)	
	REFERENCE SWITCHING	167
	REFERENCE OPERATIONS	168
	RAMPSTOP CONFIGURATION	
	AUTO DC INJECTION	
	JOG	178
	PRESET SPEEDS+/- SPEED	
	+/- SPEED AROUND A REFERENCE	186
	REFERENCE MEMORIZING	188
	FLUXING BY LOGIC INPUT	
	BRAKE LOGIC CONTROL EXTERNAL WEIGHT MEASUREMENT	191 199
	HIGH SPEED HOISTING	
	PID REGULATOR	206
	PID PRESET REFERENCES TORQUE LIMITATION	
	2ND CURRENT LIMITATION	
	DYN CURRENT LIMIT	219
	LINE CONTACTOR COMMAND	
	OUTPUT CONTACTOR COMMANDPOSITIONING BY SENSORS	
	PARAMETER SET SWITCHING	
	MULTIMOTORS / MULTICONFIGURATIONS	232
	AUTO TUNING BY LOGIC INPUT	
	TRAVERSE CONTROL[COMMUNICATION]	
	Access Level	
Chapter 6	Interface (ItF)	
	Access Level (LAC)	
	Language (LnG)	
	Monitoring Configuration (MCF)	
	Display configuration (dCF)	201
Chapter 7	Open / Save as (trA)	295
Chapter 8	Password (COd)	299
Chapter 9	Multipoint Screen	301
Mainta	nance and Diagnostics	202
Mainte	nance and Diagnostics	303
Chapter 10	Maintenance	305
Chapter 11	Diagnostics and Troubleshooting	
	Error code	
	5	308
	Fault detection codes which require a power reset after the detected fault is cleared	
	Fault detection codes that can be cleared with the automatic restart function after the cause has disappeared	

	Fault detection codes that are cleared as soon as their cause disappears Option card changed or removed	314 314
Annex	· (. 317
Chapter 12	Index of Functions	. 319
Chapter 13	Index of Parameter Codes	. 321
Chapter 14	Glossary	. 341

Safety Information



Important Information

NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a Danger or Warning safety label indicates that an electrical hazard exists, which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

A DANGER

DANGER indicates a hazardous situation, which, if not avoided, will result in death or serious injury.

▲ WARNING

WARNING indicates a hazardous situation, which, if not avoided, **could result** in death, serious injury, or equipment damage.

A CAUTION

CAUTION indicates a potentially hazardous situation, which, if not avoided, **could result** in minor or moderate injury, or equipment damage.

NOTICE

NOTICE is used to address practices not related to physical injury.

PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

Qualification Of Personnel

Only appropriately trained persons who are familiar with and understand the contents of this manual and all other pertinent product documentation are authorized to work on and with this product. In addition, these persons must have received safety training to recognize and avoid hazards involved. These persons must have sufficient technical training, knowledge and experience and be able to foresee and detect potential hazards that may be caused by using the product, by changing the settings and by the mechanical, electrical and electronic equipment of the entire system in which the product is used. All persons working on and with the product must be fully familiar with all applicable standards, directives, and accident prevention regulations when performing such work.

Intended Use

This product is a drive for three-phase synchronous and asynchronous motors and intended for industrial use according to this manual. The product may only be used in compliance with all applicable safety regulations and directives, the specified requirements and the technical data. Prior to using the product, you must perform a risk assessment in view of the planned application. Based on the results, the appropriate safety measures must be implemented. Since the product is used as a component in an entire system, you must ensure the safety of persons by means of the design of this entire system (for example, machine design). Any use other than the use explicitly permitted is prohibited and can result in hazards. Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel.

Product related information

Read and understand these instructions before performing any procedure with this drive.

A A DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Only appropriately trained persons who are familiar with and understand the contents of this manual and all other pertinent product documentation and who have received safety training to recognize and avoid hazards involved are authorized to work on and with this drive system. Installation, adjustment, repair and maintenance must be performed by qualified personnel.
- The system integrator is responsible for compliance with all local and national electrical code requirements as well as all other applicable regulations with respect to grounding of all equipment.
- Many components of the product, including the printed circuit boards, operate with mains voltage. Do not touch. Use only electrically insulated tools.
- Do not touch unshielded components or terminals with voltage present.
- Motors can generate voltage when the shaft is rotated. Prior to performing any type of work on the drive system, block the motor shaft to prevent rotation.
- AC voltage can couple voltage to unused conductors in the motor cable. Insulate both ends of unused conductors of the motor cable.
- Do not short across the DC bus terminals or the DC bus capacitors or the braking resistor terminals.
- Before performing work on the drive system:
 - Disconnect all power, including external control power that may be present.
 - Place a "Do Not Turn On" label on all power switches.
 - Lock all power switches in the open position.
 - Wait 15 minutes to allow the DC bus capacitors to discharge. The DC bus LED is not an indicator of the absence of DC bus voltage that can exceed 800 Vdc.
 - Measure the voltage on the DC bus between the DC bus terminals (PA/+ and PC/-) using a properly rated voltmeter to verify that the voltage is <42 Vdc.
 - If the DC bus capacitors do not discharge properly, contact your local Schneider Electric representative. Do not repair or operate the product.
- Install and close all covers before applying voltage.

Failure to follow these instructions will result in death or serious injury.

8 NVF41295 02/2016

Drive systems may perform unexpected movements because of incorrect wiring, incorrect settings, incorrect data or other errors.

▲ WARNING

UNEXPECTED EQUIPMENT OPERATION

- · Carefully install the wiring in accordance with the EMC requirements.
- Do not operate the product with unknown or unsuitable settings or data.
- · Perform a comprehensive commissioning test.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Damaged products or accessories may cause electric shock or unanticipated equipment operation.

A A DANGER

ELECTRIC SHOCK OR UNANTICIPATED EQUIPMENT OPERATION

Do not use damaged products or accesssories.

Failure to follow these instructions will result in death or serious injury.

Contact your local Schneider Electric sales office if you detect any damage whatsoever.

▲ WARNING

LOSS OF CONTROL

- The designer of any control scheme must consider the potential failure modes of control paths and, for critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop, overtravel stop, power outage and restart.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link.
- Observe all accident prevention regulations and local safety guidelines.¹
- Each implementation of the product must be individually and thoroughly tested for proper operation before being placed into service.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

1. For USA: Additional information, refer to NEMA ICS 1.1 (latest edition), "Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control" and to NEMA ICS 7.1 (latest edition), "Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems".

NOTICE

DESTRUCTION DUE TO INCORRECT MAINS VOLTAGE

• Before switching on and configuring the product, verify that it is approved for the mains voltage.

Failure to follow these instructions can result in equipment damage.

AWARNING

HOT SURFACES

- Ensure that any contact with hot surfaces is avoided.
- Do not allow flammable or heat-sensitive parts in the immediate vicinity of hot surfaces.
- Verify that the product has sufficiently cooled down before handling it.
- Verify that the heat dissipation is sufficient by performing a test run under maximum load conditions

Failure to follow these instructions can result in death, serious injury, or equipment damage.

AWARNING

EXPLOSION HAZARD

Only use this device outside of hazardous areas (explosive atmospheres).

Failure to follow these instructions can result in death, serious injury, or equipment damage.

About the Book



At a Glance

Document scope

The purpose of this document is to:

- · help you to set-up the drive,
- · show you how to program the drive,
- · show you the different menus, modes and parameters,
- · help you in maintenance and diagnostics.

Validity note

NOTE: The products listed in the document are not all available at the time of publication of this document online. The data, illustrations and product specifications listed in the guide will be completed and updated as the product availabilities evolve. Updates to the guide will be available for download once products are released on the market.

This documentation is valid for the Altivar Machine drive.

The technical characteristics of the devices described in this document also appear online. To access this information online:

Step	Action
1	Go to the Schneider Electric home page www.schneider-electric.com.
2	In the Search box type the reference of a product or the name of a product range. • Do not include blank spaces in the reference or product range. • To get information on grouping similar modules, use asterisks (*).
3	If you entered a reference, go to the Product Datasheets search results and click on the reference that interests you. If you entered the name of a product range, go to the Product Ranges search results and click on the product range that interests you.
4	If more than one reference appears in the Products search results, click on the reference that interests you.
5	Depending on the size of your screen, you may need to scroll down to see the data sheet.
6	To save or print a data sheet as a .pdf file, click Download XXX product datasheet.

The characteristics that are presented in this manual should be the same as those characteristics that appear online. In line with our policy of constant improvement, we may revise content over time to improve clarity and accuracy. If you see a difference between the manual and online information, use the online information as your reference.

Related documents

Use your tablet or your PC to quickly access detailed and comprehensive information on all our products on www.schneider-electric.com.

The internet site provides the information you need for products and solutions

- · The whole catalog for detailed characteristics and selection guides
- The CAD files to help design your installation, available in over 20 different file formats
- · All software and firmware to maintain your installation up to date
- A large quantity of White Papers, Environment documents, Application solutions, Specifications... to gain a
 better understanding of our electrical systems and equipment or automation
- And finally all the User Guides related to your drive, listed below:

Title of Documentation	Reference Number
ATV320 Getting Started	NVE21763 (English), NVE21771 (French), NVE21772 (German), NVE21773 (Spanish), NVE21774 (Italian), NVE21776 (Chinese)
ATV320 Getting Started Annex (SCCR)	NVE21777 (English)
ATV320 Installation manual	NVE41289 (English), NVE41290 (French), NVE41291 (German), NVE41292 (Spanish), NVE41293 (Italian), NVE41294 (Chinese)
ATV320 Programming manual	NVE41295 (English), NVE41296 (French), NVE41297 (German), NVE41298 (Spanish), NVE41299 (Italian), NVE41300 (Chinese)
ATV320 Modbus Serial Link manual	NVE41308 (English)
ATV320 Ethernet IP/Modbus TCP manual	NVE41313 (English)
ATV320 PROFIBUS DP manual (VW3A3607)	NVE41310 (English)
ATV320 DeviceNet manual (VW3A3609)	NVE41314 (English)
ATV320 CANopen manual (VW3A3608, 618, 628)	NVE41309 (English)
ATV320 EtherCAT manual (VW3A3601)	NVE41315 (English)
ATV320 Communication Parameters	NVE41316 (English)
ATV320 Safety Functions manual	NVE50467 (English), NVE50468 (French), NVE50469 (German), NVE50470 (Spanish), NVE50472 (Italian), NVE50473 (Chinese)

You can download these technical publications and other technical information from our website at http://download.schneider-electric.com

Terminology

The technical terms, terminology, and the corresponding descriptions in this manual normally use the terms or definitions in the relevant standards.

In the area of drive systems this includes, but is not limited to, terms such as **error**, **error message**, **failure**, **fault, fault reset**, **protection**, **safe state**, **safety function**, **warning, warning message**, and so on.

Among others, these standards include:

- IEC 61800 series: Adjustable speed electrical power drive systems
- IEC 61508 Ed.2 series: Functional safety of electrical/electronic/programmable electronic safety-related
- EN 954-1 Safety of machinery Safety related parts of control systems
- EN ISO 13849-1 & 2 Safety of machinery Safety related parts of control systems.
- IEC 61158 series: Industrial communication networks Fieldbus specifications
- IEC 61784 series: Industrial communication networks Profiles
- · IEC 60204-1: Safety of machinery Electrical equipment of machines Part 1: General requirements

In addition, the term **zone of operation** is used in conjunction with the description of specific hazards, and is defined as it is for a **hazard zone** or **danger zone** in the EC Machinery Directive (2006/42/EC) and in ISO 12100-1.

Also see the glossary at the end of this manual.

General Overview



What's in this Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
1	Overview	<u>17</u>
2	Setup	<u>37</u>

Overview



What's in this Chapter?

This chapter contains the following topics:

Торіс	Page
Factory configuration	<u>18</u>
Application functions	<u>19</u>
Basic functions	<u>23</u>
Graphic display terminal option	<u>24</u>
Graphic display terminal option	<u>24</u>
Powering up the drive for the first time	<u>27</u>
Remote display terminal option	<u>30</u>
Structure of the parameter tables	<u>31</u>
Finding a parameter in this document	<u>32</u>
Description of the HMI	<u>33</u>
Structure of the menus	<u>35</u>

Factory configuration

Factory settings

The Altivar 320 is factory-set for common operating conditions:

- Display: drive ready [Ready] (¬ ¬ ¬ ¬ ¬) when motor is ready to run and the output frequency when motor is running.
- The LI3 to LI6 logic inputs, AI2 and AI3 analog inputs, LO1 logic output, AO1 analog output, and R2 relay are unassigned.
- · Stop mode if error is detected: freewheel.

Code	Description	Factory settings values	Page
bFr	[Standard mot. freq]	[50Hz IEC]	<u>86</u>
FCC	[2/3 wire control]	[2 wire] (¿ C): 2-wire control	<u>85</u>
CFF	[Motor control type]	[Standard] (5 E d): standard motor law	<u>105</u>
ACC	[Acceleration]	3.0 seconds	<u>87</u>
d E C	[Deceleration]	3.0 seconds	<u>87</u>
LSP	[Low speed]	0 Hz	<u>87</u>
H 5 P	[High speed]	50 Hz	<u>87</u>
ı E H	[Mot. therm. current]	Nominal motor current (value depending on drive rating)	<u>87</u>
5 d C 1	[Auto DC inj. level 1]	0.7 x nominal drive current, for 0.5 seconds	<u>93</u>
5 F r	[Switching freq.]	4 kHz	94
Frd	[Forward]	[LI1] (L , I): Logic input LI1	<u>126</u>
rr5	[Reverse assign.]	[LI2] (L , 2): Logic input LI2	<u>126</u>
FrI	[Ref.1 channel]	[Al1] (F , I): Analog input Al1	<u>154</u>
r 1	[R1 Assignment]	[No drive flt] (F L E): The contact opens when a fault is detected or when the drive has been switched off	<u>138</u>
br A	[Dec ramp adapt.]	[Yes] (YE5): Function active (automatic adaptation of deceleration ramp)	<u>172</u>
Atr	[Automatic restart]	[No] (na): Function inactive	252
5 <i>E E</i>	[Type of stop]	[Ramp stop] (¬ П P): On ramp	<u>173</u>
C F G	[Macro configuration]	[Start/Stop] (5 £ 5)	<u>82</u>

Note: If you want to keep the drive presettings to a minimum, select the macro configuration [Macro configuration] ($\mathcal{L} F \mathcal{L}$) = [Start/stop] ($\mathcal{L} F \mathcal{L}$) followed by [Restore config.] ($\mathcal{L} F \mathcal{L}$) = [Config. CFG] ($\mathcal{L} F \mathcal{L}$). For more information, see page 82.

Check whether the values above are compatible with the application.

Application functions

The tables on the following pages show the combinations of functions and applications, in order to guide your selection.

The applications in these tables relate to the following machines, in particular:

- Hoisting: cranes, overhead cranes, gantries (vertical hoisting, translation, slewing), lifting platforms
- Handling: palletizers/depalletizers, conveyors, roller tables
- Packing: carton packers, labeling machines
- Textiles: weaving looms, carding frames, washing machines, spinners, drawing frames
- · Wood: automatic lathes, saws, milling
- Process

Each machine has its own special features, and the combinations listed here are neither mandatory nor exhaustive.

Some functions are designed specifically for a particular application. In this case, the application is identified by a tab in the margin on the relevant programming pages.

Motor control functions

Functions	Page	Applications					
		Hoisting	Handling	Packing	Textiles	Wood	Process
V/f ratio	<u>105</u>						
Sensorless flux vector control	<u>105</u>						
2-point vector control	<u>105</u>						
Open-loop synchronous motor	<u>105</u>						
Output frequency up to 599 Hz	<u>105</u>						
Motor overvoltage limiting	<u>120</u>						
DC bus connection (see Installation manual)	-						
Motor fluxing using a logic input	<u>189</u>						
Switching frequency of up to 16 kHz	94						
Auto-tuning	<u>87</u>						

Functions on speed references

Functions	Page	Appli	Applications						
		Hoisting	Handling	Packing	Textiles	Wood	Process		
Differential bipolar reference	129								
Reference delinearization (magnifying glass effect)	<u>131</u>								
Frequency control input	<u>154</u>								
Reference switching	<u>167</u>								
Reference summing	<u>168</u>								
Reference subtraction	<u>168</u>								
Reference multiplication	<u>168</u>								
Adjustable profile ramp	170								
Jog operation	<u>178</u>								
Preset speeds	180								
+ speed / - speed using single action pushbuttons (1 step)	<u>184</u>								
+ speed / - speed using double action pushbuttons (2 steps)	<u>184</u>								
+/- speed around a reference	<u>187</u>								
Save reference	188								

Application-Specific functions

Functions	Page	Applic	cations				
		Hoisting	Handling	Packing	Textiles	Wood	Process
Fast stop	<u>173</u>						
Brake control	<u>191</u>						
Load measurement	<u>199</u>						
High-speed hoisting	<u>201</u>						
Rope slack	<u>204</u>						
PID regulator	<u>206</u>						
Motor/generator torque limit	<u>215</u>						
Load sharing	<u>122</u>						
Line contactor control	<u>220</u>						
Output contactor control	223						
Positioning by limit switches or sensors	224						
Stop at distance calculated after deceleration limit switch	226						
Parameter switching	229						
Motor or configuration switching	232						
Traverse control	237						
Stop configuration	<u>173</u>						

Safety functions/Fault management

Functions	Page	Applications					
		Hoisting	Handling	Packing	Textiles	Wood	Process
Safe Torque Off (STO) (Safety function, see dedicated document)	-						
Deferred stop on thermal alarm	<u>258</u>						
Alarm handling	145						
Fault management	<u>250</u>						
IGBT tests	<u>260</u>						
Catch a spinning load	<u>253</u>						
Motor protection with PTC probes	<u>250</u>						
Undervoltage management	<u>259</u>						
4-20 mA loss	<u>260</u>						
Uncontrolled output cut (output phase loss)	<u>256</u>						
Automatic restart	<u>252</u>						
Use of the "Pulse input" input to measure the speed of rotation of the motor	<u>265</u>						
Load variation detection	<u>267</u>						
Underload detection	270						
Overload detection	<u>272</u>						
Safety Integrated functions (see related documents page 12)						

Basic functions


Drive ventilation

The fan starts automatically when the drive thermal state reaches 70% of the maximum thermal state and if the **[Fan Mode]** ($FF\Pi$) is set to **[Standard]** (5Ed).

Graphic display terminal option

Description of the graphic display terminal

With the graphic display terminal, which works with FLASH V1.1IE26 or higher, it is possible to display more detailed information than can be shown on the integrated display terminal.

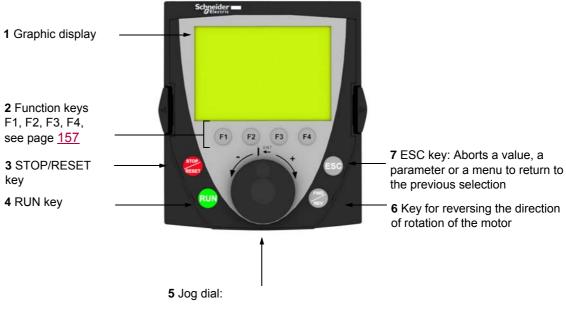

- Press (ENT):

 - To save the current value
 - To enter the selected menu or parameter
- Turn +/-:
 - To increment or decrement a value
 - To go to the next or previous line
 - To increase or decrease the reference if control via the graphic display terminal is activated

Note: Keys 3, 4, 5 and 6 can be used to control the drive directly, if control via the graphic display terminal is activated.

To activate the keys on the remote display terminal, you first have to configure [Ref.1 channel] ($F \cap I$) = [HMI] ($L \cap I$). For more information, see page 154.

Example configuration windows:


Single selection



When powering up the graphic display terminal for the first time, the user has to select the required language.


When only one selection is possible, the selection made is indicated by $\ensuremath{\checkmark}$. Example: Only one language can be chosen.

Multiple selection

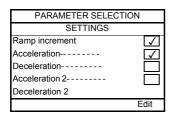


When multiple selection is possible, the selections made are indicated by \checkmark . Example: A number of parameters can be chosen to form the [USER MENU].

Example configuration window for one value:

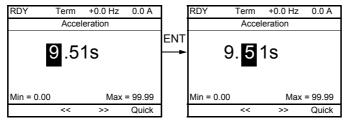

The << and >> arrows (keys F2 and F3) are used to select the digit to be modified, and the jog dial is rotated to increase or decrease this number.

Example visualization of function blocks state:

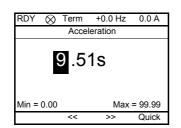


OFF light: A valid function blocks program is in the ATV320 in stop mode.


ON light: A valid function blocks program is in the ATV320 in run mode. The drive is considered as being in running state and configuration parameters cannot be modified.

Powering up the drive with Graphic display terminal for the first time


When powering up the graphic display terminal for the first time, the user has to select the required language.

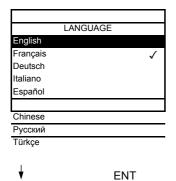

Display after the graphic display terminal has been powered up for the first time. Select the language and press ENT.

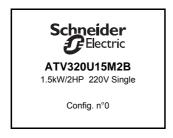


The drive's rating details will now appear.

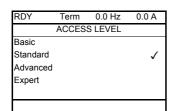


3 seconds

♦ ENT

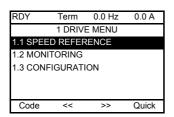


Powering up the drive for the first time

With the integrated display terminal, when powering up the drive for the first time, the user immediately accesses to [Standard mot. freq] (b F r) (see page 86) in the menu (COnF > FULL > SIM).

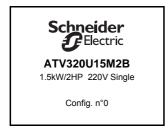


Display after the drive has been powered up for the first time.

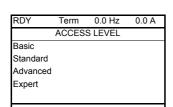

3 seconds

ENT

The [ACCESS LEVEL] screen follows automatically.

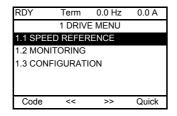

Automatically switches to the [1 ${\tt DRIVE\ MENU}]$ menu after 3 seconds. Select the menu and press ENT.




1 DRIVE MENU
2 IDENTIFICATION
3 INTERFACE
4 OPEN / SAVE AS
5 PASSWORD


The MAIN MENU appears on the graphic display terminal if you press the ESC key.

Subsequent power-ups

With the integrated display terminal, at subsequent power-ups of the drive for the first time, the user immediately accesses to the drive state (Same liste than [Drive state] (H 5 I) page 65). Example: Ready (rdY).

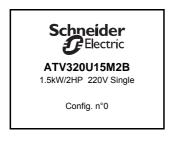



Display after powering up.

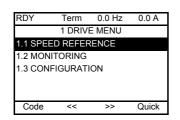

3 seconds

Automatically switches to the [1 DRIVE MENU] menu after 3 seconds. Select the menu and press ENT.

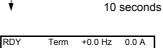

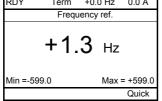


Automatically switches to the monitoring screen after 10 seconds.

Identification menu

The [IDENTIFICATION] (a , d -) menu can only be accessed on the graphic display terminal.

This is a read-only menu that cannot be configured. It enables the following information to be displayed:


- · Drive reference, power rating and voltage
- · Drive software version
- · Drive serial number
- · Safety function status and checksum
- · Function blocks program and catalogue version
- Type of options present, with their software version
- · Graphic display terminal type and version

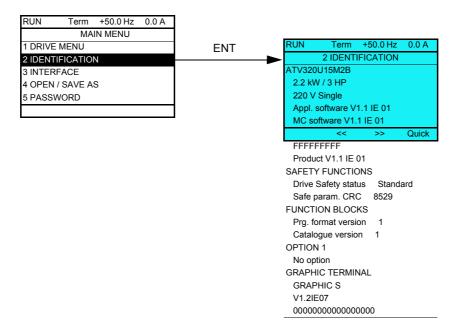

Remote display terminal option

Description of the remote display terminal


This remote display terminal is a local control unit which can be mounted on the door of the wall-mounted or floor-standing enclosure. It has a cable with connectors, which is connected to the drive serial link (see the documentation supplied with the remote display terminal). With this remote display terminal, up and down arrows are used for navigation rather than a jog dial.

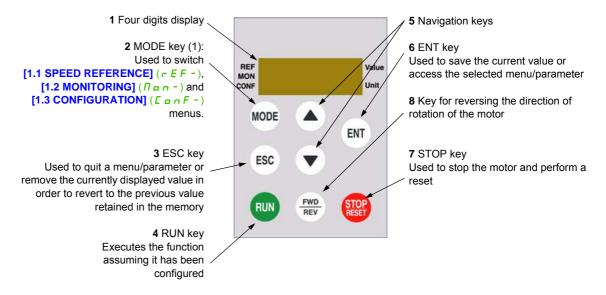

To activate the keys on the remote display terminal, you first have to configure [Ref.1 channel] (F r I) = [HMI] ($L \Gamma \Gamma$). For more information, see page $\underline{154}$.

Structure of the parameter tables

The parameter tables contained in the descriptions of the various menus are organized as follows. Example:

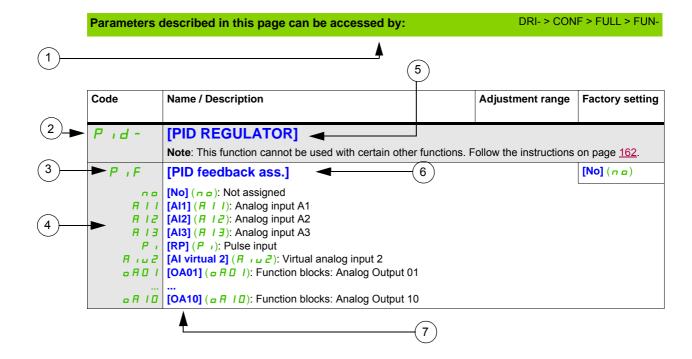

- 1. Way to access the parameters described in this page
- 2. Submenu code on 4-digit 7-segment display
- 3. Parameter code on 4-digit 7-segment display
- 4. Parameter value on 4-digit 7-segment display
- 5. Name of submenu on graphic display terminal
- 6. Name of parameter on graphic display terminal
- 7. Value of parameter on graphic display terminal

Note: The text in square brackets [] indicates what you will see on the graphic display terminal.

A menu followed by the mention "(continued)" appears sometimes to locate you in the structure. Example:

Fun-	[APPLICATION FUNCT.] (continued)		
Pid-	[PID REGULATOR]		
	Note : This function cannot be used with certain other functions. Follow the instructions on page <u>162</u> .		

In this case, the mention "(continued)" indicates that the [APPLICATION FUNCT.] submenu is above the [PID REGULATOR] submenu in the structure.

A parameter can contain some pictograms. Each pictogram has its legend at the end of the table. Main mictograms:



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.




To change the assignment of this parameter, press the ENT key for 2 s.

Finding a parameter in this document

The following assistance with finding explanations on a parameter is provided:

- With the integrated display terminal and the remote display terminal: Direct use of the parameter code index, page 321, to find the page giving details of the displayed parameter.
- With the graphic display terminal: Select the required parameter and press F1 (F1): [Code]. The parameter code is displayed instead of its name while the key is held down.

Example: ACC

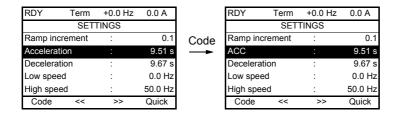


• Then use the parameter code index, page 321, to find the page giving details of the displayed parameter.

Description of the HMI

Functions of the Display and the Keys

- 1 The ESC key is used for menu navigation (backward) and parameters adjustment (cancel)
- **2** The **Jog dial** is used for menu navigation (up or down) and parameters adjustment (increase/decrease value or element choice). It can be used as Virtual analogic input 1 for drive frequency reference.
- **3** The **ENT** key (push on the Jog dial) is used for menu navigation (forward) and parameters adjustment (validate)

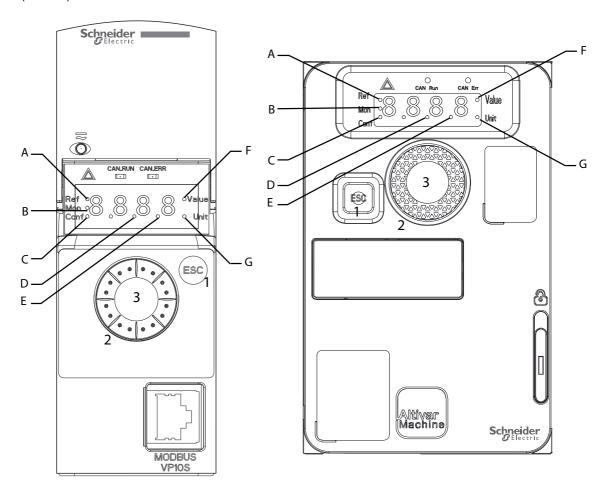

Α	REF mode selected (r E F -)	Е	Dot used to display parameter value (1/10 unit)
В	MON mode selected (F	Current display is parameter value
С	CONF mode selected ([a n F)	G	Current display is parameter unit
D	Dot used to display parameter value (1/100 unit)		

Normal display, with no error code displayed and no startup:

Displays the parameter selected in the [1.2 MONITORING] ($\Pi \circ \Gamma$ -) menu (default: [Frequency ref.] ($\Gamma \cap H$)).


- Initialization sequence (only on remote display terminal)
- Łun: AutoTuning
- d [b: Injection braking
- r d y: Drive ready
- n 5 L: Freewheel stop control
- [L : Current limit
- F 5 L: Fast stop
- F L u: Fluxing function is activated
- n L P: Control is powered on but the DC bus is not loaded

• [L L : Controlled stop

- br: Adapted deceleration
- 5 a [: Stand by output cut
- u 5 A: Undervoltage alarm
- 55 /: Safety function SS1
- 5 L 5: Safety function SLS
- 5 L a: Safety function STO

In the event of a detected error, the display will flash to notify the user accordingly. If a graphic display terminal is connected, the name of the detected error will be displayed.

Structure of the menus

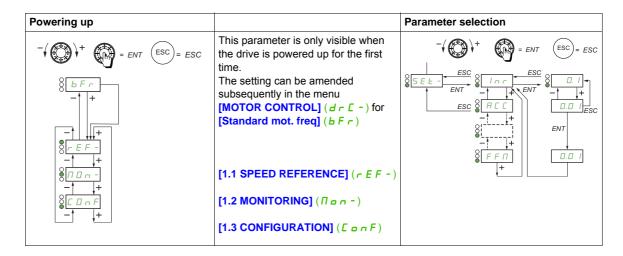

On the 7-segment display, a dash after menu and submenu codes is used to differentiate them from parameter codes.

Example: [APPLICATION FUNCT.] (F u n -) menu, [Acceleration] (R [[]) parameter

Selection of multiple assignments for one parameter

Example: List of group 1 alarms in [INPUTS / OUTPUTS CFG] (, _ a -) menu

A number of alarms can be selected by "checking" them as follows.

The digit on the right indicates:



The same principle is used for all multiple selections.

Setup

2

What's in this Chapter?

This chapter contains the following topics:

Торіс	Page
Steps for setting-up the drive	<u>38</u>
Initial steps	<u>39</u>

Steps for setting-up the drive

INSTALLATION

1. Please refer to the installation manual.





PROGRAMMING

2. Apply input power to the drive, but do not give a run command.

3. Configure:

- The nominal frequency of the motor
 [Standard mot. freq] (b F r) page 86 if this is not 50 Hz.
- The motor parameters in the [MOTOR CONTROL] (d r [-)
 menu, page 105, only if the factory configuration of the drive is
 not suitable.

Tips:

- Before beginning programming, complete the customer setting tables, page <u>321</u>.
- Use the [Restore config.] (F [5) parameter, page 81, to return to the factory settings at any time.
- To locate the description of a function quickly, use the index of functions page 319.
- Before configuring a function, read carefully the "Function compatibility" section page 165.

Note: The following operations must be performed for optimum drive performance in terms of accuracy and response time:

- Enter the values indicated on the motor rating plate in the [MOTOR CONTROL] (d r [-) menu, page 105.
- Perform auto-tuning with the motor cold and connected using the [Auto-tuning] (L u n) parameter, page 87.
- 4. In the [SETTINGS] (5 E & -) menu, adjust the following parameters:
- [Acceleration] (A □ □), page 87 and [Deceleration] (d □ □), page 87.
- [Low speed] (L 5 P), page 87 and [High speed] (H 5 P), page 89.
- [Mot. therm. current] (, L H), page 87.
- 5. Start the drive.

Initial steps

If the drive was not connected to mains for an extended period of time, the capacitors must be restored to their full performance before the motor is started.

NOTICE

REDUCED CAPACITOR PERFORMANCE

- Apply mains voltage to the drive for one hour before starting the motor if the drive has not been connected to mains for the following periods of time:
 - 12 months at a maximum storage temperature of +50°C (+122°F).
 - 24 months at a maximum storage temperature of +45°C (+113°F)
 - 36 months at a maximum storage temperature of +40°C (+104°F).
- Verify that no Run command can be applied before the period of one hour has elapsed.
- Verify the date of manufacture if the drive is commissioned for the first time and run the specified procedure if the date of manufacture is more than 12 months in the past.

Failure to follow these instructions can result in equipment damage.

If the specified procedure cannot be performed without a Run command because of internal mains contactor control, perform this procedure with the power stage enabled, but the motor being at a standstill so that there is no appreciable mains current in the capacitors.

Before powering up the drive

▲ WARNING

UNANTICIPATED EQUIPMENT OPERATION

Before switching on the device, verify that no unintended signals can be applied to the digital inputs that could cause unintended movements.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Drive locked

If a Run command such as Run forward, Run reverse, DC injection is still active during:

- I A product reset to the factory settings,
- I A manual "Fault Reset" using [Fault Reset] (r 5 F),
- I A manual "Fault reset" by applying a product switched off and on again,
- I A stop command given by a channel that is not the active channel command (such as Stop key of the display terminal in 2/3 wires control).

The drive is in a blocking state and displays [Freewheel stop] (n 5 L). It will be necessary to deactivate all active Run commands prior to authorizing a new Run command.

Mains contactor

NOTICE

RISK OF DAMAGE TO THE DRIVE

Do not switch on the drive at intervals of less than 60 s.

Failure to follow these instructions can result in equipment damage.

Using a motor with a lower rating or dispensing with a motor altogether

With the factory settings, motor output phase loss detection is active ([Output Phase Loss] ($_{\square}PL$) = [Yes] ($_{\square}E5$), page 256). To avoid having to use a motor with the same rating as the drive when testing the drive or during a maintenance phase, deactivate the motor output phase loss detection ([Output Phase Loss] ($_{\square}PL$) = [No] ($_{\square}D$)). This can prove particularly useful if very large drives are being tested with a small motor.

Set [Motor control type] ($\mathcal{L} + \mathcal{L}$), page $\underline{105}$, to [Standard] ($\underline{5} + \mathcal{L}$) in [Motor control menu] ($\mathcal{L} - \mathcal{L}$).

NOTICE

MOTOR OVERHEATING

Install external thermal monitoring equipment under the following conditions:

- If a motor with a nominal current of less than 20% of the nominal current of the drive is connected.
- If you use the function Motor Switching.

Failure to follow these instructions can result in equipment damage.

A A DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

If output phase monitoring is disabled, phase loss and, by implication, accidental disconnection of cables, are not detected.

· Verify that the setting of this parameter does not result in unsafe conditions.

Failure to follow these instructions will result in death or serious injury.

Programming



What's in this Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
4	Reference Mode (rEF)	<u>43</u>
5	Monitoring Mode (MOn)	<u>47</u>
6	Configuration Mode (ConF)	<u>77</u>
7	Interface (ItF)	<u>279</u>
8	Open / Save as (trA)	<u>295</u>
9	Password (COd)	<u>299</u>
10	Multipoint Screen	<u>301</u>

Incorrect wiring, unsuitable settings or unsuitable data may trigger unanticipated movements, trigger signals or damage parts and disable monitoring functions.

AWARNING

UNANTICIPATED EQUIPMENT OPERATION

- Do not operate the drive system with unknown settings or data.
- Never modify a parameter unless you fully understand the parameter and all effects of the modification.
- When commissioning the product, carefully run tests for all operating states and potential error situations.
- Verify that a functioning emergency stop push-button is within reach of all persons involved in running tests.
- Verify the functions after replacing the product and also after making changes to the settings or data.
- Anticipate movements in unintended directions or oscillation of the motor.
- Only operate the system if there are no persons or obstructions in the zone of operation.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

If the power stage is disabled unintentionally, for example as a result of power outage, errors or functions, the motor is no longer decelerated in a controlled way.

▲ WARNING

MOVEMENT WITHOUT BRAKING EFFECT

Verify that movements without braking effect cannot cause injuries or equipment damage

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Reference Mode (rEF)

What's in this Chapter?

This chapter contains the following topics:

Торіс	Page
Introduction	<u>44</u>
Organization tree	<u>45</u>
Menu	<u>46</u>

Introduction

Use the reference mode to monitor and, if the reference channel is the analog input 1 ([Ref.1 channel] (Fr l) page 154 set to [Al virtual 1] (Fr l)), adjust the actual reference value by modifying the analog input voltage value.

If local control is enabled ([Ref.1 channel] (F r I) page $\underline{154}$ set to [HMI] (L L L), the jog dial on the remote display terminal or the Up/Down Navigation keys on the remote display terminal acts as a potentiometer to change the reference value up and down within the limits preset by other parameters ([Low speed] (L L L L) or [High speed] (L L L L L).

There is no need to press the ENT key to confirm the change of the reference.

Organization tree


(1) Depending on the active reference channel

Possible values:

(F ' u ' l) (L F r) (N F r) (r P ' l) (F r H) (r P C)

(2) 2 s or ESC

Displayed parameter value and unit of the diagram are given as examples.

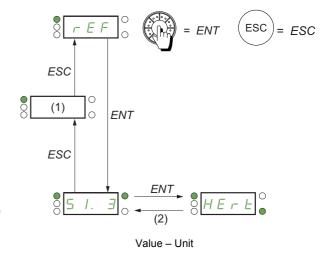

DRI- > REF-

Menu

Code	Name / Description	Adjustment range	Factory setting
dr i-	[1 DRIVE MENU]		,
rEF-	[1.1 SPEED REFERENCE]		
	Displayed parameters depend on drive settings.		
A iu l	[Image input AIV1]	0 to 100% of HSP-LSP	0%
*	First virtual AI value.		
()	This parameter allows to modify the frequency reference with the embedded jog of	lial.	
(1)			
LFr	[HMI Frequency ref.]	-599 to +599 Hz	0 Hz
*	HMI frequency reference (signed value).		
()	This parameter allows to modify the frequency reference with the remote HMI.		
(1)			
ПЕг	[Multiplying coeff.]	0 to 100%	100%
*	Multiply frequency variable. Multiplying coefficient, can be accessed if [Multiplier ref] (\(\Pi \ P \ \Pi \ P \ \)) page \(\frac{16}{2} \)	69 has been assigned to t	he graphic terminal
()			
rP i	[Internal PID ref.]	0 to 32,767	150
*	PID: Internal reference PI.		
()	This parameter allows to modify the PID internal reference with the jog dial. Internal PID reference is visible if [PID feedback] (P , F) is not set to [No] (n).		
(1)			
FrH	[Frequency ref.]	-599 to +599 Hz	-
*	Frequency reference before ramp (signed value). Actual frequency reference applied to the motor regardless of which reference charead-only mode. Frequency reference is visible if the command channel is not HMI or virtual AI.	nnel has been selected. T	This parameter is ir
rPC	[PID reference]	0 to 65,535	-
*	PID: Setpoint value. PID reference is visible if [PID feedback] (P , F) is not set to [No] (n p).		1

(1) It is not necessary to press the ENT key to confirm the modification of the reference.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

Monitoring Mode (MOn)



What's in this Chapter?

This chapter contains the following topics:

Торіс	Page
Introduction	<u>48</u>
Organization tree	<u>49</u>
Menu	<u>50</u>

Introduction

The parameters can be accessed when the drive is running or stopped.

Some functions have numerous parameters. In order to clarify programming and avoid having to scroll through endless parameters, these functions have been grouped in submenus. Like menus, submenus are identified by a dash after their code.

When the drive is running, the value displayed is one of the monitoring parameters. By default, the value displayed is the input frequency reference ([Frequency ref.] ($F \cap H$) parameter page 50).

While the value of the new monitoring parameter required is being displayed, press a second time on the jog dial key to display the units or press and hold down the jog dial (ENT) again (for 2 seconds) to confirm the change of monitoring parameter and store it. From then on, it is the value of this parameter that will be displayed during operation (even after powering down).

Unless the new choice is confirmed by pressing and holding down ENT again, the display will revert to the previous parameter after powering down.


Note: After the drive has been turned off or following a loss of supply mains, the parameter displayed is the drive status (example: [Ready] (r d y)). The selected parameter is displayed following a run command.

Organization tree

Displayed parameters of the diagram are given as examples.

○ ☐ ☐ ☐ ○ Values - ○ units

(1) Visible only with graphic display terminal

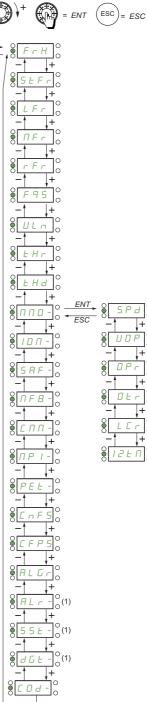

DRI- > MON-

Menu

Code	Name / Description	Unit
Поп-	[1.2 MONITORING]	
Aiul	[Image input AIV1]	%
()	First virtual Al value. This parameter is read-only. It enables you to display the speed reference applied to the motor.	
FrH	[Frequency ref.]	Hz
	Frequency reference before ramp (signed value). This parameter is read-only. It enables you to display the speed reference applied to the motor, regardless of channel has been selected.	which reference
5 Ł F r	[Stator Frequency]	Hz
	Displays the estimated stator frequency in Hz (signed value)	
LFr	[HMI Frequency ref.]	Hz
	HMI frequency reference (signed value). This parameter only appears if the function has been enabled. It is used to change the speed reference from ENT does not have to be pressed to enable a change of reference.	the remote control.
ПЕг	[Multiplying coeff.]	%
*	Multiply frequency variable. Multiplying coefficient, can be accessed if [Multiplier ref] (
ППЕ	[Measured output fr.]	Hz
	Measured motor frequency (signed value) The measured motor speed is displayed if the speed monitoring card has been inserted. (VW3A3620)	
rFr	[Output frequency]	Hz
	Estimated motor frequency (signed value).	
F 9 5	[Pulse in. work. freq.]	Hz
*	Measured frequency of the "Pulse input" input (see page 265).	
шLп	[Mains voltage]	V
	Main voltage (from DC bus). Mains voltage based on DC bus measurement, motor running or stopped.	
E H r	[Motor thermal state]	%
	Motor thermal state. 100% = Nominal thermal state, 118% = "OLF" threshold (motor overload).	
E H d	[Drv.thermal state]	%
	Drive thermal state. 100% = Nominal thermal state, 118% = "OHF" threshold (drive overload).	
ППо-	[MONIT. MOTOR]	
5 P d	[Motor speed]	rpm
	Motor speed in rpm. (Estimated value)	
u o P	[Motor voltage]	V
	Motor voltage. (Estimated value)	
o P r	[Motor power]	%
	Output power monitoring (100% = nominal motor power, estimated value based on current measure).	
otr	[Motor torque]	%
	Output torque value (100% = nominal motor torque, estimated value based on current measure).	
LEr	[Motor current]	Α
	Estimated motor current. (Value measured)	

DRI- > MON- > IOM- > LIA-

Code	Name / Description	Unit
Поп-	[1.2 MONITORING] (continued)	
ПП	[MONIT. MOTOR]	
12 F N	[l²t overload level]	%
	Monitoring of I²t overload level This parameter can be accessed if [I²t model activation] (,	
ιοΠ-	[I/O MAP]	
L IA-	[LOGIC INPUT CONF.] Logic input functions.	
Liff	[LI1 assignment] Read-only parameters, cannot be configured. It displays all the functions that are assigned to the logic input in order to check for multiple assignments. If no functions have been assigned, [No] (na) is displayed. Use the jog dial to scroll through the functions. The use of graphic display terminal allows to see the delay [LI1 On Delay] (L I d). Possible values are the sa configuration menu page 127.	me than in
L 2 A to L B A L A I A L A 2 A	[L assignment] All the logic inputs available on the drive are processed as in the example for LI1 above.	
L , 5 I	[State of logic inputs LI1 to LI6] Can be used to visualize the state of logic inputs LI1 to LI6 (display segment assignment: high = 1, low = 0). State 1 State 0 LI1 LI2 LI3 LI4 LI5 LI6	
	Example above: LI1 and LI6 are at 1; LI2 to LI5 are at 0.	
L 152	[State of Safe Torque Off] Can be used to visualize the state of LA1, LA2 and STO (Safe Torque Off) (display segment assignment: high	= 1, low = 0).
	State 1 r	
	Example above: LA1 and LA2 are at 0; STO (Safe Torque Off) is at 1.	

DRI- > MON- > IOM- > AIA-

Code	Name / Description	Unit
A ,A-	[ANALOG INPUTS IMAGE]	
	Analog input functions.	
A , IC	[AI1]	V
	Al1 customer image: Value of analog input 1.	
AIIA	[Al1 assignment]	
	All functions assignment. If no functions have been assigned, [No] (n a) is displayed. Following parameters are visible on the graphic display terminal by pressing the ENT key on the parameter.	
 Fr I Fr 2 P 1 E A A P 1 S A 3 Fr I b A A 3 FL a C N A 3 PE 5 1 A 0 I	Ref.1 channel] (F r l): Reference source 1 [Ref.2 channel] (F r 2): Reference source 2 [Summing ref. 2] (5 R 2): Summing reference 2 [PID feedback] (P r F): PI feedback (PI control) [Torque limitation] (L R R): Torque limitation: Activation by an analog value [Subtract. ref. 2] (L R 2): Subtracting reference 2 [Manual PID ref.] (P r n): Manual speed reference of the PI(D) regulator (auto-man) [PID speed ref.] (F P r): Speed reference of the PI(D) regulator (predictive reference) [Summing ref. 3] (5 R 3): Summing reference 3 [Ref.1B channel] (F r lb): Reference source 1B [Subtract. ref. 3] (L R 3): Subtracting reference 3 [Forced local] (F L L C): Forced local reference source [Ref. 2 multiplier] (R R 2): Multiplying reference 2 [Ref. 3 multiplier] (R R 3): Multiplying reference 3 [Weight input] (P E 5): External weight measurement function [IA01] (R R D I): Functions blocks: Analog Input 01	
, A 10	[IA10] (, R I D): Functions blocks: Analog Input 10	
u iL l	[Al1 min value]	V
	Voltage scaling parameter of 0%.	
ו או ט H I	[Al1 max value]	V
	Voltage scaling parameter of 100%.	
A , IF	[Al1 filter]	s
	Interference filtering cut-off time of the low-filter.	
ALA-	[ANALOG INPUTS IMAGE] (continued)	
	Analog input functions.	
A . 2 C	[AI2]	V
	Al2 customer image: Value of analog input 2.	
A .2A	[Al2 assignment]	
	Al2 functions assignment. If no functions have been assigned, [No] (no) is displayed. Following parameters are visible on the graphic display terminal by pressing the ENT key on the parameter.	
	Identical to [Al1 assignment] (A , IA) page 52.	
u 1L2	[Al2 min value]	V
	Voltage scaling parameter of 0%.	
H2	[Al2 max value]	V
	Voltage scaling parameter of 100%.	
A , 2 F	[Al2 filter]	s
11 121	Interference filtering cutoff time of the low-filter.	
	The forest the line of the low-line.	

DRI- > MON- > IOM- > AIA- > AI3C

Code	Name / Description	Unit
A IA-	[ANALOG INPUTS IMAGE] (continued)	
	Analog input functions.	
A .3C	[AI3]	V
	Al3 customer image: Value of analog input 3.	
A .3A	[Al3 assignment]	
	Al3 functions assignment. If no functions have been assigned, [No] (n a) is displayed. Following parameters are visible on the graphic display terminal by pressing the ENT key on the parameter.	
	Pollowing parameters are visible on the graphic display terminal by pressing the ENT key on the parameter.	
	Identical to [Al1 assignment] (# , I#) page 52.	
[rL3	[Al3 min value]	mA
	Current scaling parameter of 0%.	
CrH3	[Al3 max value]	mA
	Current scaling parameter of 100%.	
A .3F	[Al3 filter]	S
	Interference filtering cutoff time of the low-filter.	
то П -	[I/O MAP] (continued)	
A - A -	[ANALOG OUTPUTS IMAGE]	
	Analog output functions. Following parameters are visible on the graphic display terminal by pressing the ENT key on the parameter.	
A o I C	[AO1C]	
()	AO1 customer image: Value of analog output 1.	
Ro I	[AO1 assignment]	
	AO1 functions assignment. If no functions have been assigned, [No] (n a) is displayed.	
	Identical to [AO1 assignment] (# 🗸) page 144.	
uoL I	[AO1 min Output]	V
*	Voltage scaling parameter of 0%. Can be accessed if [AO1 Type] ($R = IE$) is set to [Voltage] ($I = IE$).	
		1,7
uoH I	[AO1 max Output]	V
*	Voltage scaling parameter of 100%. Can be accessed if [AO1 Type] (# a I L) is set to [Voltage] (I D u).	
Roll	[AO1 min output]	mA
*	Current scaling parameter of 0%. Can be accessed if [AO1 Type] (# a / E) is set to [Current] (# A).	-
R _o H I	[AO1 max output]	mA
*	Current scaling parameter of 100%. Can be accessed if [AO1 Type] (# a IE) is set to [Current] (# A).	
ASL I	[Scaling AO1 max]	%
	Minimum scaling value for AO1.	1
ASH I	[Scaling AO1 min]	%
	Maximum scaling value for AO1.	
Ao IF	[AO1 filter]	s
	Cutoff time of the low-filter.	

DRI- > MON- > IOM- > FSI-

Code	Name / Description	Unit
, оП -	[I/O MAP] (continued)	
F5 :-	[FREQ. SIGNAL IMAGE]	
	Frequency signal image. This menu is visible only on graphic display terminal.	
PFr[[RP input]	Hz
	Filtered customer pulse input frequency reference. Following parameters are visible on the graphic display terminal by pressing the ENT key on the parameter.	
PiA	[RP assignment]	
	Pulse input assignment. If no functions have been assigned, [No] (n a) is displayed.	
	Identical to [Al1 assignment] (A , IA) page 52.	
PiL	[RP min value]	kHz
	RP minimum value. Pulse input scaling parameter of 0%.	
PFr	[RP max value]	kHz
	RP maximum value Pulse input scaling parameter of 100%.	
PF i	[RP filter]	ms
	Interference filtering pulse input cutoff time of the low-filter.	
Non-	[1.2 MONITORING] (continued)	
5 A F -	[MONIT. SAFETY]	
	For more details on Integrated Safety Functions, please refer to dedicated Safety manual.	
5 t o 5	[STO status]	
	Status of the Safe Torque Off safety function.	
idLE	[Idle] (, d L E): STO not in progress	
5 t o	[Safe stop] (5 L a): STO in progress [Fault] (F L L): STO error detected	
5 L 5 S	[SLS status]	
3233	Status of the Safely-limited speed safety function.	
	[Not config.] (¬¬¬): SLS not configured	
n a ı d L E	[Idle] (, d L E): SLS not in progress	
WAIL	[SLS wait time] (W FL L): SLS waiting for activation [SLS start] (5 L r L): SLS in transient state	
5 <i>E r E</i> 55 I	[Safe ramp] (5 5 1): SLS ramp in progress	
5 L S	[Spd limited] (5 L 5): SLS speed limitation in progress [Safe stop] (5 L a): SLS safe torque off request in progress	
5 t o F L t	[Fault] (F L L): SLS error detected	
55 15	[SS1 status]	
	Status of the Safe Stop 1 safety function.	
no	[Not config.] (
ıdLE 55 I	[Idle] (, d L E): SS1 not in progress [Safe ramp] (5 5 1): SS1 ramp in progress	
5 E o		
	[Fault] (F L E): SS1 error detected	
5 N S S	[SMS status]	
	Status of the Safe Maximum Speed safety function.	
0.0	[Not Set] (n a): SMS not set	
o F F F E i	[Active] (¬ F F): SMS active [Internal Err.] (F L 1): SMS internal error	
FŁo	[Max Speed] (F & a): Maximum Speed reached	

DRI- > MON- > SAF-

Code	Name / Description	Unit
GdL5	[GDL status]	
	Status of the Guard Door Locking safety function.	
no	[Not Set] (n p): GDL not set	
o F F	[Inactive] (a F F): GDL inactive	
5 E d	[Short Delay] (5 ½ d): Short Delay In Progress	
LGd	1. 3 3 3 7 (/ 3 3 3 3 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7	
LFE	[Active] (L L d): GDL active [Internal Err.] (L L d): GDL internal error	
SFFE	[Safety fault reg.]	
3772	Safety function error register.	
	Bit0 = 1: Logic inputs debounce time-out (verify value of debounce time LIDT according to the application) Bit1 Reserved Bit2 = 1: Motor speed sign has changed during SS1 ramp Bit3 = 1: Motor speed has reached the frequency limit threshold during SS1 ramp.	
	Bit4: Reserved Bit5: Reserved	
	Bit6 = 1: Motor speed sign has changed during SLS limitation	
	Bit7 = 1: Motor speed has reached the frequency limit threshold during SS1 ramp. Bit8: Reserved	
	Bit9: Reserved	
	Bit10: Reserved	
	Bit11: Reserved Bit12: Reserved	
	Bit13 = 1: Not possible to measure the motor speed (verify the motor wiring connection)	
	Bit 14 = 1: Motor ground short-circuit detected (verify the motor wiring connection)	
	Bit15 = 1: Motor phase to phase short-circuit detected (verify the motor wiring connection)	
Ποη-	[1.2 MONITORING] (continued)	
ПFЬ-	[MONIT. FUN. BLOCKS]	
	For more details on Function Blocks, please refer to dedicated Function Blocks manual.	
FBSE	[FB status]	
	Function Block Status.	
idLE	[Idle] (, d L E): Idle state	
CHEC	[Check prog.] ([H E [): Check program state	
StoP.		
10 1E	[Init] (, p , L): Initialization state [Run] (p u p): RUN state	
Err	[Error] (Error): Error state	
FBFE	[FB fault]	
	Status of the function blocks execution.	
no	[No] (n a): No error detected	
int	[Internal] (, n E): Internal error detected	
b in	[Binary file] (b r n): Binary error detected	
in P PA c	[Intern para.] (, , , P): Internal parameter error detected	
CAL	[Para. RW] (PRr): Parameter access error detected [Calculation] (CRL): Calculation error detected	
E o A u	[TO AUX] (L a R u): TimeOut AUX task	
E o P P	[TO synch] (L o PP): TimeOut in PRE/POST task	
Adl	[Bad ADLC] (Fd L): ADLC with bad parameter [Input assign.] (, r): Input not configured	
FЬ ,-	[FB IDENTIFICATION]	
	-	
БиЕг	[Program version]	
*	Program user version. Can be accessed if [FB status] (F b 5 b) is not set to [Idle] (, d L E).	
b n 5	[Program size]	
*	Program file size. Can be accessed if [FB status] (F b 5 b) is not set to [Idle] (rd b b).	

DRI- > MON- > CMM-

Code	Name / Description	Unit
Ьпи	[Prg. format version] Binary format version of the drive. Can be accessed if [FB status] (F b 5 b) is not set to [Idle] (r d L E).	
ГЕп	[Catalogue version] Catalog version of the drive.	
Поп-	[1.2 MONITORING] (continued)	
ЕПП-	[COMMUNICATION MAP]	
	This menu is visible only on graphic display terminal, except for [COM. SCANNER INPUT MAP]. $(, 5 R, -)$ and MAP]. $(, 5 R, -)$ menus.	[COM SCAN
СПАС	[Command channel] Active command channel.	
EE	[HMI] (HII 1): Graphic display terminal or remote display terminal [Modbus] (II d b): Integrated Modbus [CANopen] (II II II): Integrated CANopen® [+/- speed] (L u d): +/- speed command [Com. card] (II E b): Communication card (if inserted)	
СПА	[Cmd value] DRIVECOM command register value. [Profile] ([H [F]) is not set to [I/O profile] (, p), see page 154.	
	Possible values in CiA402 profile, separate or not separate mode. Bit 0: "Switch on"/Contactor command Bit 1: "Disable voltage"/Authorization to supply AC power Bit 2: "Quick stop"/Emergency stop Bit 3: "Enable operation"/Run command Bit 4 to Bit 6: Reserved (set to 0) Bit 7: "Fault reset"/error acknowledgment active on 0 to 1 rising edge Bit 8: Halt Stop according to the [Type of stop] (5 £ £) parameter without leaving the Operation enabled state Bit 9: Reserved (set to 0) Bit 10: Reserved (set to 0) Bit 11 to Bit 15: Can be assigned to a command Possible values in the I/O profile. On state command [2 wire] (3 £). Bit 0: Forward (on state) command = 0: No forward command = 1: Forward command The assignment of bit 0 cannot be modified. It corresponds to the assignment of the terminals. It can be switche is only active if the channel of this control word is active. Bit 1 to Bit 15: Can be assigned to commands. On edge command [3 wire] (3 £). Bit 0: Stop (run authorization). = 0: Stop = 1: Run is authorized on a forward or reverse command Bit 1: Forward (on 0 to 1 rising edge) command The assignment of bits 0 and 1 cannot be modified. It corresponds to the assignment of the terminals. It can be	d. Bit 0 (🖸 🗗 🖸 🗘
rFCC	([d]]) and 1 ([d]]) are only active if the channel of this control word is active. Bit 2 to Bit 15: Can be assigned to commands [Active ref. channel]	
n E E P 5	[Local] (L o L): Jog dial [HMI] (H II i): Graphic display terminal or remote display terminal [Modbus] (II d b): Integrated Modbus [CANopen] (L II integrated CANopen® [tUd] (L u d): +/- speed command [Com. card] (II E b): Communication card (if inserted) [PC tool] (P 5): PC software	∐- ₇
FrH	[Frequency ref.]	Hz

DRI- > MON- > CMM-

Code	Name / Description	Unit
	Frequency reference before ramp.	
ELA	[ETA state word] DRIVECOM status word.	
	Possible values in CiA402 profile, separate or not separate mode. Bit 0: "Ready to switch on", awaiting power section supply mains Bit 4: "Cuiteback or ", ready."	
	Bit 1: "Switched on", ready Bit 2: "Operation enabled", running Bit 3: "Fault"	
	= 0: No fault = 1: Fault	
	Bit 4: "Voltage enabled", power section supply mains present = 0: Power section supply mains absent = 1: Power section supply mains present	
	When the drive is powered by the power section only, this bit is always at 1. Bit 5: Quick stop/Emergency stop Bit 6: "Switched on disabled" power section gupply mains locked.	
	Bit 6: "Switched on disabled", power section supply mains locked Bit 7: Alarm = 0: No alarm	
	= 1: Alarm Bit 8: Reserved (= 0)	
	Bit 9: Remote: command or reference via the network = 0: Command or reference via the graphic display terminal or the remote display terminal = 1: Command or reference via the network	
	Bit 10: Target reference reached = 0: The reference is not reached	
	= 1: The reference has been reached When the drive is in speed mode, this is the speed reference. Bit 11: "Internal limit active", reference outside limits	
	= 0: The reference is within the limits = 1: The reference is not within the limits	
	When the drive is in speed mode, the limits are defined by the [Low speed] (L 5 P) and [High speed] (H 5 P) Bit 12 and Bit 13: Reserved (= 0) Bit 14: "Stop key", STOP via stop key	parameters.
	= 0: STOP key not pressed = 1: Stop triggered by the STOP key on the graphic display terminal or the remote display terminal	
	Bit 15: "Direction", direction of rotation = 0: Forward rotation at output = 1: Reverse rotation at output	
	The combination of bits 0, 1, 2, 4, 5 and 6 defines the state in the DSP 402 state chart (see the Communication	manuals).
	Possible values in the I/O profile. Note: The value is identical in the CiA402 profile and the I/O profile. In the I/O profile, the description of the value and does not refer to the CiA402 (Drivecom) state chart.	es is simplified
	Bit 0: Reserved (= 0 or 1) Bit 1: Ready = 0: Not ready	
	= 1: Ready Bit 2: Running	
	 = 0: The drive will not start if a reference other than zero is applied. = 1: Running, if a reference other than zero is applied, the drive can start. Bit 3: Fault 	
	= 0: No fault = 1: Fault	
	Bit 4: Power section supply mains present = 0: Power section supply mains absent = 1: Power section supply mains present	
	Bit 5: Reserved (= 1) Bit 6: Reserved (= 0 or 1)	
	Bit 7: Alarm = 0: No alarm = 1: Alarm	
	Bit 8: Reserved (= 0) Bit 9: Command via a network	
	= 0: Command via the terminals or the graphic display terminal = 1: Command via a network	

DRI- > MON- > CMM-

Code	Name / Description	Unit
	Bit 10: Reference reached = 0: The reference is not reached	
	= 1: The reference has been reached	
	Bit 11: Reference outside limits	
	= 0: The reference is within the limits = 1: The reference is not within the limits	
	When the drive is in speed mode, the limits are defined by LSP and HSP parameters.	
	Bit 12 and Bit 13: Reserved (= 0) Bit 14: Stop via STOP key	
	= 0: STOP key not pressed	
	= 1: Stop triggered by the STOP key on the graphic display terminal or the remote display terminal	
	Bit 15: Direction of rotation = 0: Forward rotation at output	
	= 1: Reverse rotation at output	
Nnd-	[MODBUS NETWORK DIAG]	
	Modbus network diagnostic.	
ПЧРІ	[COM LED] View of the Modbus Communication.	
ПІСЬ		
	Modbus network frame counter: Number of processed frames.	
ΠΙΕΓ	•	
СПП-	Modbus network CRC error counter: Number of CRC errors. [COMMUNICATION MAP] (continued)	
	- ,	
, 5 A -	[COM. SCANNER INPUT MAP] Used for CANopen® and Modbus Network.	
пΠΙ	[Com Scan In1 val.]	
11111	Value of the 1st input word.	
лП2	[Com Scan In2 val.]	
	Value of the 2nd input word.	
пΠЭ	[Com Scan In3 val.]	
	Value of the 3rd input word.	
пПЧ	[Com Scan In4 val.]	
	Value of the 4th input word.	
n Π 5	[Com Scan In5 val.] Value of the 5th input word.	
пПБ	[Com Scan In6 val.]	
	Value of the 6th input word.	
пΠЛ	[Com Scan In7 val.]	
	Value of the 7th input word.	
пΠВ	[Com Scan In8 val.] Value of the 8th input word.	
ЕПП -	[COMMUNICATION MAP] (continued)	
o 5 A -	[COM SCAN MAP]	
n E I	[Com Scan Out1 val.]	
	Value of the 1st output word.	
n [2	[Com Scan Out2 val.]	
	Value of the 2nd output word.	
n E 3	[Com Scan Out3 val.]	
	Value of the 3rd output word.	
n E 4	[Com Scan Out4 val.]	
	Value of the 4th output word.	
n C 5	[Com Scan Out5 val.] Value of the 5th output word.	
	1.5.5.5. die dar darpat nord.	

DRI- > MON- > CMM- > OSA-

Code	Name / Description	Unit
n C 6	[Com Scan Out6 val.]	
	Value of the 6th output word.	
n []	[Com Scan Out7 val.] Value of the 7th output word.	
n C B	[Com Scan Out8 val.]	
	Value of the 8th output word.	
ЕПП-	[COMMUNICATION MAP] (continued)	
[[CMD. WORD IMAGE]	
	Command word image: Only accessible via graphic display terminal.	
CUAI	[Modbus cmd.]	
5.0.13	Modbus command word image.	
C U d 2	[CANopen cmd.] CANopen® command word image.	
СПАЗ	[COM. card cmd.]	
	Communication card command word image.	
ЕПП-	[COMMUNICATION MAP] (continued)	
F 15	[FREQ. REF. WORD MAP]	
	Frequency reference image: Only accessible via graphic display terminal.	
LFrI	[Modbus ref.]	Hz
	Modbus frequency reference image.	1
LF r ≥	[CANopen ref.]	Hz
	CANopen® frequency reference image.	
LFr3	[Com. card ref.]	Hz
	Communication card frequency reference image.	
ЕПП-	[COMMUNICATION MAP] (continued)	
Г ∩ П -	[CANopen MAP]	
	CANopen® image: Only accessible via graphic display terminal.	
[on	[RUN LED] View of the CANopen® RUN Led Status.	
C A n E	[ERR LED]	
	View of the CANopen® Error Led Status.	
Pol-	[PDO1 IMAGE]	
rPII	View of the RPDO1 and TPDO1. [Received PDO1-1]	
	First frame of the received PDO1.	
*		
r P 12	[Received PDO1-2]	
*	Second frame of the received PDO1.	
rP 13	[Received PDO1-3]	
*	Third frame of the received PDO1.	
r P 14	[Received PDO1-4]	
*	Fourth frame of the received PDO1.	
LP I I	[Transmit PDO1-1]	
*	First frame of the transmit PDO1.	

DRI- > MON- > CMM- > CNM- > P01-

Code	Name / Description	Unit
EP 12	[Transmit PDO1-2]	
*	Second frame of the transmit PDO1.	
EP 13	[Transmit PDO1-3]	
*	Third frame of the transmit PDO1.	
EP 14	[Transmit PDO1-4]	
*	Fourth frame of the transmit PDO1.	
Г∩П-	[CANopen MAP] (continued) CANopen® image: Only accessible via graphic display terminal.	
P = 2 -	[PDO2 IMAGE]	
	View of the RPDO2 and TPDO2: Same structure as [PDO1 IMAGE] (P o 1 -).	
r P 2 1	[Received PDO2-1]	
*	First frame of the received PDO2.	
r P 2 2	[Received PDO2-2]	
*	Second frame of the received PDO2.	
r P 2 3	[Received PDO2-3]	
*	Third frame of the received PDO2.	
r P 2 4	[Received PDO2-4]	
*	Fourth frame of the received PDO2.	
EP21	[Transmit PDO2-1]	
*	First frame of the transmit PDO2.	
F P 2 2	[Transmit PDO2-2]	
*	Second frame of the transmit PDO2.	
EP23	[Transmit PDO2-3]	
*	Third frame of the transmit PDO2.	
EP24	[Transmit PDO2-4]	
*	Fourth frame of the transmit PDO2.	
[n [-	[CANopen MAP] (continued)	
	CANopen® image: Only accessible via graphic display terminal.	
P = 3 -	[PDO3 IMAGE]	
	View of the RPDO3 and TPDO3: Same structure as [PDO1 IMAGE] (P a I -).	
r P 3 I	[Received PDO3-1]	
*	First frame of the received PDO3.	
r P 3 2	[Received PDO3-2]	
*	Second frame of the received PDO3.	
r P 3 3	[Received PDO3-3]	
*	Third frame of the received PDO3.	
r P 3 4	[Received PDO3-4]	
*	Fourth frame of the received PDO3.	

DRI- > MON- > CMM- > CNM- > P03-

Code	Name / Description	Unit
EP31	[Transmit PDO3-1]	
*	First frame of the transmit PDO3.	
EP32	[Transmit PDO3-2]	
*	Second frame of the transmit PDO3.	
<i>LP33</i>	[Transmit PDO3-3]	
*	Third frame of the transmit PDO3.	
<i>EP34</i>	[Transmit PDO3-4]	
*	Fourth frame of the transmit PDO3.	
[n Π -	[CANopen MAP] (continued)	
	CANopen® image: Only accessible via graphic display terminal.	
n N E 5	[Canopen NMT state]	
	Drive NMT State of the CANopen® slave.	
boot		
StoP		
o P E P o P E	[Operation] (P E): Operational [Pre-op] (P P E): Pre-Operational	
пЬЕР	[Number of TX PDO]	
	Number of transmit PDO.	
nbrP	[Number of RX PDO]	
	Number of receive PDO.	
ErCo	[Error code]	
	CANopen® error register (from 1 to 5).	
rECI	[RX Error Counter] Controller Rx error counter (not stored at power off).	
LEC I	, , ,	
EELI	[TX error counter] Controller Tx error counter (not stored at power off).	
	Controller TX error counter (not stored at power on).	

DRI- > MON- > MPI-

Code	Name / Description	Unit
Non-	[1.2 MONITORING] (continued)	
ΠP_{i}	[MONIT. PI]	
*	PID management. Visible if [PID feedback ass.] (P ,F) is not set to [No] (n a).	
r P i	[Internal PID ref.]	
()	Internal PID reference: As a process value.	
*		
r P E	[PID error]	
*	PID error value.	
r P F	[PID feedback]	
*	PID feedback value.	
r P C	[PID reference]	
*	PID setpoint value via graphic display terminal.	
r P o	[PID Output]	Hz
	PID output value with limitation.	
Поп-	[1.2 MONITORING] (continued)	
PEL-	[MONIT. POWER TIME]	
APH	[Consumption]	Wh, kWh, MWh
	Energy consumption in Wh, kWh or MWh (accumulated consumption).	,,
rEH	[Run time]	s, min, h
	Run elapsed time display (resetable) in seconds, minutes or hours (length of time the motor has been switched	on).
PEH	[Power on time]	s, min, h
	Power elapsed time display in seconds, minutes or hours (length of time the drive has been switched on).	
r P r	[Operating t. reset]	
()	Reset of run elapsed time.	
	[No] (): Poset exerction not in progress	
APH	[No] (n o): Reset operation not in progress [Reset kWh] (H P H): Clear [Reset kWh] (H P H)	
	[rst. runtime] (r E H): Clear [rst. runtime] (r E H) [rst. P On t.] (P E H): Clear [rst. P On t.] (P E H)	
Поп-	[1.2 MONITORING] (continued)	
EnF5	[Config. active]	
	View of the active configuration.	
no	[In progress] (¬ ¬): Transitory state (configuration changing)	
Enf D Enf I	[Config. n°0] ([n F []): Configuration 0 active [Config. n°1] ([n F I): Configuration 1 active	
[n F 2	[Config. n°2] (L n F ≥): Configuration 2 active	
CFP5	[Utilised param. set]	
*	Configuration parameter status (can be accessed if parameter switching has been enabled, see page 229).	
	[None] (n p): Not assigned	
	[Set N°1] ([F P I): Parameter set 1 active [Set N°2] ([F P 2): Parameter set 2 active	
	[Set N°3] ([FP]): Parameter set 3 active	

DRI- > MON-

Code	Name / Description	Unit
ALGr	[Alarm groups]	
	Current impacted alarm group numbers.	
	Group of alarms could be user defined in [INPUTS / OUTPUTS CFG] (, _ a -) page 125.	
	[] (): No alarm group impacted	
I	[1] (/): Alarm group 1 [-2-] (- ≥ -): Alarm group 2	
12-	[12-] (1 2 -): Alarm group 1 and 2	
3	[-3] (- 3): Alarm group 3	
1-3	[1-3] (I - 3): Alarm group 1 and 3	
- 2 3	[-23] (- 2 3): Alarm group 2 and 3	
123	[123] (/ 2 3): Alarm group 1, 2 and 3	
SPdI	[Cust. output value]	
or		
5 P d 2	[Cust. output value] (5 P d I), [Cust. output value] (5 P d 2) or [Cust. output value] (5 P d 3) depending on t	the [Scale factor
or	display] (5 d 5) parameter, page 104 ([Cust. output value] (5 P d 3) in the factory setting)	
95Pd3	3, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1,	
ALr-	[ALARMS]	
	List of current alarms.	
	If an alarm is present, a ✓ appears on the graphic display terminal.	
noAL PECL	[No alarm] (P L L) [PTC alarm] (P L L)	
ELF	[External fault] (F L F)	
u S A		
CEA		
	[Freq. Th. attain.] (F & R)	
	[Freq. Th. 2 attained] (F \supseteq R)	
5 r A	[Freq.ref.att] (5 r R)	
E S A	[Th.mot. att.] (<i>E</i> 5 <i>R</i>)	
£ 5 2	[Th.mot2 att.] (<i>E</i> 5 ≥)	
E 5 3		
u P A		
E H A	[HSP attain.] (F L R) [Al. °C drv] (E H R)	
A G I	[Alarm group 1] (# [] I)	
R G ≥	[Alarm group 2] (# 6 2)	
AC3		
PEE	[PID error al] (PEE)	
PFA	[PID fdbk al.] (PFR)	
RP3	[AI3 AI. 4-20mA] (# P 3)	
5 S A	[Lim T/I att.] (5 5 A)	
E A d	[Th.drv.att.] (E R d)	
E J A	[IGBT alarm] (£ JR)	
b o A	[Brake R. al.] (b a A)	
υLA	[Underload. Proc. Al.] ($_{\mathcal{L}}$ $_{\mathcal{H}}$) [Overload. Proc. Al.] ($_{\mathcal{L}}$ $_{\mathcal{H}}$)	
oLA r5dA	[Rope slack alarm] (5 d R)	
E E H A	[High torque alarm] (F 5 B H)	
EELA	[Low torque alarm] (E E H R)	
al an	[Dynamic load alarm] (d L d R)	
F9LA	[Freq. meter Alarm] (F 9 L R)	

DRI- > MON- > SST-

Code	Name / Description	Unit
55L-	[OTHER STATE]	
	List of secondary states.	
	This menu is visible only on graphic display terminal.	
F L P E C L	[In motor fluxing] (F L) [PTC Alarm] (P L C L)	
FSE	[Fast stop in prog.] (F 5 L)	
CEA		
F E A F 2 A	[Freq. Th. attained] (F Ł 用) [Freq. Th. 2 attained] (F ट 用)	
5 r A	- • • • • • • • • • • • • • • • • • • •	
E S A	[Motor th. state att.] (£ 5 A)	
ELF	[External fault alarm] (E & F)	
Auto FtL	[Auto restart] (F u Ł a) [Remote] (F Ł L)	
	[Auto-tuning] (E u n)	
⊔ 5 A		
Enfl	[Config. 1 act.] (
	[HSP attained] (F L R)	
CFP I	[Set 1 active] ([FP])	
CFP2	[Set 2 active] ([FP2])	
CFP3 6r5	[Set 3 active] ([FP3]) [In braking] (br5)	
dbL	[DC bus loading] (dbL)	
EEHA		
	[Low torque alarm] (E E L R)	
	[Forward] (\(\bar{n} F \cap d \) [Reverse] (\(\bar{n} F \cap 5 \)	
	[Freq. metre Alarm] (F 9 L A)	
46E-	[DIAGNOSTICS]	
	This menu is visible only on graphic display terminal.	
PFH-	[FAULT HISTORY]	
	Shows the 8 last detected faults.	
dP I	[Past fault 1]	
	Fault record 1 (1 is last).	
6	[No fault] (¬ ¬ F): No detected fault stored	
n o F A S F	[Angle error] (# 5 F): Angle setting detected fault	
ЬLF	[Brake control] (b L F): Brake's motor 3-phases loss	
	[Brake feedback] (brf): Brake contactor detected error	
C F 12	[Incorrect config.] ([F F): Invalid configuration at power on [Bad conf] ([F , 2): Configuration transfer detected error	
EnF	[Com. network] ([Com. p.): NET option communication interruption	
Γ o F	[CAN com.] (C a F): CANopen® communication interruption	
[rF [5F	[Capa.charg] ([r F): Load relay detected fault [Ch.sw. fault] ([5 F): Channel switching detected error	
dLF	[Load fault] (d L F): Dynamic load detected error	
EEF I	[Control EEprom] (E E F I): Control EEprom detected error	
EEF2	[Power Eeprom] (E E F 2): Power EEprom detected error	
EPF I EPF 2	[External fault Ll/Bit] (E P F I): External detected fault from LI or local link [External fault com.] (E P F 2): External interruption from communication board	
	[FB fault] (F b E): Function block detected error	
	[FB stop fly.] (F b E 5): Function block stop detected error	
F C F 2	[Out. contact. stuck] (F [F]): Output contactor: closed contactor [Out. contact. open.] (F [F 2]): Output contactor: opened contactor	
HEF	[Cards pairing] (HEF): Hardware configuration detected error	
HdF	[IGBT desaturation] (H d F): Hardware detected error	
ı L F	[Option int link] (, L F): Option internal link interruption	
inFl		
inF3	[Int.serial link] (, , , , , , ,): Internal serial link communication interruption	
in F 4	[Int.Mfg area] (, n F 4): Invalid industrialization zone	
10F6	[Internal-option] (r of E): Unknown or incompatible option board	
in F 9	[Internal- I measure] (, n F 9): Current measurement circuit detected error	

Code	Name / Description	Unit
ın F A	[Internal-mains circuit] (, n F A): Input phase loss circuit detected error	
inFb	[Internal- th. sensor] (In F b): Thermal sensor detected error (OC or SC)	
inFE	[Internal-CPU] (, p F E): CPU detected fault (ram, flash, task)	
LEF	[Input contactor] (L [F): Line contactor detected error	
LFF3	[Al3 4-20mA loss] (L F F 3): Al3 4-20 mA loss	
оЬF	[Overbraking] (a b F): Overbraking	
oΓF	[Overcurrent] (¬ [F): Overcurrent	
o H F	[Drive overheat] (B H F): Drive overheating	
οLC	[Proc.Overload Flt] (a L L): Torque overload	
o L F	[Motor overload] (a L F): Motor overload	
oPF I	[1 output phase loss] (PF I): Motor 1-phase loss	
o P F 2	[3out ph loss] (a PF 2): Motor 3-phases loss	
o 5 F	[Mains overvoltage] (a 5 F): Oversupply detected fault	
o E F L	[PTC fault] (a L F L): Motor overheating detected error from PTCL: standard product	
PHF	[Input phase loss] (PHF): Main input 1-phase loss	
PEFL SAFF	[LI6=PTC probe] (P E F L): PTCL detected error (OC or SC) [Safety] (5 R F F): Safety function	
5 C F I	[Motor short circuit] (5 [F 1]): Motor short circuit (hard detection)	
5 C F 3	[Ground short circuit] (5 L F 3): Direct ground short-circuit (hard detection)	
5 C F 4	[IGBT short circuit] (5 E F 4): IGBT short-circuit (hard detection)	
5 C F S	[Motor short circuit] (5 £ 7 5): Load short-circuit during Igon load sequence (hard detection)	
5 L F 1	[Modbus com.] (5 L F I): Modbus local serial communication interruption	
5 L F 2	[PC com.] (5 L F 2): PC Software communication interruption	
5 L F 3	[HMI com.] (5 L F 3): Remote terminal communication interruption	
5 o F	[Overspeed] (5 p F): Overspeed	
5 P F	[Speed fdback loss] (5 P F): Speed feedback loss	
5 5 F	[Torque/current lim] (5 5 F): Torque current limitation detected fault	
E JF	[IGBT overheat] (LJF): IGBT overheating	
EnF	[Auto-tuning] (EnF): Tune detected fault	
υLF	[Pr.Underload Fit] (u L F): Torque underload	
⊔ 5 F	[Undervoltage] (u 5 F): Undervoltage	
H5 I	[Drive state]	
	HMI Status of the detected fault record 1.	
Eun	[Auto-tuning] (L u n): Auto-tuning	
д С Ь	[In DC inject.] (d [b): Injection braking	
r d Y	[Ready] (r d y): Drive ready	
n 5 Ł	[Freewheel] (n 5 k): Freewheel stop control	
run	[Drv running] (r un): Motor in steady state or run command present and zero reference	
ACC	[In accel.] (ACC): Acceleration	
d E C	[In decel.] (d E L): Deceleration	
E L i		
	(in case of using a synchronous motor, if the motor does not start, follow the procedure page 112)	
F 5 Ł	[Fast stop] (F 5 L): Fast stop	
FLu	[Mot. fluxing] (F L u): Fluxing function is activated	
n L P C L L	[no mains V.] (¬LP): Control is powered on but the DC bus is not loaded [control.stop] (LLL): Controlled stop	
obr	[Dec. adapt.] (abr): Adapted deceleration	
5 o C	[Output cut] (5 a [): Stand by output cut	
υ 5 A	[UnderV. al.] (u 5 fi): Undervoltage alarm	
E C	[In mfg. test] (£ C): TC indus mode activated	
5 <i>E</i>	[in autotest] (5 L): Self test in progress	
FA	[autotest err] (FR): Self test detected error	
9 E S	[Autotest OK] (4 E 5): Self test OK	
E P	[eeprom test] (EP): Self test Eeprom detected error	
FLE	[In fault] (F L E): Product has detected a fault	
55 /	[SS1 active] (5 5 1): Safety function SS1	
5 L S	[SLS active] (5 L 5): Safety function SLS	
5 t o	[STO active] (5 ½ a): Safety function STO	
5 N 5	[SMS active] (5 // 5): Safety function SMS	
GdL	[GdL active] (G d L): Safety function GdL	
EP I	[ETA state word]	
	DRIVECOM status register of detected fault record 1 (same as [ETA state word] (E & FI) page 57).	
	· · · · · · · · · · · · · · · · · · ·	
ıP I	[ETI state word]	
	Extended status register of detected fault record 1 (see the communication parameters file).	

DRI- > MON- > DGT- > PFH-

Code	Name / Description	Unit
СПР І	[Cmd word]	
	Command register of detected fault record 1 (same as [Cmd word] ([Δ.
LCPI	[Motor current]	Α
	Estimated motor current of detected fault record 1 (same as [Motor current] (L [r) page 50).	1.1-
rFPI	[Output frequency]	Hz
	Estimated motor frequency of detected fault record 1 (same as [Output frequency] (r F r) page 50).	1.
rEPI	[Elapsed time]	h
	Elapsed run time of detected fault record 1 (same as [Elapsed time] (r E H) page 62).	T
υLPΙ	[Mains voltage]	V
	Main voltage of detected fault record 1 (same as [Mains voltage] (u L n) page 50).	
E H P I	[Motor thermal state]	%
	Motor thermal state of detected fault record 1 (same as [Motor thermal state] (E Hr) page 50).	
4 C C 1	[Command Channel]	
	Command channel of detected fault record 1 (same as [Command channel] ([
dr[[Channel ref. active] Reference channel of detected fault record 1 (same as [Channel ref. active] (r F [[]) page 56).	
5-11	[Saf01 Reg n-1]	
יו יכ	SAF1 Register x (1 is last)	
5 r 2 1	[Saf02 Reg n-1]	
	SAF2 Register x (1 is last)	
5 r A I	[SF00 Reg n-1]	
	SF00 Register x (1 is last)	
5rb I	[SF01 Reg n-1] SF01 Register x (1 is last)	
5rEl	[SF02 Reg n-1]	
	SF02 Register x (1 is last)	
5rd I	[SF03 Reg n-1]	
	SF03 Register x (1 is last)	
5rE I	[SF04 Reg n-1] SF04 Register x (1 is last)	
5rF I	[SF05 Reg n-1]	
	SF05 Register x (1 is last)	
5 r G 1	[SF06 Reg n-1]	
<i></i>	SF06 Register x (1 is last)	
5 r H I	[SF07 Reg n-1] SF07 Register x (1 is last)	
Sril	[SF08 Reg n-1]	
	SF08 Register x (1 is last)	
5 r J I	[SF09 Reg n-1]	
- · · ·	SF09 Register x (1 is last)	
5 r K	[SF10 Reg n-1] SF10 Register x (1 is last)	
5rL I	[SF11 Reg n-1]	
	SF11 Register x (1 is last)	

DRI- > MON- > DGT- > PFH-

Code	Name / Description	Unit
PFH-	[FAULT HISTORY] (continued) Shows the 8 last detected faults.	
d P 2	[Past fault 2] [Saf1 Reg n-2] (5 r l 2), [Saf2 Reg n-2] (5 r 2 2), [SF00 Reg n-2] (5 r R 2), [SF01 Reg n-2] (5 r b 2), and [SF02 Reg n-2] (5 r L 2) to [SF11 Reg n-2] (5 r L 2) may be visible with this parameter. Identical to [Past fault 1] (d P I) page 64.	
d P 3	[Past fault 3] [Saf1 Reg n-3] (5 r l 3), [Saf2 Reg n-3] (5 r 2 3), [SF00 Reg n-3] (5 r R 3), [SF01 Reg n-3] (5 r b 3), and [SF02 Reg n-3] (5 r L 3) to [SF11 Reg n-3] (5 r L 3) may be visible with this parameter. Identical to [Past fault 1] (d P l) page 64.	
<i>d</i> P 4	[Past fault 4] [Saf1 Reg n-4] (5 r 14), [Saf2 Reg n-4] (5 r 24), [SF00 Reg n-4] (5 r 84), [SF01 Reg n-4] (5 r 64), and [SF02 Reg n-4] (5 r 64) to [SF11 Reg n-4] (5 r 64) may be visible with this parameter. Identical to [Past fault 1] (d P 1) page 64.	
d P 5	[Past fault 5] [Saf1 Reg n-5] (5 r 15), [Saf2 Reg n-5] (5 r 25), [SF00 Reg n-5] (5 r 85), [SF01 Reg n-5] (5 r 5), and [SF02 Reg n-5] (5 r 5) to [SF11 Reg n-5] (5 r 15) may be visible with this parameter. Identical to [Past fault 1] (d P 1) page 64.	
d P 6	[Past fault 6] [Saf1 Reg n-6] (5 r 16), [Saf2 Reg n-6] (5 r 26), [SF00 Reg n-6] (5 r 86), [SF01 Reg n-6] (5 r 66), and [SF02 Reg n-6] (5 r 66) to [SF11 Reg n-6] (5 r 66) may be visible with this parameter. Identical to [Past fault 1] (d P 1) page 64.	
d P 7	[Past fault 7] [Saf1 Reg n-7] (5 r l 7), [Saf2 Reg n-7] (5 r 2 7), [SF00 Reg n-7] (5 r 8 7), [SF01 Reg n-7] (5 r 6 7), and [SF02 Reg n-7] (5 r 2 7) to [SF11 Reg n-7] (5 r 1 7) may be visible with this parameter. Identical to [Past fault 1] (d P I) page 64.	
d P 8	[Past fault 8] [Saf1 Reg n-8] (5 r IB), [Saf2 Reg n-8] (5 r BB), [SF00 Reg n-8] (5 r BB), [SF01 Reg n-8] (5 r BB), and [SF02 Reg n-8] (5 r BB) to [SF11 Reg n-8] (5 r LB) may be visible with this parameter. Identical to [Past fault 1] (dPI) page 64.	

DRI- > MON- > PFL-

Code	Name / Description	Unit
dGE -	[DIAGNOSTICS] (continued)	
PFL-	[CURRENT FAULT LIST]	
noF	[No fault] (n p F): No detected fault stored	
ASF		
bl F		
br F C F F	[Brake feedback] (brf): Brake contactor detected error [Incorrect config.] (CFF): Invalid configuration at power on	
CF 12		
EnF		
[o F	[CAN com.] (C a F): CANopen® communication interruption	
[rF		
C S F		
dlf EEFI	[Load fault] (d L F): Dynamic load detected error [Control EEprom] (E E F I): Control EEprom detected error	
EEF2		
EPFI		
EPF2	-	
FBE		
	[FB stop fly.] (F b E 5): Function block stop detected error	
FEFI		
FCF2 HCF	[Out. contact. open.] (F [F]): Output contactor: opened contactor [Cards pairing] (H [F]): Hardware configuration detected error	
HdF		
ı L F		
inF I	[Rating error] (in F I): Unknown drive rating	
in F 2		
in F 3		
10 F 4		
in F 6		
INFA	[Internal-mains circuit] (In F R): Input phase loss circuit detected error	
inFb		
inFE	[Internal-CPU] (, n F E): CPU detected fault (ram, flash, task)	
LΓF	[Input contactor] (L [F]): Line contactor detected error	
LFF3		
o b F o € F		
o H F		
o L C		
o L F		
	[1 output phase loss] (PF I): Motor 1-phase loss	
	[3out ph loss] (PF 2): Motor 3-phases loss	
o 5 F o E F L		
PHF	1	
PEFL		
SAFF	[Safety] (5 R F F): Safety function	
5 C F 1		
5 C F 3	, , ,	
5 C F 4 5 C F 5		
SLF I		
5 L F 2		
5 L F 3	• • • · · · · · · · · · · · · · · · ·	
5 o F		
5 <i>PF</i>		
55F		
E J F En F	• • • •	
υLF	[Pr.Underload Fit] (L F): Torque underload	
υ 5 F	[Undervoltage] (u 5 F): Undervoltage	

DRI- > MON- > AFI-

Code	Name / Description	Unit
AF :-	[MORE FAULT INFO]	
	Additional detected fault information.	
EnF	[Network fault] Communication option card fault code. This parameter is read-only. The fault code remains saved in the parameter, even if the cause disappears. The pafter the drive is disconnected and then reconnected. The values of this parameter depend on the network card manual for the corresponding card.	
ıLF I	[Internal link fault 1] Communication interruption between option card 1 and drive. This parameter is read-only. The fault code remains saved in the parameter, even if the cause disappears. The pafter the drive is disconnected and then reconnected.	parameter is reset
SFFE	[Safety fault reg.] (1) Safety function fault error register. Bit0 = 1: Logic inputs debounce time-out (verify value of debounce time LIDT according to the application)	
	Bit1 Reserved Bit2 = 1: Motor speed sign has changed during SS1 ramp Bit3 = 1: Motor speed has reached the frequency limit threshold during SS1 ramp. Bit4: Reserved Bit5: Reserved Bit6 = 1: Motor speed sign has changed during SLS limitation Bit7 = 1: Motor speed has reached the frequency limit threshold during SS1 ramp. Bit8: Reserved Bit9: Reserved Bit10: Reserved Bit11: Reserved Bit12: Reserved Bit12: Reserved Bit13 = 1: Not possible to measure the motor speed (verify the motor wiring connection) Bit14 = 1: Motor ground short-circuit detected (verify the motor wiring connection) Bit15 = 1: Motor phase to phase short-circuit detected (verify the motor wiring connection)	
SAF I	[Safety fault Reg1] (1) Safety fault register 1. Application control error register. Bit0 = 1: PWRM consistency detected error Bit1 = 1: Safety functions parameters detected error Bit2 = 1: Application auto test has detected an error Bit3 = 1: Diagnostic verification of safety function has detected an error Bit4 = 1: Logical input diagnostic has detected an error Bit5 = 1: SMS or GDL safety functions detected error (Details in [SAFF Subcode 4] 5 F D 4 register page 71) Bit6 = 1: Application watchdog management active Bit7 = 1: Motor control detected error Bit8 = 1: Internal serial link core detected error Bit9 = 1: Logical input activation detected error Bit10 = 1: Safe Torque Off function has triggered an error Bit11 = 1: Application interface has detected an error of the safety functions Bit12 = 1: Safe Stop 1 function has detected an error of the safety functions Bit13 = 1: Safely Limited Speed function has triggered an error Bit15 = 1: Internal serial link data flow detected error	

(1) Hexadecimal values are displayed on the Graphic display terminal

Example:

SFFE = **0x0008** in Hexadecimal

SFFE = Bit 3

Code	Name / Description	Unit
5 A F 2	[Safety fault Reg2] (1)	
	Safety fault register 2	
	Motor Control error register	
	Bit0 = 1 : Consistency stator frequency verification has detected an error	
	Bit1 = 1 : Stator frequency estimation detected error	
	Bit2 = 1: Motor control watchdog management is active	
	Bit3 = 1 : Motor control hardware watchdog is active Bit4 = 1 : Motor control auto test has detected an error	
	Bit5 = 1 : Chain testing detected error	
	Bit6 = 1 : Internal serial link core detected error	
	Bit7 = 1 : Direct short-circuit detected error	
	Bit8 = 1 : PWM driver detected error	
	Bit9 = 1 : GDL internal detected error	
	Bit10 : Reserved Bit11 = 1 : Application interface has detected an error of the safety functions	
	Bit12 = 1 : Reserved	
	Bit13: Reserved	
	Bit14 = 1 : Motor data is corrupted	
	Bit15 = 1 : Internal serial link data flow detected error	
5 F O O	[SAFF Subcode 0] (1)	
	Safety fault subregister 00	
	Appplication auto test error register	
	Bit0 : Reserved	
	Bit1 = 1 : Ram stack overflow	
	Bit2 = 1 : Ram address integrity error	
	Bit3 = 1 : Ram data access error Bit4 = 1 : Flash Checksum Error	
	Bit5 : Reserved	
	Bit6 : Reserved	
	Bit7 : Reserved	
	Bit8 : Reserved	
	Bit9 = 1 : Fast task overflow	
	Bit10 = 1 : Slow task overflow	
	Bit11 = 1 : Application task overflow Bit12 : Reserved	
	Bit13 : Reserved	
	Bit14 = 1 : PWRM line is not activated during initialization phase	
	Bit15 = 1 : Application hardware Watch Dog is not running after initialization	
5 F D 1	[SAFF Subcode 1] (1)	
	Safety fault subregister 01	
	Logical input diagnostics error register	
	Bit0 = 1 : Management - state machine error	
	Bit1 = 1 : Data required for test management are corrupted	
	Bit2 = 1 : Channel selection detected error	
	Bit3 = 1 : Testing - state machine detected error	
	Bit4 = 1 : Test request is corrupted Bit5 = 1 : Pointer to test method is corrupted	
	Bit6 = 1 : Incorrect test action provided	
	Bit7 = 1 : Detected Error in results collecting	
	Bit8 = 1 : LI3 detected error. Cannot activate safe function	
	Bit9 = 1 : LI4 detected error. Cannot activate safe function	
	Bit10 = 1 : LI5 detected error. Cannot activate safe function	
	Bit11 = 1 : LI6 detected error. Cannot activate safe function	
	Bit12 = 1 : Test sequence updated while a diagnostic is in progress Bit13 = 1 : Detected error in test pattern management	
	Bit14 : Reserved	
	Bit15 : Reserved	
(1) Hovadocims	ıl values are displayed on the Graphic display terminal	

 $\begin{tabular}{ll} \end{tabular} \begin{tabular}{ll} \end{tabular} \beg$

Example:

SFFE = 0x0008 in Hexadecimal

SFFE = Bit 3

Code	Name / Description	Unit
5 F O 2	[SAFF Subcode 2] (1)	
	Safety fault subregister 02	
	Application Watchdog Management detected error register	
	Bit0 = 1 : Fast task detected error	
	Bit1 = 1 : Slow task detected error	
	Bit2 = 1 : Application task detected error	
	Bit3 = 1 : Background task detected error	
	Bit4 = 1 : Safety fast task/input detected error	
	Bit5 = 1 : Safety slow task/input detected error	
	Bit6 = 1 : Safety app task/input detected error	
	Bit7 = 1 : Safety app task/treatment detected error	
	Bit8 = 1 : Safety background task detected error	
	Bit9 : Reserved	
	Bit10 : Reserved	
	Bit11 : Reserved	
	Bit12 : Reserved	
	Bit13 : Reserved	
	Bit14 : Reserved	
	Bit15 : Reserved	
5 F D 3	[SAFF Subcode 3] (1)	
3, 03	Safety fault subregister 03	
	Bit0 = 1 : Debounce time out	
	Bit1 = 1 : Input not consistent	
	Bit2 = 1 : Consistency check - state machine detected error	
	Bit3 = 1 : Consistency check - debounce timeout corrupted	
	Bit4 = 1 : Response time data detected error	
	Bit5 = 1 : Response time corrupted	
	Bit6 = 1 : Undefined consumer queried	
	Bit7 = 1 : Configuration detected error	
	Bit8 = 1 : Inputs are not in nominal mode	
	Bit9 : Reserved	
	Bit10 : Reserved	
	Bit11 : Reserved	
	Bit12 : Reserved	
	Bit13 : Reserved	
	Bit14 : Reserved	
	Bit15 : Reserved	
5 F D 4	[SAFF Subcode 4] (1)	
3, 0,	Safety fault subregister 04	
	[Safe Torque Off] 5 L o detected error register	
	Bit0 = 1 : No signal configured	
	Bit1 = 1 : State machine detected error	
	Bit2 = 1 : Internal data detected error	
	Bit3 : Reserved	
	Bit4 : Reserved	
	Bit5 : Reserved	
	Bit6 : Reserved	
	Bit7 : Reserved	
	Bit8 = 1 : SMS overspeed detected error	
	Bit9 = 1 : SMS internal detected error	
	Bit10 : Reserved	
	Bit11 = 1 : GDL internal detected error 1	
	Bit12 = 1 : GDL internal detected error 2	
	Bit13 : Reserved	
	Bit14 : Reserved	
	Bit15 : Reserved	

 $\begin{tabular}{ll} \end{tabular} \begin{tabular}{ll} \end{tabular} \beg$

Example:

SFFE = 0x0008 in Hexadecimal

SFFE = Bit 3

Code	Name / Description	Unit
5 F O 5	[SAFF Subcode 5] (1)	1
	Safety fault subregister 05	
	[Safe Stop 1] 5 5 / detected error register	
	Bit0 = 1 : State machine detected error	
	Bit1 = 1: Motor speed sign changed during stop	
	Bit2 = 1 : Motor speed reached trigger area Bit3 = 1 : Theoretical motor speed corrupted	
	Bit4 = 1 : Unauthorized configuration	
	Bit5 = 1 : Theoretical motor speed computation detected error	
	Bit6 : Reserved	
	Bit7 = 1 : Speed sign check: consistency detected error	
	Bit8 = 1 : Internal SS1 request corrupted Bit9 : Reserved	
	Bit10 : Reserved	
	Bit11 : Reserved	
	Bit12 : Reserved	
	Bit13 : Reserved	
	Bit14 : Reserved	
	Bit15 : Reserved	
5 F O 6	[SAFF Subcode 6] (1)	
5. 00	Safety fault subregister 06	
	[Safely Limited Speed] 5 L 5 detected error register	
	Bit0 = 1 : State machine error register	
	Bit1 = 1 : Motor speed sign changed during limitation	
	Bit2 = 1 : Motor speed has reached the frequency limit threshold	
	Bit3 = 1 : Data corruption Bit4 : Reserved	
	Bit5 : Reserved	
	Bit6 : Reserved	
	Bit7 : Reserved	
	Bit8 : Reserved	
	Bit9 : Reserved	
	Bit10 : Reserved Bit11 : Reserved	
	Bit12 : Reserved	
	Bit13 : Reserved	
	Bit14 : Reserved	
	Bit15 : Reserved	
5 F O 7	[SAFF Subcode 7] (1)	
	Safety fault subregister 07 Application Watchdog Management detected error register	
	Bit0 : Reserved	
	Bit1 : Reserved	
	Bit2 : Reserved	
	Bit3 : Reserved	
	Bit4 : Reserved	
	Bit5 : Reserved Bit6 : Reserved	
	Bit7 : Reserved	
	Bit8 : Reserved	
	Bit9 : Reserved	
	Bit10 : Reserved	
	Bit11 : Reserved	
	Bit12 : Reserved	
	Bit13 : Reserved Bit14 : Reserved	
	Bit15 : Reserved	
(4) 11 1 1	l values are displayed on the Granhic display terminal	

(1) Hexadecimal values are displayed on the Graphic display terminal

Example:

SFFE = 0x0008 in Hexadecimal

SFFE = Bit 3

Code	Name / Description	Unit
5 F O B	[SAFF Subcode 8] (1)	
	Safety fault subregister 08	
	Application Watchdog Management detected error register	
	Bit0 = 1 : PWM task detected error	
	Bit1 = 1 : Fixed task detected error	
	Bit2 = 1 : ATMC watchdog detected error	
	Bit3 = 1 : DYNFCT watchdog detected error Bit4 : Reserved	
	Bit4 : Reserved Bit5 : Reserved	
	Bit6 : Reserved	
	Bit7 : Reserved	
	Bit8 : Reserved	
	Bit9 : Reserved	
	Bit10 : Reserved	
	Bit11 : Reserved	
	Bit12 : Reserved	
	Bit13 : Reserved	
	Bit14 : Reserved	
	Bit15 : Reserved	
5 F O 9	[SAFF Subcode 9] (1)	
	Safety fault subregister 09	
	Motor control Auto Test detected error register	
	Bit0 : Reserved	
	Bit1 = 1 : Ram stack overflow	
	Bit2 = 1 : Ram address integrity detected error	
	Bit3 = 1 : Ram data access detected error	
	Bit4 = 1 : Flash Checksum detected error	
	Bit5 : Reserved	
	Bit6 : Reserved Bit7 : Reserved	
	Bit8 : Reserved	
	Bit9 = 1 : 1ms task overflow	
	Bit10 = 1 : PWM task overflow	
	Bit11 = 1 : Fixed task overflow	
	Bit12 : Reserved	
	Bit13 : Reserved	
	Bit14 = 1 : Unwanted interruption	
	Bit15 = 1 : Hardware WD is not running after initialization	
5 F I D	[SAFF Subcode 10] (1)	
37 10		
	Safety fault subregister 10 Motor control direct short-circuit detected error register	
	Bit0 = 1 : Ground short circuit - Configuration detected error	
	Bit1 = 1 : Phase to phase short circuit - Configuration detected error	
	Bit2 = 1 : Ground short circuit	
	Bit3 = 1 : Phase to phase short circuit	
	Bit4 : Reserved	
	Bit5 : Reserved	
	Bit6 : Reserved	
	Bit7 : Reserved	
	Bit8 : Reserved	
	Bit9 : Reserved	
	Bit10 : Reserved	
	Bit11 : Reserved	
	Bit12 : Reserved	
	Bit13 : Reserved Bit14 : Reserved	
	Bit14 : Reserved Bit15 : Reserved	
	DILIO . NOOCI YEU	

(1) Hexadecimal values are displayed on the Graphic display terminal

Example:

SFFE = 0x0008 in Hexadecimal

SFFE = Bit 3

Code	Name / Description	Unit
5FII	[SAFF Subcode 11] (1) Safety fault subregister 11 Motor Control dynamic check of activity detected error register Bit0 = 1 : Application requested a diagnostic of direct short circuit Bit1 = 1 : Application requested consistency verification of stator frequency estimation (voltage and current) Bit2 = 1 : Application requested diagnostic of SpdStat provided by Motor Control Bit3 : Reserved Bit4 : Reserved Bit5 : Reserved Bit6 : Reserved Bit7 : Reserved Bit8 = 1 : Motor Control safe diagnostic of direct short circuit is enabled Bit9 = 1 : Motor Control consistency check of stator frequency estimation is enabled Bit10 = 1 : Motor Control diagnostic of SpdStat provided by Motor Control is enabled Bit11 : Reserved Bit12 : Reserved Bit13 : Reserved Bit14 : Reserved Bit14 : Reserved Bit15 : Reserved	
dGE -	[DIAGNOSTICS] (continued)	
L A C	[IGBT alarm counter] Transistor alarm time counter (length of time the "IGBT temperature" alarm has been active).	
F A C 2	[Min. freq time] Transistor alarm time counter at minimum switching frequency (length of time the "IGBT temperature" alarm has the drive has automatically reduced the switching frequency to the minimum value).	been active after
★	[IGBT alarm Nb] Transistor alarm counter: number detected during lifecycle. Visible if [3.1 ACCESS LEVEL] (L R C) is set to [Expert] (E P r).	
SEr-	[SERVICE MESSAGE] See page 289.	
rFLE	[Reset past faults] Reset all resetable previous detected faults.	
n o Y E S	[No] (no): Reset not active [YES] (YE 5): Reset in progress	



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

SFFE = **0x0008** in Hexadecimal

SFFE = Bit 3

Code	Name / Description Unit
Поп-	[1.2 MONITORING] (continued)
[od-	[PASSWORD]
	HMI Password. If you have lost your code, please contact Schneider Electric.
C 5 E	[State]
	Status of the drive (lock/unlock). Information parameter, cannot be modified.
	[Locked] (L C): The drive is locked by a password [Unlocked] (L C): The drive is not locked by a password
[od	[PIN code 1]
	Confidential code.
	Enables the drive configuration to be protected using an access code. When access is locked by means of a code, only the parameters in the [1.2 MONITORING] (
o F F	[OFF] (a F F): No access locking codes.
	- To lock access, enter a code (2 to 9,999). The display can be incremented using the jog dial. Then press ENT. [ON] (¬¬) appears on the screen to indicate that access has been locked.
חם	[ON] (¬ ¬): A code is locking access (2 to 9,999). - To unlock access, enter the code (incrementing the display using the jog dial) and press ENT. The code remains on the
	display and access is unlocked until the next time the drive is turned off. Access will be locked again the next time the drive
	is turned on If an incorrect code is entered, the display changes to [ON] ($ abla$ $ abl$
	Access is unlocked (the code remains on the screen). - To reactivate locking with the same code when access has been unlocked, return to [ON] (pn) using the jog dial and then press ENT. [ON] (pn) remains on the screen to indicate that access has been locked. - To lock access with a new code when access has been unlocked, enter the new code (increment the display using the jog dial) and then press ENT. [ON] (pn) appears on the screen to indicate that access has been locked. - To clear locking when access has been unlocked, return to [OFF] (pF) using the jog dial and then press ENT. [OFF] (pF) remains on the display. Access is unlocked and will remain so until the next restart.
C o d 2	[PIN code 2]
*	Confidential code 2. Visible if [3.1 ACCESS LEVEL] (L R L) is set to [Expert] (E P r).
o F F	The value [OFF] (F) indicates that no password has been set [Unlocked] (L [). The value [ON] (n) indicates that the drive configuration is protected and an access code must be entered in order to unlock it. Once the correct code has been entered, it remains on the display and the drive is unlocked until the next time the power supply is disconnected.
8888	PIN code 2 is an unlock code known only to Schneider Electric Product Support.
uLr	[Upload rights]
uLc0	[Permitted] (u L r []): Means that SoMove or the graphic display terminal can save the whole configuration (password,
	protections, configuration). When the configuration is edited, only the non protected parameters will be accessible. [Not allowed] (u L r I): Means that SoMove or the graphic display terminal cannot save the configuration
dLr	[Download rights]
	[Locked drv] (d L r I): Locked drive: means that the configuration can be downloaded only in a locked drive which configuration has the same password. If the passwords are different, download is not permitted.
dLr2	[Unlock. drv] (d L r I): Unlocked drive: means that the configuration can be downloaded only in a drive without active password [Not allowed] (d L r Z): Not allowed: the configuration cannot be downloaded [Lock/unlock] (d L r Z): Lock. + Not: download is permitted following case 0 or case 1



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

Configuration Mode (ConF)

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Introduction	<u>78</u>
Organization tree	<u>79</u>
My Menu	<u>80</u>
Factory Settings	<u>81</u>
Macro Configuration	<u>82</u>
Full	<u>85</u>

Introduction


Configuration mode includes 4 parts:

- 1. "My Menu" menu includes up to 25 parameters available for user customization using the graphic display terminal or SoMove software.
- 2. Store/recall parameter set: These 2 functions are used to store and recall customer settings.
- 3. [Macro configuration] ([F []) parameter which allows to load predefined values for applications (see page 82).
- 4. FULL: This menu provides access to all other parameters. It includes 10 sub-menus:
 - [SIMPLY START] (5 , \(\Pi \)) page 85
 [SETTINGS] (5 \(E \)) page 89
 [MOTOR CONTROL] (\(d \) \(E \)) page 105
 [INPUTS / OUTPUTS CFG] (\(\) \(\) \(\) \(\) page 125
 [COMMAND] (\(E \) L \(\)) page 154
 [FUNCTION BLOCK] (\(F \) \(\) \(\)) page 158
 [APPLICATION FUNCT.] (\(F \) \(\) \(\)) page 167
 [FAULT MANAGEMENT] (\(F \) L \(E \)) page 250
 [COMMUNICATION] (\(E \) \(\) \(\) \(\) Page 280

Organization tree

Displayed parameter values are given as examples.



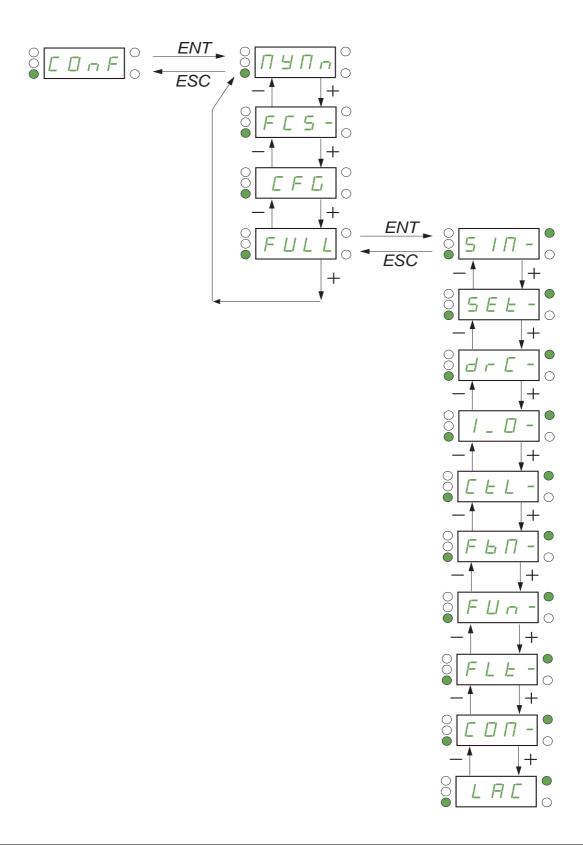

DRI- > CONF > MYMN-

My Menu

Code	Name / Description	
ConF	[1.3 CONFIGURATION]	
ПУПп	[MY MENU]	
	This menu contains the parameters selected in the [3.4 DISPLAY CONFIG.] (d [F -) menu on page 287.	

DRI- > CONF > FCS-

Factory Settings

Code	Name / Description	Factory setting	
<i>ConF</i>	[1.3 CONFIGURATION]		
FCS-	[FACTORY SETTINGS]		
FC5 i	[Config. Source]	[Macro-Conf] (, n ,)	
*	Choice of source configuration. If the configuration switching function is configured, it will not be possible to access [Config 1] ([F []]) and [Config 2] ([F [] 2]). Note: To load the drive's presettings previously stored ([Config 1] ([F []]) or [Config 2] ([F [] 2]), select the source configuration [Config. Source] ([F [] 5]) = [Config 1] ([F [] 1]) or [Config 2] ([F [] 2]) followed by a factory setting [Goto FACTORY SETTINGS] ([F [] 5]) = [YES] ([Y [] 5]).		
Fr 4-	[PARAMETER GROUP LIST]		
	Selection of menus to be loaded. See the multiple selection procedure on page 33 for the integrated display terminal and page 24 Note: In factory configuration and after a return to "factory settings", [PARAMETER GROUP LI		
∏ o E	[Drive configuration] (d r Π): The [1 DRIVE MENU] (d r Π -) menu without [COMMUNICATION] (Γ Γ -). In the [2.4 DISPLAY CONFIG.] menu, [Return std name] (Γ 5 Γ) page 289 returns to [No] (Γ Γ).		
G F S	[Goto FACTORY SETTINGS]		
*	▲ WARNING		
₹ 2 s	UNANTICIPATED EQUIPMENT OPERATION Verify that restoring the factory settings is compatible with the type of wiring used. Failure to follow these instructions can result in death, serious injury, or equi	pment damage.	
	It is only possible to revert to the factory settings if at least one group of parameters has previous	sly been selected.	
п о У Е 5	[No] (no): No [Yes] (YE5): The parameter changes back to [No] (no) automatically as soon as the operation is complete		
565 ,	[Save config]	[No] (n a)	
*	The active configuration to be saved does not appear for selection. For example, if it is [Config 0] (5 £ r 0), only [Config 1] (5 £ r 1) and [Config 2] (5 £ r 2) appear. The parameter changes back to [No] (n 2) as soon as the operation is complete.		
ne 5tr0 5tr1 5tr2	[No] (no): No [Config 0] (5 L r 0): Press and hold down the ENT key for 2 s [Config 1] (5 L r 1): Press and hold down the ENT key for 2 s [Config 2] (5 L r 2): Press and hold down the ENT key for 2 s		



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



To change the assignment of this parameter, press the ENT key for 2 s.

DRI- > CONF

Macro Configuration

Code	ode Name / Description Factor				
[on F	[1.3 CONFIGURATION] (continued)				
CFG	[Macro configuration]	[Start/Stop] (5 £ 5)			
*	▲ WARNING				
₹ 2 s	UNANTICIPATED EQUIPMENT OPERATION Verify that the selected macro configuration is compatible with the type of wiring used. Failure to follow these instructions can result in death, serious injury, or equipment damage.				
наб	[Start/Stop] (5 £ 5): Start/stop [M. handling] (H d G): Handling				
GEn	[Hoisting] (H 5 L): Hoisting [Gen. Use] (L E n): General use				
	[PID regul.] (P, d): PID regulation [Network C.] (n E L): Communication bus				



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



To change the assignment of this parameter, press the ENT key for 2 s.

Example of total return to factory settings

- [Config. Source] (F [5 1) is set to [Macro-Conf] (1 7 1)
- [PARAMETER GROUP LIST] (F r 4 -) is set to [AII] (F L L)
- [Goto FACTORY SETTINGS] ([F 5) is set to [Yes] (9 E 5)

Assignment of the inputs/outputs

Input/ output	[Start/Stop]	[M. handling]	[Gen. Use]	[Hoisting]	[PID regul.]	[Network C.]
[AI1]	[Ref.1 channel]	[Ref.1 channel]	[Ref.1 channel]	[Ref.1 channel]	[Ref.1 channel] (PID reference)	[Ref.2 channel] ([Ref.1 channel] = integrated Modbus) (1)
[AI2]	[No]	[Summing ref. 2]	[Summing ref. 2]	[No]	[PID feedback]	[No]
[Al3]	[No]	[No]	[No]	[No]	[No]	[No]
[AO1]	[No]	[No]	[No]	[No]	[No]	[No]
[R1]	[No drive flt]	[No drive flt]	[No drive flt]	[No drive flt]	[No drive flt]	[No drive flt]
[R2]	[No]	[No]	[No]	[Brk control]	[No]	[No]
[LI1] (2-wire)	[Forward]	[Forward]	[Forward]	[Forward]	[Forward]	[Forward]
[LI2] (2-wire)	[Reverse]	[Reverse]	[Reverse]	[Reverse]	[Reverse]	[Reverse]
[LI3] (2-wire)	[No]	[2 preset speeds]	[Jog]	[Fault reset]	[PID integral reset]	[Ref. 2 switching]
[LI4] (2-wire)	[No]	[4 preset speeds]	[Fault reset]	[External fault]	[2 preset PID ref.]	[Fault reset]
[LI5] (2-wire)	[No]	[8 preset speeds]	[Torque limitation]	[No]	[4 preset PID ref.]	[No]
[LI6] (2-wire)	[No]	[Fault reset]	[No]	[No]	[No]	[No]
[LI1] (3-wire)	[Drive running]	[Drive running]	[Drive running]	[Drive running]	[Drive running]	[Drive running]
[LI2] (3-wire)	[Forward]	[Forward]	[Forward]	[Forward]	[Forward]	[Forward]
[LI3] (3-wire)	[Reverse]	[Reverse]	[Reverse]	[Reverse]	[Reverse]	[Reverse]
[LI4] (3-wire)	[No]	[2 preset speeds]	[Jog]	[Fault reset]	[PID integral reset]	[Ref. 2 switching]
[LI5] (3-wire)	[No]	[4 preset speeds]	[Fault reset]	[External fault]	[2 preset PID ref.]	[Fault reset]
[LI6] (3-wire)	[No]	[8 preset speeds]	[Torque limitation]	[No]	[4 preset PID ref.]	[No]
[LO1]	[No]	[No]	[No]	[No]	[No]	[No]
	- '	(Graphic display termina	l keys	+	+
F1 key	[No]	[No]	[No]	[No]	[No]	Control via graphic display terminal
F2, F3, F4 keys	[No]	[No]	[No]	[No]	[No]	[No]

In 3-wire control, the assignment of inputs LI1 to LI6 shifts.

(1) To start with, integrated Modbus [Modbus Address] ($\mathbb{A} d$) must first be configured, page $\underline{276}$.

Note: These assignments are reinitialized every time the macro configuration changes.

Other configurations and settings

In addition to the assignment of inputs/outputs, other parameters are assigned **only in the Hoisting macro configuration**.


Hoisting:

- [Movement type] (b 5 L) is set to [Hoisting] (u E r) page 194
- [Brake contact] (L i) is set to [No] (D D) page 194
- [Brake impulse] (b , P) is set to [Yes] (9 E 5) page 194
- [Brake release I FW] (, b r) is set to 0 A page 194
- [Brake Release time] (br E) is set to 0 s page 194
- [Brake release freq] (b , r) is set to [Auto] (R u L a) page 195
- [Brake engage freq] (b E n) is set to [Auto] (R u L a) page 195
- [Brake engage time] (b E L) is set to 0 s page 195
- [Engage at reversal] (b E d) is set to [No] (n a) page 195
- [Jump at reversal] (J d [) is set to [Auto] (A u L a) page 195
- [Time to restart] (L L r) is set to 0 s page 196
- [Current ramp time] (brr) is set to 0 s page 198
- [Low speed] (L 5 P) is set to Rated motor slip calculated by the drive, page 87
- [Output Phase Loss] (PL) is set to [Yes] (E 5) page 256
 No further modifications can be made to this parameter.
- [Catch on the fly] (F L r) is set to [No] (n a) page 253 No further modifications can be made to this parameter.

Return to factory settings:

Returning to factory settings with [Config. Source] ($F \ \ \Box \ \)$ is set to [Macro-Conf] ($\ \ \Box \ \)$ page $\underline{81}$ will return the drive to the selected macro configuration. The [Macro configuration] ($\ \ \Box \ \ F \ \ \Box \)$ parameter does not change, although [Customized macro] ($\ \ \Box \ \ F \ \ \Box \)$ disappears.

Example diagrams for use with the macro configurations

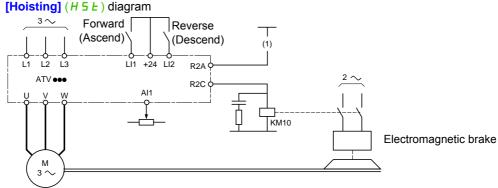

(1) Whithout integrated safety function, a contact on the Preventa module must be inserted in the brake control circuit to engage it when the "Safe Torque Off" safety function is activated (see connection diagrams in the Installation manual).

DRI- > CONF > FULL > SIM-

Full

Code	Name / Description	Adjustment range	Factory setting	
[on F	[1.3 CONFIGURATION]			
Full	[FULL]			
5 · N -	[SIMPLY START]			
FCC	[2/3 wire control]		[2 wire] (2 C)	
₹ 2 s	A	WARNING		
	UNANTICIPATED EQUIPMENT OPERATION If this parameter is changed, the parameters [Reassignments of the digital inputs are reset to the Verify that this change is compatible with the type Failure to follow these instructions can result	e factory setting. oe of wiring used.		
	See [2/3 wire control] (<i>L [[</i>) page <u>125</u> .			
2.0	[2 wire] (te (0 or 1) or edge (0 to 1 or 1 to 0), whic	h controls running or stopping.	
3€	[3 wire] (3 L) 3-wire control (pulse commands): A "forward" or "reverse to command stopping. Example of "source" wiring: ATVeee	erse" pulse is sufficient to command start	ting, a "stop" pulse is sufficient	
	E-7E-1 E-1 Llx: reverse			
C F G	[Macro configuration]		[Start/Stop] (5 <i>L</i> 5)	
*	A	WARNING		
₹ 2 s	UNANTICIPATED EQUIPMENT OPERATION Verify that the selected macro configuration is c Failure to follow these instructions can result			
	See [Macro configuration] ([F []) page 82.			
5	[Start/Stop] (5 £ 5): Start/stop [M. handling] (H d L): Handling [Hoisting] (H 5 E): Hoisting [Gen. Use] (L E n): General use [PID regul.] (P d): PID regulation [Network C.] (n E E): Communication bus			

DRI- > CONF > FULL > SIM-

Code	Name / Description	Adjustment range	Factory setting		
CCFG	[Customized macro]				
*	Read-only parameter, only visible if at least one macro configuration parameter has been modified.				
n					
ЬFг	[Standard mot. freq] [50Hz IEC] (5 II)				
	This parameter modifies the presets of the following parameters: [Rated mo 87, [Freq. threshold] (F & d) page 102, [Rated motor freq.] (F r 5) and				
	[50Hz IEC] (5 1): Drive 50 Hz [60Hz NEMA] (5 1): Drive 60 Hz				
ı P L	[Input phase loss]		Yes or No, according to drive rating		
*	This parameter is only accessible in this menu on 3-phase drives. If one phase disappears, the drive switches to fault mode [Input phase los continues to operate until it trips on an undervoltage detected fault (the drivinput phase loss and if this leads to performance decrease). See [Input phase loss] ($,PL$) page 256.				
л о У Е 5	[Ignore] (n p): Detected fault ignored, to be used when the drive is supplied [Freewheel] (9 E 5): With freewheel stop	ed via a single-phase	supply or by the DC bus		
n P r	[Rated motor power]		According to drive rating		
*	Rated motor power given on the nameplate, in kW if [Standard mot. freq] [Standard mot. freq] ($ b F r $) is set to [60Hz NEMA] ($ b D $). See [Rated motor power] ($ c P r $) page $ 107 $.	(b F r) is set to [50H	z IEC] (50), in HP if		
u n 5	[Rated motor volt.]	100 to 480 V	According to drive rating		
*	Rated motor voltage given on the nameplate. ATV320•••M2•: 100 to 240 V – ATV320•••N4•: 200 to 480 V. See [Rated motor volt.] (u n 5) page 107.				
n E r	[Rated mot. current]	0.25 to 1.5 ln (1)	According to drive rating and [Standard mot. freq] (b F r)		
*	Rated motor current given on the nameplate. See [Rated mot. current] (n [r]) page 107.				
F r 5	[Rated motor freq.]	10 to 800 Hz	50 Hz		
*	Rated motor frequency given on the nameplate. The factory setting is 50 Hz, or preset to 60 Hz if [Standard mot. freq] (b) This parameter is not visible if [Motor control type] (c) page d 05 is see [Rated motor freq.] (d 07 page d 107.		У п).		
n 5 P	[Rated motor speed]	0 to 65,535 rpm	According to drive rating		
	Rated motor speed given on the nameplate. This parameter is not visible if [Motor control type] (E & E) page 105 is set to [Sync. mot.] (5 9 n). See [Rated motor speed] (n 5 P) page 107. 0 to 9,999 rpm then 10.00 to 60.00 krpm on the integrated display terminal. If, rather than the rated speed, the nameplate indicates the synchronous speed and the slip in Hz or as a %, calculate the rated speed as follows:				
*	Nominal speed = Synchronous speed x $\frac{100 - \text{slip as a } \%}{100}$ or				
	Nominal speed = Synchronous speed x $\frac{50 - \text{slip in Hz}}{50}$ (50 Hz motors)				
	or				
	Nominal speed = Synchronous speed x $\frac{60 - \text{slip in Hz}}{60}$ (60 Hz motors))			

DRI- > CONF > FULL > SIM-

Code	Name / Description	Adjustment range	Factory setting		
<i>EFr</i>	[Max frequency]	10 to 599 Hz	60 Hz		
	The factory setting is 60 Hz, or preset to 72 Hz if [Standard mot. freq] (b F r) is set to 60 Hz. The maximum value is limited by the following conditions: It must not exceed 10 times the value of [Rated motor freq.] (F r 5).				
	See [Max frequency] (E F r) page 105.				
Eun	[Auto tuning]		[No action] (n a)		
()	For asynchronous motors, see page <u>108</u> . For synchronous motors, see page <u>113</u> .				
Ł u 5	[Auto tuning state]		[Not done] (L AL)		
	This parameter is not saved at drive power off. It shows the Autotuning state See [Auto tuning state] (<i>L</i> <u>u</u> 5) page <u>108</u> .	us since last power o	n.		
EAB PEnd ProG FA:L donE	[Pending] (PEnd): Autotune has been requested but not yet performed [In Progress] (Pnd L): Autotune is in progress [Failed] (FR L): Autotune has detected a fault				
5 E u n	[Tune selection]		[Default] (E A b)		
	See [Tune selection] (5 ½ ¼ n) page 108.				
Е Я Ь П Е Я S С u S	[Default] (E R b): The default stator resistance value is used to control the [Measure] (R E R 5): The stator resistance measured by the auto-tuning fu [Custom] (C U 5): The stator resistance set manually is used to control the	nction is used to cont	erol the motor		
ı E H	[Mot. therm. current]	0.2 to 1.5 ln (1)	According to drive rating		
()	Motor thermal protection current, to be set to the rated current indicated on See [Mot. therm. current] ($\iota E H$) page 90 .	the motor nameplate			
ACC	[Acceleration]	0.00 to 6,000 s (2)	3.0 s		
()	Time to accelerate from 0 to the [Rated motor freq.] ($F \ \Gamma$ 5) (page 86). To parameter must be set according to the possibility of the application. See [Acceleration] ($R \ \Gamma \ \Gamma$) page 89.	have repeatability in	ramps, the value of this		
∂ E C	[Deceleration]	0.00 to 6,000 s (2)	3.0 s		
()	Time to decelerate from the [Rated motor freq.] (F r 5) (page 86) to 0. To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application. See [Deceleration] (d E L) page 89.				
L 5 P	[Low speed]	0 to 599 Hz	0		
O	Motor frequency at minimum reference, can be set between 0 and [High speed] (H 5 P). See [Low speed] (L 5 P) page 89.				
H 5 P	[High speed]	0 to 599 Hz	50 Hz		
O	Motor frequency at maximum reference, can be set between [Low speed] (setting changes to 60 Hz if [Standard mot. freq] (b F r) is set to [60Hz NE See [High speed] (H 5 P) page 89.	•	quency] (EFr). The factory		

- (1) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.
- (2) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1 to 6,000 s according to [Ramp increment] ($\mu \sigma r$) page $\underline{170}$.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

Settings

With integrated display terminal

It is recommend to stop the motor before modifying any of the settings.

From L an F menu

FULL

ESC 5 IN - - + ESC SETTINGS

ESC 5 ENT SETTINGS

The adjustment parameters can be modified with the drive running or stopped.

Code	Name / Description	Adjustment range	Factory setting	
Full	[FULL] (continued)			
5 E L -	[SETTINGS]			
ınr	[Ramp increment]		0.1	
()	This parameter is valid for [Acceleration] ($\mathcal{H} \mathcal{L} \mathcal{L}$), [Deceleration] ($\mathcal{H} \mathcal{L} \mathcal{L}$), [Acceleration 2] ($\mathcal{H} \mathcal{L} \mathcal{L}$) and [Deceleration 2] ($\mathcal{H} \mathcal{L} \mathcal{L}$). See [Ramp increment] ($\mathcal{L} \mathcal{L} \mathcal{L}$) page $\frac{170}{2}$.			
0.0 0.				
ACC	[Acceleration]	0.00 to 6,000 s (1)	3.0 s	
()	Time to accelerate from 0 to the [Rated motor freq.] (F r 5) must be set according to the possibility of the application. Set		ps, the value of this parameter	
d E C	[Deceleration]	0.00 to 6,000 s (1)	3.0 s	
()	Time to decelerate from the [Rated motor freq.] (F r 5) pagmust be set according to the possibility of the application. Set		ps, the value of this parameter	
AC2	[Acceleration 2]	0.00 to 6,000 s (1)	5 s	
* ()	Time to accelerate from 0 to the [Rated motor freq.] (F r 5) must be set according to the possibility of the application. So			
4 E 2	[Deceleration 2]	0.00 to 6,000 s (1)	5 s	
* ()	Time to decelerate from the [Rated motor freq.] (F r 5) pagmust be set according to the possibility of the application. So			
LA I	[Begin Acc round]	0 to 100%	10%	
* ()	Rounding of start of acceleration ramp as a % of the [Accel [Ramp type] (r P L) is set to [Customized] (L u 5). See [
Ŀ A 2	[End Acc round]	0 to 100%	10%	
* ()	Rounding of end of acceleration ramp as a % of the [Accele Can be set between 0 and 100% - [Begin Acc round] (£ R Visible if [Ramp type] (r P E) is set to [Customized] (£ u	1).		
L A 3	[Begin Dec round]	0 to 100%	10%	
*	Rounding of start of deceleration ramp as a % of the [Decel [Ramp type] (¬ P Ł) is set to [Customized] (¬ U ¬ S). See [
()				
L A Y	[End Dec round]	0 to 100%	10%	
* ()	Rounding of end of deceleration ramp as a % of the [Deceler Can be set between 0 and 100% - [Begin Dec round] (E R Visible if [Ramp type] (r P E) is set to [Customized] (L u	∄).	, ,	
L S P	[Low speed]	0 to 599 Hz	0 Hz	
()	Motor frequency at minimum reference, can be set between 0 and [High speed] (H 5 P) page 87. See [Low speed] (L 5 P) page 87.			
H S P	[High speed]	0 to 599 Hz	50 Hz	
Θ	Motor frequency at maximum reference, can be set between setting changes to 60 Hz if [Standard mot. freq] (b F r) is			

DRI- > CONF > FULL > SET-

Code	Name / Description	Adjustment range	Factory setting		
H 5 P 2	[High speed 2]	0 to 599 Hz	50 Hz		
*	Visible if [2 High speed] (5 H 2) is not set to [No] (n a). See [High speed 2] (H 5 P 2) page 244.				
()					
H 5 P 3	[High speed 3]	0 to 599 Hz	50 Hz		
*	Visible if [4 High speed] (5 H 4) is not set to [No] (na). See [High speed]	peed 3] (H 5 P 3) page 244	<u>1</u> .		
()					
H 5 P 4	[High speed 4]	0 to 599 Hz	50 Hz		
*	Visible if [4 High speed] (5 H 4) is not set to [No] (n a). See [High s	peed 4] (<i>H</i> 5 <i>P Y</i>) page <u>244</u>	<u>1</u> .		
O					
ı E H	[Mot. therm. current]	0.2 to 1.5 In (2)	According to drive rating		
()	Motor thermal protection current, to be set to the rated current indicate See [Mot. therm. current] (, E H)page 87.	d on the motor nameplate.			
uFг	[IR compensation]	0 to 200%	100%		
()	IR compensation. See [IR comprensation] (uFr) page 118.				
5 L P	[Slip compensation]	0 to 300%	100%		
*	Slip compensation. See [Slip compensation] (5 L P) page 118.				
()					
5 F C	[K speed loop filter]	0 to 100	65		
*	Speed filter coefficient. See [K speed loop filter] (5 F L) page 118.				
()					
5 , E	[Speed time integral]	1 to 65,535 ms	63 ms		
*	Speed loop integral time constant. See [Speed time integral] (5 , E)	page <u>118</u> .			
O					
5 P G	[Speed prop. gain]	0 to 1,000%	40%		
*	Speed loop proportional gain. See [Speed prop. gain] (5 P L) page 1	<u> </u>			
Ô					
5 P G u	[UF inertia comp.]	0 to 1,000%	40%		
*	Inertia factor. See [UF inertia comp.] (5 P G u) page 118.	L	1		
()					

- (1) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1 to 6,000 s according to [Ramp increment] (, rg r) page 170.
- (2) In corresponds to the rated drive current indicated in the Installation manual or on the drive nameplate.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

()

Parameter that can be modified during operation or when stopped.

Parameter settings for [K speed loop filter] (5 F L), [Speed prop. gain] (5 P L) and [Speed time integral] (5 I L)

The following parameters can be accessed if [Motor control type] ($[L \ E]$) page $\underline{105}$ is set to [SVC V] ($\underline{U} \ \underline{U} \ [L]$), [Sync. mot.] ($\underline{S} \ \underline{U} \ \underline{U}$) or [Energy Sav.] ($\underline{U} \ \underline{U} \ \underline{U}$).

General Case: Setting for [K speed loop filter] (5 F L) = 0

The regulator is an "IP" type with filtering of the speed reference, for applications requiring flexibility and stability (hoisting or high inertia, for example).

- [Speed prop. gain] (5 P L) affects excessive speed.
- [Speed time integral] (5 , £) affects the passband and response time.

Initial response	Reduction in SIT	Reduction in SIT
Reference division	Reference division	Reference division
1 0.8 0.6 0.4 0.2 0 50 100 150 200 250 300 350 400 450 500 Time in ms	1 0.8 0.6 0.4 0.2 0.2 0.2 0.2 0.2 0.2 0.2 0.2 0.2 0.2	1 0.8 0.6 0.4 0.2 0.2 0.2 0.2 0.2 0.2 0.2 0.2 0.2 0.2
Initial response	Increase in SPG	Increase in SPG
Reference division 1 0.8 0.6 0.4 0.2 0 0 50 100 150 200 250 300 350 400 450 500 Time in ms	Reference division 1 0.8 0.6 0.4 0.2 0 0 50 100 150 200 250 300 350 400 450 500 Time in ms	Reference division 1 0.8 0.6 0.4 0.2 0 0 50 100 150 200 250 300 350 400 450 500 Time in ms


Special case: Parameter [K speed loop filter] (5 F [) is not 0

This parameter must be reserved for specific applications that require a short response time (trajectory positioning or servo control).

- When set to 100 as described above, the regulator is a "PI" type, without filtering of the speed reference.
- Settings between 0 and 100 will obtain an intermediate function between the settings below and those on the previous page.

Example: Setting for [K speed loop filter] (5 F L) = 100

- [Speed prop. gain] (5 P L) affects the passband and response time.
- [Speed time integral] (5 , L) affects excessive speed.

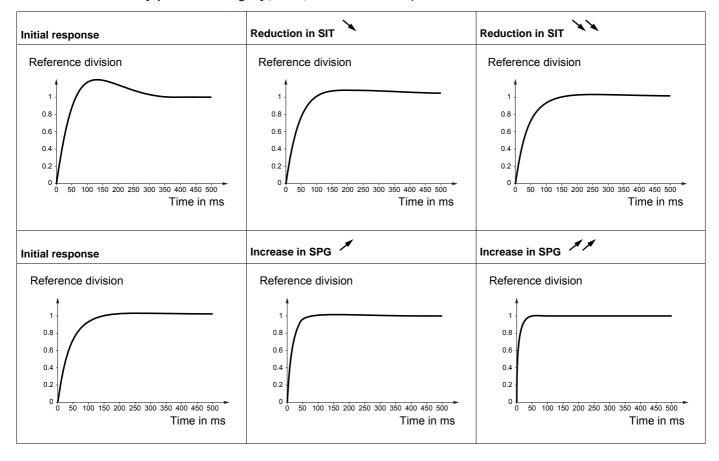

DRI- > CONF > FULL > SET Parameters described in this page can be accessed by: Code Name / Description Adjustment range **Factory setting** d E F 0 to 10 [Ramp divider] Deceleration ramp time reduction. See [Ramp divider] (d [F) page 173 () id C [DC inject. level 1] 0.1 to 1.41 ln (1) 0.64 In (1) Level of DC injection braking current activated via logic input or selected as stop mode. See [DC inject, level 1] (, d [) page () 0.1 to 30 s 0.5 sEd i [DC injection time 1] Maximum current injection time [DC inject. level 1] (, d □). After this time, the injection current becomes [DC inject. level 2] (, d [2). See [DC injection time 1] (b d I) page 174. () 1 d C 2 [DC inject. level 2] 0.1 In to 1.41 In (1) 0.5 In (1) Injection current activated by logic input or selected as stop mode, once period of time [DC injection time 1] (E 🗗 1) has elapsed. See [DC inject. level 2] (, d [2) page 175. () EdC [DC injection time 2] 0.1 to 30 s 0.5 sMaximum injection time [DC inject. level 2] (, d [2]) for injection selected as stop mode only. See [DC injection time 2] (L d [) page 175. () SACI [Auto DC inj. level 1] 0 to 1.2 In (1) 0.7 In (1) NOTICE **OVERHEATING AND DAMAGE TO THE MOTOR** Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time in order to avoid overheating and damage to the motor. Failure to follow these instructions can result in equipment damage. Level of standstill DC injection current [Auto DC injection] (A d [) is not [No] (n a). See page 176. 0.5 s 0.1 to 30 s E d C I [Auto DC inj. time 1] **NOTICE OVERHEATING AND DAMAGE TO THE MOTOR**

*

Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time in order to avoid overheating and damage to the motor.

Failure to follow these instructions can result in equipment damage.

Standstill injection time. This parameter can be accessed if [Auto DC injection] ($\mathcal{H} \sqcup \mathcal{L}$) is not set to [No] ($\mathcal{L} \sqcup \mathcal{L}$) is not set to [No] ($\mathcal{L} \sqcup \mathcal{L}$) page $\underline{105}$ is set to [Sync. mot.](5 $\mathcal{L} \sqcup \mathcal{L}$), this time corresponds to the zero speed maintenance time. See page $\underline{176}$.

DRI- > CONF > FULL > SET-

Code	Name / Description	Adjustment range	Factory setting		
5 d C 2	[Auto DC inj. level 2]	0 to 1.2 ln (1)	0.5 ln (1)		
* ()	OVERHEATING AND DAMAGE TO THE Medical Verify that the connected motor is properly rained time in order to avoid overheating and data Failure to follow these instructions can recommend to the connected motor of the connected motor	ated for the DC injection current to be apamage to the motor.	oplied in terms of amount		
	2nd level of standstill DC injection current. This parameter can be accessed if [Auto DC injecti See page 177.	on] (Ħ d Ľ) is not [No] (n a).			
F G C 2	[Auto DC inj. time 2]	0 to 30 s	0 s		
* ()	OVERHEATING AND DAMAGE TO THE Medical Verify that the connected motor is properly really and time in order to avoid overheating and defailure to follow these instructions can really 2nd standstill injection time. This parameter can be accessed if [Auto DC injection of the content of the co	ated for the DC injection current to be apamage to the motor. sult in equipment damage.	oplied in terms of amount		
5 F r	See page 177.	2 to 16 kHz	4.0 kHz		
577	[Switching freq.]	2 10 10 KHZ	4.0 KI IZ		
O	NOTICE DAMAGE TO THE MOTOR Verify that the switching frequency of the drive does not exceed 4 kHz if the EMC filter is disconnected for operation of the drive in an IT mains. Failure to follow these instructions can result in equipment damage. This applies to the following drive versions: ATV320●●M2● Switching frequency setting. See page 119. Adjustment range: The maximum value is limited to 4 kHz if [Motor surge limit] (5 L) parameter, page 120 is configured. Note: In the event of excessive temperature rise, the drive will automatically reduce the switching frequency and reset it once the temperature returns to normal.				
EL,	[Current Limitation]	0 to 1.5 ln (1)	1.5 ln (1)		
* ()	 NOTICE OVERHEATING AND DAMAGE TO THE MOTOR Verify that the motor is properly rated for the maximum current to be applied to the motor. Consider the duty cycle of the motor and all factors of your application including derating requirements in determining the current limit. Failure to follow these instructions can result in equipment damage. 				
	Used to limit the motor current. See page 218. Note: If the setting is less than 0.25 In, the drive may (see page 256). If it is less than the no-load motor co	y lock in [Output Phase Loss] (a P L) fault r	mode if this has been enabled		

Configuration Mode (ConF) DRI- > CONF > FULL > SET-Parameters described in this page can be accessed by: Code Name / Description Factory setting Adjustment range EL2 0 to 1.5 In (1) 1.5 ln (1) [I Limit. 2 value] NOTICE OVERHEATING AND DAMAGE TO THE MOTOR Verify that the motor is properly rated for the maximum current to be applied to the motor. Consider the duty cycle of the motor and all factors of your application including derating requirements in determining the current limit. Failure to follow these instructions can result in equipment damage. See page 218. Note: If the setting is less than 0.25 In, the drive may lock in [Output Phase Loss] (PL) fault mode if this has been enabled (see page 256). If it is less than the no-load motor current, the motor cannot run.

F L [Motor fluxing]

[No] (F n a)

A A DANGER

→

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

If the parameter [Motor fluxing] (F L u) is set to [Continuous] (F L L), fluxing is always active, even if the motor does not run.

Verify that using this setting does not result in unsafe conditions.

Failure to follow these instructions will result in death or serious injury.

₹ 2 s

NOTICE

OVERHEATING AND DAMAGE TO THE MOTOR

Verify that the connected motor is properly rated for the flux current to be applied in order to avoid overheating and damage to the motor.

Failure to follow these instructions can result in equipment damage.

The parameter is visible if [Motor control type] ($\Gamma E E$) page $\underline{105}$ is not set to [Sync. mot.] (5 $\underline{4}$ \underline{n}).

In order to obtain rapid high torque on startup, magnetic flux needs to already have been established in the motor.

In [Continuous] (F [L) mode, the drive automatically builds up flux when it is powered up.

In [Not cont.] ($\digamma \sqcap \varGamma$) mode, fluxing occurs when the motor starts up.

The flux current is greater than [Rated mot. current] (¬ [¬) when the flux is established and is then adjusted to the motor magnetizing current. See page 189.

F n [[Not cont.] (F n [): Non-continuous mode

[Continuous] (F L E): Continuous mode. This option is not possible if [Auto DC injection] (R d L) page 176 is [Yes] (9 E 5) or if [Type of stop] (5 E E) page 173 is [Freewheel] (n 5 E).

Fig. [No] (Fig. a): Function inactive. This option is not possible if [Brake assignment] (b L E) page 194 is not [No] (p a).

L L 5 [Low speed time out]

0 to 999.9 s 0 s

()

Maximum operating time at [Low speed] (L 5P) (see page 87).

Following operation at LSP for a defined period, a motor stop is requested automatically. The motor will restart if the reference is greater than LSP and if a run command is still present. See page 213.

Note: A value of 0 indicates an unlimited period of time.

Note: If [Low speed time out] (EL5) is not 0, [Type of stop] (5EE) page $\underline{173}$ is forced to [Ramp stop] ($r\Pi P$) (only if a ramp stop can be configured).

JGF

[Jog frequency]

0 to 10 Hz 10 Hz



Reference in jog operation. See page 178.

()

DRI- > CONF > FULL > SET-

Code	Name / Description	Adjustment range	Factory setting
J G E	[Jog delay]	0 to 2.0 s	0.5 s
*	Anti-repeat delay between 2 consecutive jog operations. See page 179.		
()			

DRI- > CONF > FULL > SET-

ode	Name / Description	Adjustment range	Factory setting
5 P 2	[Preset speed 2]	0 to 599 Hz	10 Hz
*	Preset speed 2. See [Preset speed 2] (5 ₱ ₴) page 181.		'
()			
5 P 3	[Preset speed 3]	0 to 599 Hz	15 Hz
*	Preset speed 3. See [Preset speed 3] (5 P 3) page 181.		
()			
		0.4. 500.11	00.11
5 P 4	[Preset speed 4]	0 to 599 Hz	20 Hz
*	Preset speed 4. See [Preset speed 4] (5 P 4) page 181.		
()			
5 P S	[Preset speed 5]	0 to 599 Hz	25 Hz
	Preset speed 5. See [Preset speed 5] (5 P 5) page 181.	0 10 000 1 12	20112
*	reset speed of occ [reset speed of (37 3) page 101.		
()			
5 P 6	[Preset speed 6]	0 to 599 Hz	30 Hz
*	Preset speed 6. See [Preset speed 6] (5 P 5) page 181.		
()			
5 P 7	[Preset speed 7]	0 to 599 Hz	35 Hz
*	Preset speed 7. See [Preset speed 7] (5 P 7) page 181.		
()			
5 P B	[Preset speed 8]	0 to 599 Hz	40 Hz
*	Preset speed 8. See [Preset speed 8] (5 PB) page 182.		,
()			
5 P 9	[Preset speed 9]	0 to 599 Hz	45 Hz
*	Preset speed 9. See [Preset speed 9] (5 P 9) page 182.		
()			
5 P 1 D	[Procet around 40]	0 to 599 Hz	50 Hz
	[Preset speed 10]	0 to 599 HZ	30 HZ
*	Preset speed 10. See [Preset speed 10] (5 P I D) page 182.		
()			
5 <i>P</i> I I	[Preset speed 11]	0 to 599 Hz	55 Hz
*	Preset speed 11. See [Preset speed 11] (5 P I) page 182.		
	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		
()			
5 <i>P 12</i>	[Preset speed 12]	0 to 599 Hz	60 Hz
*	Preset speed 12. See [Preset speed 12] (5 P 12) page 182.		1
()			

DRI- > CONF > FULL > SET-

Code	Name / Description	Adjustment range	Factory setting
5 <i>P</i> 13	[Preset speed 13]	0 to 599 Hz	70 Hz
*	Preset speed 13. See [Preset speed 13] (5 P I 3) page 182.		"
O			
5P 14	[Preset speed 14]	0 to 599 Hz	80 Hz
*	Preset speed 14. See [Preset speed 14] (5 P 14) page 182.		"
O			
5 P 1 S	[Preset speed 15]	0 to 599 Hz	90 Hz
*	Preset speed 15. See [Preset speed 15] (5 P 15) page 182.		1
()			
5 <i>P</i> 16	[Preset speed 16]	0 to 599 Hz	100 Hz
*	Preset speed 16. See [Preset speed 16] (5 P 16) page 182.		
()			
ПЕг	[Multiplying coeff.]	0 to 100%	100%
*	Multiplying coefficient, can be accessed if [Multiplier ref.] (IT For terminal. See page 46.	Delta (signed to the graphic display
Θ			
5 r P	[+/-Speed limitation]	0 to 50%	10%
*	Limitation of +/- speed variation. See page 187.		
\circ			
()			

DRI- > CONF > FULL > SET-

	Name / Description	Adjustment range	Factory setting
r P G	[PID prop. gain]	0.01 to 100	1
*	Proportional gain. See page 211.		
()			
r 16	[PID integral gain]	0.01 to 100	1
*	Integral gain. See page 211.	0.01 10 100	'
	miografigami oso pago <u>z. r.</u> .		
()			
r d G	[PID derivative gain]	0.00 to 100	0
*	Derivative gain. See page 211.		
()			
PrP	[PID ramp]	0 to 99.9 s	0 s
*	PID acceleration/deceleration ramp, defined to go from [Min PID	reference] (P , P I) to [Max PI	
	vice versa. See page <u>211</u> .	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	()
()			
PoL	[Min PID output]	-599 to 599 Hz	0 Hz
*	Minimum value of regulator output in Hz. See page 211.		
()			
	They DID cutout	0 to 599 Hz	60 Hz
PoH	[Max PID output]	0 to 599 HZ	00 HZ
*	Maximum value of regulator output in Hz. See page 211.		
* ()	maximum value of regulator output in Hz. See page 211.		
	[Min fbk alarm]	See page <u>211</u> (2)	100
() PAL			100
() PAL ★	[Min fbk alarm]		100
() * ()	[Min fbk alarm] Minimum monitoring threshold for regulator feedback. See page 2	211.	
()PAL★()PAH	[Min fbk alarm] Minimum monitoring threshold for regulator feedback. See page 2 [Max fbk alarm]	See page <u>212</u> (2)	1,000
() PAL * ()	[Min fbk alarm] Minimum monitoring threshold for regulator feedback. See page 2	See page <u>212</u> (2)	
() PAL ★ () PAH	[Min fbk alarm] Minimum monitoring threshold for regulator feedback. See page 2 [Max fbk alarm]	See page <u>212</u> (2)	
 () PHL ★ () PHH ★ 	[Min fbk alarm] Minimum monitoring threshold for regulator feedback. See page 2 [Max fbk alarm]	See page <u>212</u> (2)	
 ○ PAL ★ ○ PAH ★ ○ PEr 	[Min fbk alarm] Minimum monitoring threshold for regulator feedback. See page 2 [Max fbk alarm] Maximum monitoring threshold for regulator feedback. See page 3	See page <u>212</u> (2) <u>212</u> .	1,000
 ○ PAL ★ ○ PAH ★ ○ PEr ★ 	[Min fbk alarm] Minimum monitoring threshold for regulator feedback. See page 2 [Max fbk alarm] Maximum monitoring threshold for regulator feedback. See page 2 [PID error Alarm]	See page <u>212</u> (2) <u>212</u> .	1,000
 ○ PRL ★ ○ PRH ★ ○ PEr ★ ○ O 	[Min fbk alarm] Minimum monitoring threshold for regulator feedback. See page 2 [Max fbk alarm] Maximum monitoring threshold for regulator feedback. See page 2 [PID error Alarm] Regulator error monitoring threshold. See page 212.	See page <u>212</u> (2) <u>212</u> .	1,000
<pre></pre>	[Min fbk alarm] Minimum monitoring threshold for regulator feedback. See page 2 [Max fbk alarm] Maximum monitoring threshold for regulator feedback. See page 3 [PID error Alarm] Regulator error monitoring threshold. See page 212. [Speed input %]	See page <u>212</u> (2) <u>212</u> .	1,000
 ○ PRL ★ ○ PRH ★ ○ PEr ★ ○ O 	[Min fbk alarm] Minimum monitoring threshold for regulator feedback. See page 2 [Max fbk alarm] Maximum monitoring threshold for regulator feedback. See page 2 [PID error Alarm] Regulator error monitoring threshold. See page 212.	See page <u>212</u> (2) <u>212</u> .	1,000
<pre></pre>	[Min fbk alarm] Minimum monitoring threshold for regulator feedback. See page 2 [Max fbk alarm] Maximum monitoring threshold for regulator feedback. See page 3 [PID error Alarm] Regulator error monitoring threshold. See page 212. [Speed input %]	See page <u>212</u> (2) <u>212</u> .	1,000
<pre></pre>	[Min fbk alarm] Minimum monitoring threshold for regulator feedback. See page 2 [Max fbk alarm] Maximum monitoring threshold for regulator feedback. See page 2 [PID error Alarm] Regulator error monitoring threshold. See page 212. [Speed input %] Multiplying coefficient for predictive speed input. See page 212.	See page <u>212</u> (2) <u>212</u> . 0 to 65,535 (2)	1,000
<pre></pre>	[Min fbk alarm] Minimum monitoring threshold for regulator feedback. See page 2 [Max fbk alarm] Maximum monitoring threshold for regulator feedback. See page 3 [PID error Alarm] Regulator error monitoring threshold. See page 212. [Speed input %]	See page <u>212</u> (2) <u>212</u> .	1,000

DRI- > CONF > FULL > SET-

Code	Name / Description	Adjustment range	Factory setting
rP3	[Preset ref. PID 3]	See page <u>214</u> (2)	600
*	Preset PID reference. See page <u>214</u> .		,
O			
r P 4	[Preset ref. PID 4]	See page <u>214</u> (2)	900
*	Preset PID reference. See page 214.		,
()			

DRI- > CONF > FULL > SET-

de	Name / Description	Adjustment range	Factory setting
ıbr	[Brake release I FW]	0 to 1.36 ln (1)	0.0 A
*	Brake release current threshold for lifting or forward movement.	See page <u>194</u> .	
()			
		0.4.4001.40	0.04
ırd	[Brake release I Rev]	0 to 1.36 ln (1)	0.0 A
*	Brake release current threshold for lowering or reverse moveme	ent. See page <u>194</u> .	
()			
brt	[Brake Release time]	0 to 5.00 s	0 s
*	Brake release time delay. See page <u>194</u> .		<u> </u>
()			
bir	[Brake release freq]	[Auto] ([Auto] (A u L a)
•	See page <u>195</u> .	0 10 10 112	
X			
()			
Auto	[Auto] (Au E): Nominal value		
ЬЕп	[Brake engage freq]	[Auto] ([Auto] (A u L a)
*	Brake engage frequency threshold. See page 195.	0.10.1.12	
()			
F P E	[Brake engage delay]	0 to 5.00 s	0 s
*			
()	Time delay before request to engage brake. See page 195.		
b E E	[Proke engage time]	0 to 5.00 s	0 s
_ <u>_</u> _	[Brake engage time] Brake engage time (brake response time). See page 195.	0 10 3.00 \$	0.5
*	brake engage time (brake response time). See page 150.		
()			
JdC	[Jump at reversal]	[Auto] (A u L a)	[Auto] (A u L a)
		0 to 10 Hz	
*	See page <u>195</u> .		
()			
Auto	[Auto] (# u Ł p): Nominal value		
<i>EEr</i>	[Time to restart]	0.00 to 15.00 s	0.00 s
*	Time between the end of a brake engage sequence and the sta	rt of a brake release sequence. S	ee page <u>196</u> .
()			
()			<u> </u>
()	[Motoring torque lim]	0 to 300%	100%
	Torque limitation in motor mode, as a % or in 0.1% increments of		
EL,Π			

DRI- > CONF > FULL > SET-

ode	Name / Description	Adjustment range	Factory setting
* ()	Torque limitation in generator mode, as a % or in 0.1% increments [Torque increment] (In EP) parameter, page 216. See page 216.	of the rated torque in accordance with	the
E c H	[Traverse freq. high]	0 to 10 Hz	4 Hz
*	Traverse high. See page 242.		
()			
ErL	[Traverse freq. low]	0 to 10 Hz	4 Hz
*	Traverse low. See page <u>242</u> .		
()			
9 S H	[Quick step High]	0 to [Traverse freq. high] (L r H)	0 Hz
*	Quick step high. See page 242.		
()			
9 5 L	[Quick step Low]	0 to [Traverse freq. low] (E r L	0 Hz
*	Quick step low. See page <u>242</u> .		
()			
СЕВ	[Current threshold]	0 to 1.5 ln (1)	In (1)
()	Current threshold for [I attained] ([E] function assigned to a rel	ay or a logic output (see page <u>138</u>). Se	ee page <u>252</u> .
E E H	[High torque thd.]	-300% to +300%	100%
()	High torque threshold for [High tq. att.] (<i>E E H R</i>) function assigne rated motor torque. See page <u>253</u> .	d to a relay or a logic output (see page	138), as a % of the
E E L	[Low torque thd.]	-300% to +300%	50%
()	Low torque threshold for [Low tq. att.] (E E L F) function assigned to motor torque. See page 253.	o a relay or a logic output (see page 13	8), as a % of the rate
F9L	[Pulse warning thd.]	0 Hz to 20,000 kHz	0 Hz
*	Speed threshold measured by the [FREQUENCY METER] (F 9 F (see page 138). See page 253.	-) function, page <u>266</u> , assigned to a re	elay or a logic outpu
FEd	[Freq. threshold]	0.0 to 599 Hz	HSP
()	Motor frequency threshold for [Freq.Th.att.] ($F \ E \ R$) function assign [PARAM. SET SWITCHING] ($\Pi \ L \ P$ -) function, page 230. See pa		e <u>138</u>), or used by th
F2d	[Freq. threshold 2]	0.0 to 599 Hz	HSP
()	Motor frequency threshold for [Freq. th.2 attained] (F ≥ F) function by the [PARAM. SET SWITCHING] (Π L P -) function, page 230.		ee page <u>138</u>), or use
FFE	[Freewheel stop Thd]	0.2 to 599 Hz	0.2 Hz
*	Speed threshold below which the motor will switch to freewheel sto This parameter supports switching from a ramp stop or a fast stop	•	threshold
()	It can be accessed if [Type of stop] (5 £ £) is set to [Fast stop] (6 £ £) and [Auto DC injection] (# d £) are not configured. See p	F 5 <i>E</i>) or [Ramp stop] (¬ Π P) and if [
ЕEd	[Motor therm. level]	0 to 118%	100%
()	Threshold for motor thermal alarm (logic output or relay). See page	2 <u>55</u> .	
JPF	[Skip Frequency]	0 to 599 Hz	0 Hz
()	Skip frequency. This parameter helps to prevent prolonged operatio This function can be used to help to prevent a speed, which would renders it inactive. See page 183.		
JF2	[Skip Frequency 2]	0 to 599 Hz	0 Hz

DRI- > CONF > FULL > SET-

Code	Name / Description	Adjustment range	Factory setting	
()	2nd skip frequency. This parameter helps to prevent prolonged ope frequency. This function can be used to help to prevent a speed, wh function to 0 renders it inactive. See page 183.			
JF3	[3rd Skip Frequency]	0 to 599 Hz	0 Hz	
O	3rd skip frequency. This parameter helps to prevent prolonged operation within an adjustable range around the regulated frequency. This function can be used to help to prevent a speed, which would cause resonance, being reached. Setting the function to 0 renders it inactive. See page 183.			
J F H	[Skip.Freq.Hysteresis]	0.1 to 10 Hz	1 Hz	
*	Parameter visible if at least one skip frequency [Skip Frequency] ([3rd Skip Frequency] (J F 3) is different from 0. Skip frequency range: between (J P F - J F H) and (J P F + J F H) This adjustment is common to the 3 frequencies (J P F , J F 2, J F	f) for example.		
Lun	[Unld.Thr.Nom.Speed]	20 to 100% of [Rated mot. current] (, , [,)	60%	
* ()	Underload threshold at rated motor frequency ([Rated motor freq.] Visible only if [Unid T. Del. Detect] (u L E) page 270 is not set to 0 See page 270.	(F - 5) page <u>86</u>), as a % of the rated	motor torque.	
LuL	[Unld.Thr.0.Speed]	0 to [Unid.Thr.Nom.Speed] (L u n)	0%	
* ()	Underload threshold at zero frequency, as a % of the rated motor torque. Visible only if [Unid T. Del. Detect] (u L E) page 270 is not set to 0. See page 270.			
rNud	[Unid. Freq.Thr. Det.]	0 to 599 Hz	0 Hz	
*	Underload detection minimum frequency threshold. See page <u>270</u> .			
5 r b	[Hysteresis Freq.Att.]	0.3 to 599 Hz	0.3 Hz	
* ()	Maximum deviation between the frequency reference and the motor See page 270.	r frequency, which defines steady state	operation.	
FEu	[Underload T.B.Rest.]	0 to 6 min	0 min	
*	Minimum time permitted between an underload being detected and In order for an automatic restart to be possible, the value of [Max. reparameter by at least one minute. See page 271.	•	ceed that of this	
LoC	[Ovld Detection Thr.]	70% to 150% of [Rated mot. current] (¬ [¬)	110%	
*	Overload detection threshold, as a % of the rated motor current [Rat limit current in order for the function to work. See page 272. Visible only if [Ovld Time Detect.] (-	nust be less than the	
FŁo	[Overload T.B.Rest.]	0 to 6 min	0 min	
* O	Minimum time permitted between an overload being detected and a In order for an automatic restart to be possible, the value of [Max. reparameter by at least one minute. See page 272.		ceed that of this	
LBC	[Load correction]	0 to 599 Hz	0 Hz	
*	Rated correction in Hz. See [Load correction] (L b [) page 122.	L	1	
()				

DRI- > CONF > FULL > DRC-

Code	Name / Description	Adjustment range	Factory setting	
FFΠ	[Fan Mode]		[Standard] (5 Ł d)	
	If [Fan Mode] $(F F \Pi)$ is set to [Never] $(5 E P)$, the fan	of the drive is disabled.		
	Service life of electronic component is reduced.			
75	NOT	ICE		
()	DAMAGE TO THE DRIVE			
	The ambient temperature must be limited to 40°C (104°F	,		
	Failure to follow these instructions can result in equ	ipment damage.		
5	[Always] (ר ע ה): The fan is started	ding to the drive thermal state		
5 d 5	[Scale factor display]	0.1 to 200	30	
	Used to display a value in proportion to the output frequency [Output frequency] (r F r): the machine speed, the motor speed, etc.			
	The display will show			
	[Cust. output value] (5 P d 3) = [Scale factor display] (5 d 5) x [Output frequency] (r F r) to 2 decimal places			
	• If [Scale factor display] (5 d 5) ≤ 1, [Cust. output value] (5 P d I) is displayed (possible definition = 0.01)			
	• If 1 < [Scale factor display] (5 d 5) ≤ 10, [Cust. output value] (5 P d 2) is displayed (possible definition = 0.1)			
75	• If [Scale factor display] (5 d 5) > 10, [Cust. output value] (5 P	, , , , , , , , , , , , , , , , , , , ,	· · · · · · · · · · · · · · · · · · ·	
()	• If [Scale factor display] (5 d 5) > 10 and [Scale factor display]	(5 d 5) x [Output frequency] (r F r) > 9,999:	
	example: for 24,223, display will show 24.22			
	- If [Scale factor display] (5 d 5) > 10 and [Scale factor display] (5 d 5)	isplay] (5 d 5) x [Output freque	ency] (r F r) > 65,535, display	
	Example: Display motor speed for 4-pole motor, 1,500 rpm at 50 Hz (synchronous speed):			
	[Scale factor display] (5 d 5) = 30			

- (1) In corresponds to the rated drive current indicated in the Installation manual or on the drive nameplate.
- (2) If a graphic display terminal is not in use, values greater than 9,999 will be displayed on the 4-digit display with a period mark after the thousand digit, example: 15.65 for 15,650.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

Motor control


The parameters in the [MOTOR CONTROL] (d r [] -) menu can only be modified when the drive is stopped and no run command is present, with the following exceptions:

- [Auto tuning] (L u n) page 113, which may cause the motor to start up.
- Parameters containing the sign () in the code column, which can be modified with the drive running or stopped.

Note: We recommend to perform auto-tuning if one of the following parameters are modified from their factory setting.

Code	Name / Description	Adjustment range	Factory setting		
Full	[FULL] (continued)				
dr[-	[MOTOR CONTROL]				
bFr	[Standard mot. freq]		[50 Hz IEC] (5 D)		
	This parameter modifies the presets of the following parameters: [High speed] (H 5 P) page 87, [Freq. threshold] (F L d) page 102, [Rated motor volt.] (u n 5), [Rated motor freq.] (F r 5) and [Max frequency] (L F r).				
5 O 6 O	[50 Hz IEC] (5 0): IEC [60 Hz NEMA] (5 0): NEMA				
<i>EFr</i>	[Max frequency]	10 to 599 Hz	60 Hz		
	The factory setting is 60 Hz, or preset to 72 Hz if [Standard mot. freq] (bFr) is set to 60 Hz. The maximum value is limited by the following conditions: It must not exceed 10 times the value of [Rated motor freq.] (Fr 5).				
CFF	[Motor control type]		[Standard] (5 <i>E d</i>)		
	Note: Select law before entering parameter values.				
שטנ	[SVC V] (u u E): Sensorless vector control with internal speed loop based on voltage feedback calculation. For applications needing high performance during starting or operation.				
5 Ł d	[Standard] (5 £ d): Standard motor law. For simple applications that do not require high performance. Simple motor control law keeping a constant Voltage Frequency ratio, with a possible adjustment of the curve bottom. This law is generally used for motors connected in parallel. Some specific applications with motors in parallel and high performance levels may require [SVC V] (u u E).				
	Voltage UnS	uency			
	Note: U0 is the result of an internal calculation based on motor parar modifying UFr value.	neters and multiplied by l	UFr (%). U0 can be adjusted by		

DRI- > CONF > FULL > DRC- > ASY-

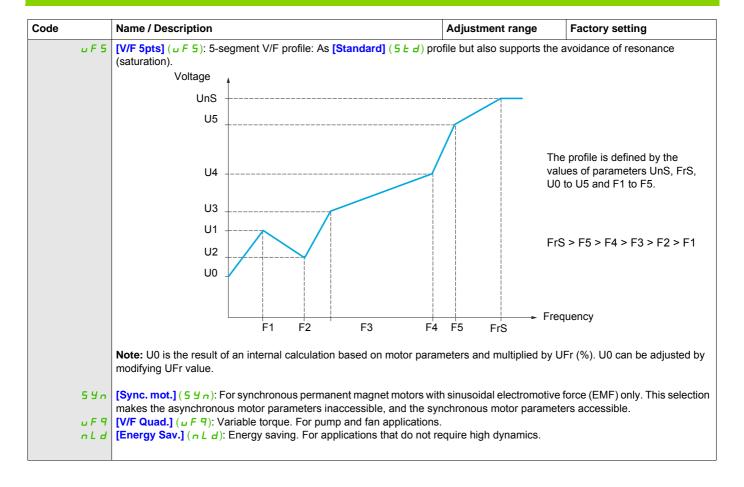

DRI- > CONF > FULL > DRC- > ASY-

Asynchronous motor parameters

Code	Name / Description	Adjustment range	Factory setting		
A 5 Y -	[ASYNC. MOTOR]				
	Only visible if [Motor control type] ([L L) page 105 is not set to [Sync. mot.] (5 4 n).				
n P r	[Rated motor power]	According to drive rating	According to drive rating		
*	This parameter cannot be accessed if [Motor control type] ($[L \ E]$) page 105 is set to [Sync. mot.] (5 $[L \ E]$). Rated motor power given on the nameplate, in kW if [Standard mot. freq] ($[L \ E]$) is set to [50Hz IEC] ($[L \ E]$), in HP if [Standard mot. freq] ($[L \ E]$) is set to [60Hz NEMA] ($[L \ E]$).				
C o 5	[Motor 1 Cosinus Phi]	0.5 to 1	According to drive rating		
*	Nominal motor cos phi. This parameter can be accessed if [Motor param choice] (\(\P \ \End{cases} \)) is set to [Mot Cos] (\(\End{cases} \) = 5).				
u n 5	[Rated motor volt.]	100 to 480 V	According to drive rating and [Standard mot. freq] (b F r)		
*	This parameter cannot be accessed if [Motor control type] ([E E) page 105 is set to [Sync. mot.] (5 4 n). Rated motor voltage given on the nameplate.				
nEr	[Rated mot. current]	0.25 to 1.5 ln (1)	According to drive rating and [Standard mot. freq] (b F r)		
*	This parameter cannot be accessed if [Motor control type] (L + L) page 105 is set to [Sync. mot.] (5 4 n). Rated motor current given on the nameplate.				
F r 5	[Rated motor freq.]	10 to 800 Hz	50 Hz		
*	This parameter cannot be accessed if [Motor control type] ([L L) page 105 is set to [Sync. mot.] (5 4 n). Rated motor frequency given on the nameplate. The factory setting is 50 Hz, or preset to 60 Hz if [Standard mot. freq] (L F r) is set to 60 Hz.				
n 5 P	[Rated motor speed]	0 to 65,535 rpm	According to drive rating		
	This parameter cannot be accessed if [Motor control type] (L L L) page 105 is set to [Sync. mot.] (5 4 n). 0 to 9,999 rpm then 10.00 to 65.53 krpm on the integrated display terminal. If, rather than the rated speed, the nameplate indicates the synchronous speed and the slip in Hz or as a %, calcuspeed as follows:				
*	Nominal speed = Synchronous speed x $\frac{100 - \text{slip as a } \%}{100}$				
	Nominal speed = Synchronous speed x $\frac{50 - \text{slip in Hz}}{50}$ (50 Hz motors) or				
	Nominal speed = Synchronous speed x $\frac{60 - \text{slip in Hz}}{60}$ (60 Hz motors).				

DRI- > CONF > FULL > DRC- > ASY-

Code	Name / Description	Adjustment range	Factory setting		
Eun	[Auto tuning]		[No] (n a)		
()	▲ WARNING				
₹ 2 s	UNEXPECTED MOVEMENT Autotuning moves the motor in order to tune the control loops. • Only start the system if there are no persons or obstructions in the zone of operation. Failure to follow these instructions can result in death, serious injury, or equipment damage.				
	During autotuning, the motor makes small movements, noise development and oscillations of the system are normal.				
	 - Auto-tuning is only performed if no stop command has been activated. If a "freewheel stop" or "fast stop" function has been assigned to a logic input, this input must be set to 1 (active at 0). - Auto-tuning takes priority over any run or prefluxing commands, which will be taken into account after the auto-tuning sequence. 				
	 If auto-tuning detects a fault, the drive displays [No action] (n a) and, depending on the configuration of [Autotune fault mgt] (E n L) page 268, may switch to [Auto-tuning] (E n F) fault mode. Auto-tuning may last for 1 to 2 seconds. Do not interrupt the process. Wait for the display to change to [No action] (n a). 				
	Note: Motor thermal state has a big influence on tune result. Make the tune with the motor stopped and cold. To redo a tune of the motor, wait that it is completely stopped and cold. Set first [Auto tuning] (£ u n) to [Erase tune] (£ L n), then redo the motor tuning. The use of the motor tuning without doing a [Erase tune] (£ L n) first is used to get the thermal state estimation of the motor. In any case, the motor has to be stopped before performing a tune operation. Cable length has an influence on the Tune result. If the cabling is modified, it is necessary to redo the tune operation.				
9E5	[No action] (¬¬¬): Auto-tuning not in progress [Do tune] (¬¬¬): Auto-tuning is performed immediatly if possible, then the parameter automatically changes to [No action] (¬¬¬¬). If the drive state does not allow the tune operation immediately, the parameter changes to [No] (¬¬¬¬) and the operation must be done again. [Erase tune] (¬¬¬¬): The motor parameters measured by the auto-tuning function are reseted. The default motor parameters values are used to control the motor. [Auto tuning status] (¬¬¬¬¬) is set to [Not done] (¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬¬				
Ε ω 5	[Auto tuning state]		[Not done] (L A L)		
	(for information only, cannot be modified) This parameter is not saved at drive power off. It shows the Autotuning status since last power on.				
EAB PEnd ProG FAiL donE					
Stun	[Tune selection]		[Default] (E A b)		
£ A b ∏ E A S C ∪ S	(for information only, cannot be modified) [Default] (E R b): The default values are used to control the motor [Measure] (R E R 5): The values measured by the auto-tuning function are used to control the motor				
Lunu	[Auto tuning usage]		[Therm Mot] (E Π)		
	This parameter shows the way used to modify the moto	or parameters according to its estimated	thermal state.		
C F	[No] ($_{\Pi}$ $_{\square}$): No thermal state estimation [Therm Mot] ($_{L}$ $_{\Pi}$): Statoric thermal state estimation based on nominal current and current consumed by the motor [Cold tun] ($_{L}$ $_{L}$): Statoric thermal state estimation based on statoric resistance measured at the first cold tune and tune done at each power up				

DRI- > CONF > FULL > DRC- > ASY-

Code	Name / Description	Adjustment range	Factory setting					
Aut	[Automatic autotune]		[No] (n a)					
O	▲ WARNING							
🚡 2 s	 UNEXPECTED MOVEMENT If this function is activated, autotuning is p Verify that activating this function does 		d on.					
*	Failure to follow these instructions can	result in death, serious injury, or eq	uipment damage.					
	The motor must be stopped when switching on th [Automatic autotune] ($\mathcal{H} \sqcup \mathcal{E}$) is forced to [Yes] (of motor statoric resistance measured during the	ש בי בי (ב בי ת בי) if [Auto tuning usage] (ב בי ת בי) is s						
л с У Е 9	[No] (no): Function deactivated [Yes] (YES): A tune is automatically done at ea	ch power up						
FLu	[Motor fluxing]		[No] (F n o)					
(1)	 verify that using this setting does not refailure to follow these instructions will 	result in death or serious injury.						
🚡 2 s	NOTICE							
	OVERHEATING AND DAMAGE TO THE MOTOR Verify that the connected motor is properly rated for the flux current to be applied in order to avoid overheating and damage to the motor. Failure to follow these instructions can result in equipment damage.							
	If [Motor control type] ([L L) page 105 is set to In order to obtain rapid high torque on startup, ma In [Continuous] (F [L) mode, the drive automa In [Not cont.] (F [L) mode, fluxing occurs when The flux current is greater than [Rated mot. current is then adjusted to the motor magnetizing current	agnetic flux needs to already have been esta tically builds up flux when it is powered up. the motor starts up. ent] (n [r) (configured rated motor current)	blished in the motor.					
F n C F C E F n c	[Continuous] ($F \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$	eel] (n 5 L)	,, <u> </u>					
	If [Motor control type] ([L L) page 105 is set to alignment of the rotor and not the fluxing. If [Brake assignment] (L L [) page 194 is not [I							

DRI- > CONF > FULL > DRC- > ASY-

Code	Name / Description	Adjustment range	Factory setting
ПРС	[Motor param choice]		[Mot Power] (nPr)
*			
	[Mot Power] (nPr) [Mot Cos] (Lo 5)		

(1) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

DRI- > CONF > FULL > DRC- > SYN-

Asynchronous motor parameters: Expert mode

Code	Name / Description	Adjustment range	Factory setting					
A59-	[ASYNC. MOTOR]							
r 5 A	[Cust stator resist.]	0 to 65,535 mOhm	0 mOhm					
★ (1)	Cold state stator resistance (per winding), modifiable value. The factory setting is replaced by the result of the auto-tu		I.					
LFA	[Lfw] 0 to 655.35 mH 0 mH							
*	Cold state leakage inductance, modifiable value. The factory setting is replaced by the result of the auto-tu	ning operation, if it has been performed	1.					
ı d A	[ldw] 0 to 6,553.5 A 0 A							
*	Customer adjusted magnetizing current. The factory setting is replaced by the result of the auto-tu	ning operation, if it has been performed	1.					
Er A	[Cust. rotor t const.] 0 to 65,535 ms 0 ms							
*	Customer adjusted rotor time constant. The factory setting is replaced by the result of the auto-tu	ning operation, if it has been performed	1.					

(1) On the integrated display unit: 0 to 9,999 then 10.00 to 65.53 (10,000 to 65,535).



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

DRI- > CONF > FULL > DRC- > SYN-

Synchronous motor parameters

These parameters can be accessed if [Motor control type] (E E) page 105 is set to [Sync. mot.] (5 $\frac{1}{2}$ $\frac{1}{2}$). In this case, the asynchronous motor parameters cannot be accessed.

Once the drive is chosen:

1- Enter the motor nameplate.

2 - Perform the tune.

- Do an [Auto tuning] (L u n)
- Check the state of the synchronous motor saliency (See page <u>113</u>.)

If [Saliency mot. state] (5 $\Pi \circ E$) displays [Med salient] ($\Pi L \circ E$) or [High salient] ($H L \circ E$)

- follow the procedure below "3 Improve the tune result" and
- follow the the procedure below "4 Adjust PHS"

Or if [Saliency mot. state] (5 $\Pi \circ E$) displays [Low salient] (L L 5)

- follow the the procedure below "4 - Adjust PHS"

3 - Improve the tune results.

NOTICE

OVERHEATING AND DAMAGE TO THE MOTOR

- Verify that the motor is properly rated for the maximum current to be applied to the motor.
- Consider the duty cycle of the motor and all factors of your application including derating requirements in determining the current limit.

Failure to follow these instructions can result in equipment damage.

- Do a second (L u n) after the (T L r) modification.

4 - Adjust PHS.

Adjust [Syn. EMF constant] (PH5) to have optimal behavior (See page 116.)

- Start the motor at minimal stable frequency available on the machine (without load).
- Check and note the [% error EMF sync] (r d R E) value. (See page 117)
 - If the [% error EMF sync] (r d R E) value is lower than 0%, then [Syn. EMF constant] (P H 5) may be increased.
 - If the [% error EMF sync] (¬ d R E) value is upper than 0%, then [Syn. EMF constant] (P H 5) may be reduced.

[% error EMF sync] (r d R E) value should be closed to 0%.

• Stop the motor for modify PH5 in accordance with the value of the rd RE (previously noted).

Advices:

The drive must be chosen to have enough current according to the need of behavior, but not too much, to have enough accuracy in the current measurement, especially with the high frequency signal injection (see **[HF inj. activation]** (*HF I*) page <u>116</u>).

Performances may be higher on high saliency motors by activating high frequency injection function (see **[HF inj. activation]** (*HF I)* page <u>116</u>).

Code	Name / Description	Adjustment range	Factory setting					
dr[-	[MOTOR CONTROL] (continued)							
5 y n -	[SYNCHRONOUS MOTOR]							
n E r S	[Nominal I sync.]	0.25 to 1.5 In (1)	According to drive rating					
*	Rated synchronous motor current given on the nameplate.							
PP n 5	[Pole pairs]	1 to 50	According to drive rating					
*	Number of pairs of poles on the synchronous motor.							
n 5 P 5	[Nom motor spdsync]	0 to 48,000 rpm	According to drive rating					
(2)	Rated motor speed given on the nameplate.							
£ 9 5	[Motor torque]	0.1 to 6,553.5 Nm	According to drive rating					
*	Rated motor torque given on the nameplate.							
Eun	[Auto tuning]		[No] (n a)					
()	▲ WARNIN	IG						
2 s	[Do tune] (9 E 5): Auto-tuning is performed immediatly if possible, then the parameter automatically changes to [No action] (n a). If the drive state does not allow the tune operation immediately, the parameter changes to [No] (n a) and the operation must be done again.							
E u 5	[Auto tuning state] (for information only, cannot be modified) This parameter is not saved at drive power off. It shows the Autotuning st	atus since last power on.	[Not done] (E R b)					
EAB PEnd ProG FAiL donE	[Not done] (F F b): Autotune is not done [Pending] (P E n d): Autotune has been requested but not yet performed [In Progress] (P r D D): Autotune is in progress [Failed] (F F I L): Autotune has detected a fault [Done] (d D n E): The motor parameters measured by the auto-tuning full		the motor					

DRI- > CONF > FULL > DRC- > SYN-

Code	Name / Description	Name / Description Adjustment range Factory setting								
Stun	[Tune selection]		[Default] (E A b)							
	(for information only, cannot be modified) Note: Tune of the motor will increase significantly the performances.									
Е Я Ь П Е Я S С и S	[Default] (L R b): The default values are used to control the motor [Measure] (R E R 5): The values measured by the auto-tuning function are used to control the motor [Custom] (L u 5): The values set manually are used to control the motor									
Eunu	[Auto tuning usage]		[Therm Mot] (E Π)							
	This parameter shows the way used to modify the motor parameters accord	ing to its estimated then	mal state.							
Ε Ε Ε Π	[No] (n a): No thermal state estimation [Therm Mot] (L									
Aut	[Automatic autotune]		[No] (n o)							
45	▲ WARNING	3								
()	UNEXPECTED MOVEMENT	المالية								
	If this function is activated, autotuning is performed each time the • Verify that activating this function does not result in unsafe cor									
₹ 2 s	Failure to follow these instructions can result in death, serior		ent damage.							
	The motor must be stopped when switching on the drive. [Automatic autotune] (# u £) is forced to [Yes] (y E 5) if [Auto tuning use of motor statoric resistance measured during the tune is used to estimate the									
n o YE 5	[No] (n a): Function deactivated [Yes] (y E 5): A tune is automatically done at each power up									
5 Π o Ł	[Saliency mot. state]									
*	(for information only, cannot be modified) Information on synchronous motor saliency. This parameter can be accessed if [Tune selection] (5 ½ µ n) is set to [Me Note: In case of motor with low saliency, the standard control law is advised.									
	[No] (no): Tune not done [Low salient] (L L 5): Low saliency level (Recommended configuration: [Al	agle cetting type] / 🛮 E	L) = [PS] olign] / E							
223	[PSIO align] ($P = 0$) and [HF inj. activation] ($H = 0$) = [No] ($D = 0$).									
ПL5	[Med salient] ($\Pi L S$): Medium saliency level ([Angle setting type] ($\Pi S L E$) [HF inj. activation] ($\Pi E E E$) = [Yes] ($\Pi E E E$) could work).) = [SPM align] (5 <i>P</i> Π <i>F</i>	is possible.							
HLS	[High salient] (HL 5): High saliency level ([Angle setting type] (H 5 L) = [HF inj. activation] (HF I) = [Yes] (HE 5) is possible).	[IPM align] (, P П Я) is	possible.							
A S E	[Angle setting type]		[PSIO align.] (P5 10)							
*	Mode for measuring the phase-shift angle. Visible only if [Motor control type [PSI align] (P5) and [PSIO align] (P5) are working for all type of symmetry [IPM align] (P P P P) increase performances depending on the type of symmetry [IPM align] (P P P P) increase performances depending on the type of symmetry [IPM align] (P P P P) increase performances depending on the type of symmetry [IPM align] (P P P P) increase performances depending on the type of symmetry [IPM align] (P P P P) increase performances depending on the type of symmetry [IPM align] (P P P P) increase performances depending on the type of symmetry [IPM align] (P P P P) increase performances depending on the type of symmetry [IPM align] (P P P P) increase performances depending on the type of symmetry [IPM align] (P P P P) increase performances depending on the type of symmetry [IPM align] (P P P P) increase performances depending on the type of symmetry [IPM align] (P P P P) increase performances depending on the type of symmetry [IPM align] (P P P P) increase performances depending on the type of symmetry [IPM align] (P P P) increase performances depending on the type of symmetry [IPM align] (P P P) increase performances depending on the type of symmetry [IPM align] (P P P) increase performances depending on the type of symmetry [IPM align] (P P P) increase performances depending on the type of symmetry [IPM align] (P P P) increase performances depending on the type of symmetry [IPM align] (P P P) increase performances depending on the type of symmetry [IPM align] (P P P) increase performances depending on the type of symmetry [IPM align] (P P P) increase performances depending on the type of symmetry [IPM align] (P P) increase performances depending on the type of symmetry [IPM align] (P P) increase performances depending on the type of symmetry [IPM align] (P P) increase performances depending on the type of symmetry [IPM align] (P P) increase performances depending on the type of symmetry [IPM align] (P P) increase performances performanc	nchronous motors. [SP								
, P П A	[IPM align] (, P II H): Alignment for IPM motor. Alignment mode for Interior									
5 <i>P</i> П Я	of motor has a high saliency level). It uses high frequency injection, which is [SPM align] (5 P Π Π): Alignment for SPM motor. Mode for Surface-mounted									
P5 .	motor has a medium or low saliency level). It uses high frequency injection, [PSI align] (P5): Pulse signal injection. Standard alignment mode by pul [PSIO align] (P5): Pulse signal injection - Optimized. Standard optimiz phase shift angle measurement time is reduced after the first run order or tune operation, even if the drive has been to	which is less noisy than se signal injection. red alignment mode by p	standard alignment mode.							
0.0	[No align] (n a): No alignment	umeu on.								

DRI- > CONF > FULL > DRC- > SYN-

Code	Name / Description	Adjustment range Factory setting						
HF i	[HF inj. activation] [No] (n							
*	Activation of high frequency signal injection in RUN. This function allows to at low speed without speed feedback. Note: The more the saliency is high, the more the [HF inj. activation] (HF In order to ensure the performances, it could be necessary to adjust the spee [Speed time integral] (5 , E) and [Speed prop. gain] (5 PE), see page 1 (Expert parameters [HF pll bandwith] (5 PE) and [HF pll dump. factor] High frequency injection is not efficient with low saliency motors (see [Saliel It is advised to have 4 kHz of pwm frequency ([Switching freq.] (5 F r)). In case of instability with no load, it is advised to decrease [Speed prop. gain] adjust the speed loop parameters to have the dynamic behavior and the PLI speed. In case of instability with load, it could help to increase the [Angle error County 1] and the properties of th	i) function will be efficied loop parameters ([K s 18) and the speed estin (5 P F), see page 116) ncy mot. state] (5 N a ain] (5 P L) and [HF pll L gains to have a good state of the state	ent. speed loop filter] (5 F L), nation phase locked loop L) page 114). bandwith] (5 P b). Then, speed estimation at low					
ne	[No] (n a): Function deactivated							
9 E S	[Yes] (YE 5): High frequency injection is used for speed estimation							

- (1) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.
- (2) On the integrated display unit: 0 to 9,999 then 10.00 to 65.53 (10,000 to 65,536).



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

DRI- > CONF > FULL > DRC- > SYN-

Synchronous motor: Expert mode

Code	Name / Description	Adjustment range	Factory setting					
5 y n -	[SYNCHRONOUS MOTOR]							
r 5 A S	[Cust. stator R syn]	0 to 65,535 mOhm	0 mOhm					
*	Cold state stator resistance (per winding). The factory setting is rep	placed by the result of the auto-tu	ning operation, if it has been					
Ω	performed. The value can be entered by the user, if he knows it.							
(1)	[Autotuno I di ovio]	0 to 655.35 mH	0 mH					
L d 5	[Autotune L d-axis] Axis "d" stator inductance in mH (per phase).	0 10 033.33 1111	Omin					
*	On motors with smooth poles [Autotune L d-axis] ($L d 5$) = [r inductance L.					
L 95	[Autotune L q-axis]	0 to 655.35 mH	0 mH					
*	Axis "q" stator inductance in mH (per phase). On motors with smooth poles [Autotune L d-axis] (L d 5) = [Autotune L d-axis] (/	r inductance L.					
P H S	[Syn. EMF constant]	0 to 6,553.5 mV/rpm	0 mV/rpm					
★ (1)	Synchronous motor EMF constant, in mV per rpm (peak voltage pPHS adjustment allows to reduce the current in operation without							
Fr55	[Nominal freq sync.]	10 to 800 Hz	nSPS * PPnS / 60					
*	Nominal motor frequency for synchronous motor in Hz unit. Automatically updated according to							
()	[Nom motor spdsync] (n 5 P 5) and [Pole pairs] (P P n 5) data	1 .						
5 <i>P b</i>	[HF pll bandwith]	0 to 100 Hz	25 Hz					
*	Bandwidth of the stator frequency PII.		1					
5 <i>P F</i>	[HF pll dump. factor]	0 to 200%	100%					
*	Dumping factor of the stator frequency PII.							
PEC	[Angle error Comp.]	0 to 500%	0%					
*	Error compensation of the angle position in high frequency mode. It increases performances at low speed in generator and motor m	ode, particularly for SPM motors.						
Auto	1							
Fri	[HF injection freq.]	250 to 1,000 Hz	500 Hz					
*	Frequency of the high frequency injection signal. It has an influence estimation accuracy.	ce on the noise during angle shift	measurement and speed					
Hir	[HF current level]	0 to 200%	25%					
*	Ratio for the current level of the high frequency injection signal. It had speed estimation accuracy.	nas an influence on the noise duri	ng angle shift measurement					
ПСг	[PSI align curr. max]	[Auto] (Auto) to 300%	[Auto] (A u L a)					
*	Current level in % of [Nominal I sync.] (¬ [¬ 5) for [PSI align] (modes. This parameter has an impact on the inductor measurement that current must be equal or higher than the maximum current left [PSI align curr. max] (¬ [¬) is set to [Auto] (¬ [¬ [¬]] during the tune operation and 100% of [Nominal I sync.] (¬ [¬]] alignment ([PSI align] (P 5) or [PSIO align] (P 5))).	ent. [PSI align curr. max] () is used for tune operation. instability may occur. [Nominal I sync.] (n [r 5)					
ıLr	[Injection level align]	0 to 200%	50%					
*	Current level in % of [Nominal I sync.] (~ 5) for high frequen	cy phase-shift angle measureme	nt IPMA type.					

DRI- > CONF > FULL > DRC-

Code	Name / Description	Adjustment range Factory setti				
5 10	[Boost level align.]	0 to 200%	100%			
*	Current level in % of [Nominal I sync.] (¬ [- 5) for high frequency p	hase-shift angle measurement	SPMA type.			
rdAE	[% error EMF sync]	-3276.7 to 3275.8 %	-			
	Ratio D-Axis Current Use r d RE to asjust [Syn. EMF constant] (PH5), r d RE should b If the [% error EMF sync] (r d RE) value is lower than 0%, then [Syn. If the [% error EMF sync] (r d RE) value is upper than 0%, then [Syn.	EMF constant] (PH 5), may b				

(1) On the integrated display unit: 0 to 9,999 then 10.00 to 65.53 (10,000 to 65,536).



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

Code	Name / Description	Adjustment range	Factory setting							
dr[-	[MOTOR CONTROL] (continued)									
5 P G	[Speed prop. gain]	0 to 1,000%	40%							
*	Speed loop proportional gain. Visible if [Motor control type] ([E E] is not set to [Standard] (5 E a	4) [V/F 5pts] (F 5) or [V/F Qu	uad 1 (F. 9)							
()	violate in [mater control type] (2.2.2) to not control [etailitation] (3.2.1)	3), [th. sp.o] (2) - 1) o. [th. qc	(B) //							
5 P G u	[UF inertia comp.]	0 to 1,000%	40%							
*	Inertia factor for following motor control laws. Visible if [Motor control type] (L + L) is set to [Standard] (5 + d), [V/F 5pts] (U F 5) or [V/F Quad.] (U F 7).									
5 , E	[Speed time integral]	1 to 65,535 ms	63 ms							
* ()	Speed loop integral time constant. Visible if [Motor control type] ([L L L) is not set to [Standard] (5 L L	d), [V/F 5pts] (u F 5) or [V/F Qu	uad.] (u F 9).							
5 F C	[K speed loop filter]	0 to 100	65							
*	Speed filter coefficient (0(IP) to 100(PI)).		,							
()										
FFH	[Spd est. filter time]	0 to 100 ms	6.4 ms							
*	Accessible in Expert mode only. Frequency to filter the estimated speed.									
C r E F	[Cur. ref. filter time]	0 to 100 ms	3.2 ms							
*	Accessible in Expert mode only. Filter time of the current reference filter [of control law (if [No] (n p):	stator natural frequency)].								
uFг	[IR compensation]	0 to 200%	100%							
()	Used to optimize torque at very low speed, or to adapt to special cases [IR compensation] (u F r)). If there is insufficient torque at low speed can avoid the motor to start (locking) or change the current limiting m	d, increase [IR compensation]								
5 L P	[Slip compensation]	0 to 300%	100%							
* O	This parameter cannot be accessed if [Motor control type] (L b b i This parameter is written at 0% when [Motor control type] (L b b is Adjusts the slip compensation around the value set by the rated motor. The speeds given on motor nameplates are not necessarily exact. If slip setting is lower than actual slip: The motor is not rotating at the the reference. If slip setting is higher than actual slip: The motor is overcompensated.	s set to [V/F Quad.] (ut at a speed lower than							
ا ب	[U1]	0 to 800 V according to rating	0 V							
*	V/F profile setting. This parameter can be accessed if [Motor control type] ([et to [V/F 5pts] (u F 5).	1							
FI	[F1]	0 to 599 Hz	0 Hz							
*	V/F profile setting. This parameter can be accessed if [Motor control type] ([L L) is s	et to [V/F 5pts] (u F 5).								
u 2	[U2]	0 to 800 V according to rating	0 V							
*	V/F profile setting. This parameter can be accessed if [Motor control type] ([L L) is s	et to [V/F 5pts] (u F 5).								
F 2	[F2]	0 to 599 Hz	0 Hz							
*	V/F profile setting. This parameter can be accessed if [Motor control type] ([L L]) is s	et to [V/F 5pts] (u F 5).								

DRI- > CONF > FULL > DRC-

Code	Name / Description	Adjustment range	Factory setting						
ы Э	[U3]	0 to 800 V according to rating	0 V						
*	V/F profile setting. This parameter can be accessed if [Motor control type] ([l	E <u>L</u>) is set to [V/F 5pts] (<u>u</u> F 5).							
F 3	[F3]	0 to 599 Hz	0 Hz						
*	V/F profile setting. This parameter can be accessed if [Motor control type] ([l	E L) is set to [V/F 5pts] (u F 5).							
4 ں	[U4]	0 to 800 V according to rating	0 V						
*	V/F profile setting. This parameter can be accessed if [Motor control type] (L l	E L) is set to [V/F 5pts] (u F 5).							
F 4	[F4]	0 to 599 Hz	0 Hz						
*	V/F profile setting. This parameter can be accessed if [Motor control type] ([]	E L) is set to [V/F 5pts] (u F 5).							
5 ں	[U5]	0 to 800 V according to rating	0 V						
*	V/F profile setting. This parameter can be accessed if [Motor control type] (L l	E L) is set to [V/F 5pts] (u F 5).							
F 5	[F5]	0 to 599 Hz	0 Hz						
*	V/F profile setting.	- L) is set to IV/E Entel (E E)							
EL,	This parameter can be accessed if [Motor control type] (L l [Current Limitation]	0 to 1.5 ln (1)	1.5 ln (1)						
	[Current Limitation]	0 to 1.0 m (1)	1.0 m (1)						
	NC.	TICE							
*		71102							
()	OVERHEATING AND DAMAGE TO THE MOTOR • Varify that the mater is preparly rated for the maximum current to be applied to the mater.								
(2	 Verify that the motor is properly rated for the maximum current to be applied to the motor. Consider the duty cycle of the motor and all factors of your application including derating requirements in 								
	determining the current limit. Failure to follow these instructions can result in equipment damage.								
	First current limitation. Note: If the setting is less than 0.25 In, the drive may lock in (see page 256). If it is less than the no-load motor current, the		e if this has been enabled						
5 F L	[Switch. freq type]		[SFR type 1] (HF I)						
HF	The motor switching frequency will be modified (reduced) wh	en the internal temperature of the drive v	vill be too high.						
ПГ	Allows the system to adapt the switching frequency according	g to the motor frequency.							
HF	[SFR type 2] (HF 2): Motor noise optimization (for high swith Allows the system to keep a constant chosen switching frequ		er the motor frequency						
	[Output frequency] (rFr).		or the meter nequency						
	In the event of overheating, the drive automatically decreases It is restored to its original value when the temperature return								
5 F r	[Switching freq.]	2 to 16 kHz	4 kHz						
	temening neggi								
()	NC	NOTICE							
	DAMAGE TO THE MOTOR								
	Verify that the switching frequency of the drive does not exceed 4 kHz if the EMC filter is disconnected for								
	operation of the drive in an IT mains. Failure to follow these instructions can result in equipment damage.								
	This applies to the following drive versions: ATV320•••M2								
	Switching frequency setting.								
	Adjustment range: The maximum value is limited to 4 kHz if [Motor surge limit] (5 \(\omega L\)) parameter page 120 is configured. Note: In the event of excessive temperature rise, the drive will automatically reduce the switching frequency and reset it once the temperature returns to normal. In case of high speed motor, it is advised to increase the Pulse Width Modulation (PWM) frequency [Switching freq.] (5 F r)								
	at 8, 12 or 16 kHz.	. , , ,							

Code	Name / Description	Adjustment range	Factory setting
nrd	[Noise reduction]		[No] (n a)
	Random frequency modulation helps to prevent any resonance, which	may occur at a fixed frequency	y.
л о У Е 5	[No] (no): Fixed frequency [Yes] (9E 5): Frequency with random modulation		
ь о Я	[Boost activation]		[Dynamic] (d Yn A)
n a d y n A S L A L	[Inactive] (n p): No boost [Dynamic] (d y n R): Dynamic boost [Static] (5 L R L): Static boost		
600	[Boost]	-100 to 100%	0%
*	This parameter can be accessed if [Boost activation] (b a R) is not s Adjustment of the motor magnetizing current at low speed, as a % of the increase or reduce the time taken to establish the torque. It allows grad [Action Boost] (F R b). Negative values apply particularly to tapered Magnetizing current Positive [Boost] (b a a) Rated magnetizing current Negative [Boost] (b a a) [Action Boost] (F R b)	ne rated magnetizing current. T dual adjustment up to the frequ	
FAL	[Action Boost]	0 to 599 Hz	0 Hz
*	This parameter can be accessed if [Boost activation] (b a R) is not s Frequency above which the magnetizing current is no longer affected by		
5 u L	[Motor surge limit.]		[No] (n a)
	This function limits motor overvoltages and is useful in the following ap - NEMA motors - Japanese motors - Spindle motors - Rewound motors This parameter can remain set to [No] (na) for 230/400 V motors used the motor does not exceed: - 4 m with unshielded cables - 10 m with shielded cables Note: When [Motor surge limit.] (5 u L) is set to [Yes](4 E 5), the mis modified, see page 120.	d at 230 V, or if the length of cal	
7 E S	[No] (no): Function inactive [Yes] (YE 5): Function active		
5 o P	[Volt surge limit. opt]		10 μs
*	Optimization parameter for transient overvoltages at the motor terminals (5 μ L) is set to [Yes] ($\frac{1}{2}$ E $\frac{1}{2}$).	s. This parameter can be access	sed if [Motor surge limit.]
6	Set to 6, 8 or 10 μ s, according to the following table.		
8 10	Note: This parameter is useful for ATV320●●●N4● drives.		



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

()

Parameter that can be modified during operation or when stopped.

DRI- > CONF > FULL > DRC-

The value of the **[Volt surge limit. opt]** ($5 \, \alpha \, P$) parameter corresponds to the attenuation time of the cable used. It is defined to help to prevent the superimposition of voltage wave reflections resulting from long cable lengths. It limits overvoltages to twice the DC bus rated voltage.

The tables on the following page give examples of correspondence between the **[Volt surge limit. opt]** (5 a P) parameter and the length of the cable between the drive and the motor. For longer cable lengths, an output of the filter or a dV/dt protection filter must be used.

For motors in parallel, the sum of all the cable lengths must be taken into consideration. Compare the length given in the table row corresponding to the power for one motor with that corresponding to the total power, and select the shorter length.

Example: Two 7.5 kW (10 HP) motors

Take the lengths on the 15 kW (20 HP) table row, which are shorter than those on the 7.5 kW (10 HP) row, and divide by the number of motors to obtain the length per motor (with unshielded "GORSE" cable and SOP = 6, the result is 40/2 = 20 m maximum for each 7.5 kW (10 HP) motor).

In special cases (for example, different types of cable, different motor powers in parallel, different cable lengths in parallel, etc.), we recommend using an oscilloscope to check the overvoltage values obtained at the motor terminals.

To retain the overall drive performance, do not increase the SOP value unnecessarily.

Tables giving the correspondence between the SOP parameter and the cable length, for 400 V supply mains

Altivar 320	Мс	otor		cross- n (min)									
Reference	Powe	Power			Unshielded Type H07 I			Shielded "G			Shielded " Type 2950		cable
	kW	HP	in mm²	AWG	SOP = 10	SOP = 8	SOP = 6	SOP = 10	SOP = 8	SOP = 6	SOP = 10	SOP = 8	SOP=6
ATV320U04N4●	0.37	0.50	1.5	14	100 m	70 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U06N4●	0.55	0.75	1.5	14	100 m	70 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U07N4●	0.75	1	1.5	14	100 m	70 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U11N4●	1.1	1.5	1.5	14	100 m	70 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U15N4●	1.5	2	1.5	14	100 m	70 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U22N4●	2.2	3	1.5	14	110 m	65 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U30N4●	3	-	1.5	14	110 m	65 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U40N4●	4	5	2.5	12	110 m	65 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U55N4●	5.5	7.5	4	10	120 m	65 m	45 m	105 m	85 m	65m	50 m	40 m	30 m
ATV320U75N4●	7.5	10	6	8	120 m	65 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320D11N4●	11	15	10	8	115 m	60 m	45 m	100 m	75 m	55 m	50 m	40 m	30 m
ATV320D15N4●	15	20	16	6	105 m	60 m	40 m	100 m	70 m	50 m	50 m	40 m	30 m

For 230/400 V motors used at 230 V, the [Motor surge limit.] ($5 \, \text{u} \, \text{L}$) parameter can remain set to [No] ($7 \, \text{e}$).

Code	Name / Description	Adjustment range	Factory setting
ubr	[Braking level]	335 to 820 V	According to drive rating voltage
()	Braking transistor command level.		
LЬЯ	[Load sharing]		[No] (n a)
★	When 2 motors are connected mechanically and therefore at the same spe can be used to improve torque distribution between the two motors. To do to this parameter can only be accessed if [Motor control type] (L L L) page [No] (n p): Function inactive [Yes] (U E 5): Function active	this, it varies the speed	based on the torque.
LЬC	[Load correction]	0 to 599 Hz	0 Hz
*	Rated correction in Hz. This parameter can be accessed if [Load sharing] (L b R) is set to [Yes] (Torque Nominal torque Nominal torque LbC Frequency	¥ € 5).	

*


These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

()


Parameter that can be modified during operation or when stopped.


Load sharing, parameters that can be accessed at expert level

Principle:

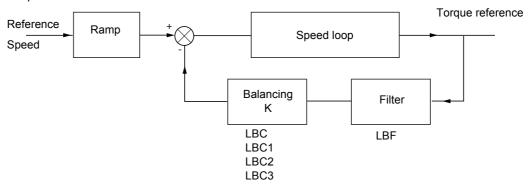

The load sharing factor K is determined by the torque and speed, with two factors K1 and K2 (K = K1 x K2).

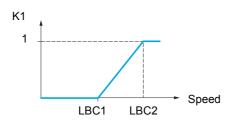

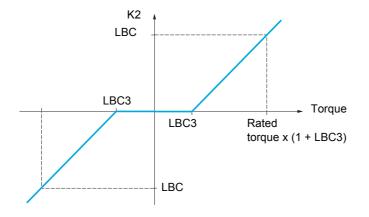

DRI- > CONF > FULL > I_O-

Code	Name / Description	Adjustment range	Factory setting
LBEI	[Correction min spd]	0 to 598.9 Hz	0 Hz
* ()	This parameter can be accessed if [Load sharing] (L b R) is set to [Yes] Minimum speed for load correction in Hz. Below this threshold, no correct speed if this would hamper rotation of the motor.		ncel correction at very low
r P C S	[Correction max spd]	[Correction min spd] (L b [1) + 0.1 at 599 Hz	0.1 Hz
* ()	This parameter can be accessed if [Load sharing] (<i>L b R</i>) is set to [Yes] Speed threshold in Hz above which maximum load correction is applied.	(YES).	
L b C 3	[Torque offset]	0 to 300%	0%
* ()	This parameter can be accessed if [Load sharing] (<i>L b R</i>) is set to [Yes] Minimum torque for load correction as a % of the rated torque. Below this torque instabilities when the torque direction is not constant.		are made. Used to avoid
LЬF	[Sharing filter]	0 to 20 s	100 ms
* ()	This parameter can be accessed if [Load sharing] (L b R) is set to [Yes] Time constant (filter) for correction in ms. Used in the event of flexible me		to avoid instabilities.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

DRI- > CONF > FULL > I_O-

Inputs / outputs CFG

The parameters in the **[INPUTS / OUTPUTS CFG]** ($_{1}$ $_{2}$ $_{3}$ -) menu can only be modified when the drive is stopped and no run command is present.

Code	Name / Description	Adjustment range	Factory setting
Full	[FULL] (continued)		
1 - 0 -	[INPUTS / OUTPUTS C	FG]	
FCC	[2/3 wire control]		[2 wire] (2 C)
2 s		▲ WARNING	
	assignments of the digital in Verify that this change is co	MENT OPERATION d, the parameters [Reverse assign.] (r r 5) and [2 wire nputs are reset to the factory setting. compatible with the type of wiring used. structions can result in death, serious injury, or equip	
20	/	s): This is the input state (0 or 1) or edge (0 to 1 or 1 to 0) which	controls running or stopping.
	1 2 2 2	Ll1: forward Llx: reverse	
3 C		ds): A "forward" or "reverse" pulse is sufficient to command starti	ng, a "stop" pulse is sufficient
	'qqqi L	LI1: stop LI2: forward LIx: reverse	
FCF	[2 wire type]		[Transition] (E r n)
*		▲ WARNING	
₹ 2 s	UNANTICIPATED EQUIPMENT OPERATION Verify that the parameter setting is compatible with the type of wiring used. Failure to follow these instructions can result in death, serious injury, or equipment damage.		
LEL Ern PFe	[Transition] (E r n): A change of after a break in the power supply	aken into account for run (1) or stop (0) of state (transition or edge) is necessary to initiate operation, in ord or 1 is taken into account for run or stop, but the "forward" input ta	

DRI- > CONF > FULL > I_O- > L1-

Code	Name / Description	Adjustment range	Factory setting
гип	[Drive Running]		[No] (n a)
*	Assignment of the stop command. Visible only if [2/3 wire control] (£ [[) is set to [3 wire] (] [).		
6 L O I	[LI1] (L , I): Logical input LI1 if not in [I/O profile] (, a) [Cd00] (Cd00): In [I/O profile] (, a), can be switched with possible logic inputs [OL01] (a L 0 I): Function blocks: Logical Output 01		
o L 10	[OL10] (a L I D): Function blocks: Logical Output 10		
Frd	[Forward]		[LI1] (L , I)
	Assignment of the forward direction command.		
6 L O I	[LI1] (L , I): Logical input LI1 if not in [I/O profile] (, a) [Cd00] (Cd0]: In [I/O profile] (, a), can be switched with possible logic [OL01] (a L D I): Function blocks: Logical Output 01	inputs	
o L 10	[OL10] (L I D): Function blocks: Logical Output 10		
rr5	[Reverse assign.]		[LI2] (L , Z)
	Assignment of the reverse direction command.		
	[No] (n a): Not assigned [L11] (L , I): Logical input L11 [] (): See the assignment conditions on page 153		

DRI- > CONF > FULL > I_O- > L1-

Code	Name / Description	Adjustment range	Factory setting
L 1-	[LI1 CONFIGURATION]		
LIA	[LI1 assignment]		
	Read-only parameter, cannot be configured. It displays all the functions that are assigned to input LI1 in order to check for	r multiple assignments.	
	[No] (n assigned		
	[Run] (run): Run Enable [Forward] (Frd): Forward operation		
	[Reverse] (r r 5): Reverse operation		
	[Ramp switching] (P 5): Ramp switching		
	[Jog] (J a [): Jog operation		
	[+Speed] (u 5 P): + speed		
	[- speed] (d 5 P): - speed [2 preset speeds] (P 5 2): 2 Preset speeds		
	[4 preset speeds] (P 5 4): 4 Preset speeds		
	[8 preset speeds] (P 5 B): 8 Preset speeds		
	[Ref. 2 switching] (F [): Reference switching		
	[Freewheel stop] (n 5 L): Freewheel stop		
	[DC injection] (d [1): Injection DC stop [Fast stop] (F 5 L): Fast stop		
	[Forced local] (F L a): Forced local mode		
r 5 F	[Fault reset] (r 5 F): Fault reset		
	[Auto-tuning] (L u L): Auto-tuning		
	[Ref. memo.] (5 P II): Save reference [Pre Fluxing] (F L II): Motor fluxing		
	[Auto / manual] (P R u): PI(D) auto-manu		
	[PID integral reset] (P , 5): Integral shunting PI(D)		
	[2 preset PID ref.] (Pr2): 2 Preset PI(D) references		
	[4 preset PID ref.] (Pr 4): 4 Preset PI(D) references		
	[Torque limitation] (<i>E L F</i>): Permanent torque limitation [External fault] (<i>E L F</i>): External fault		
	[Output contact. fdbk] (r [H): Downstream contactor feedback		
	[2 config. switching] (
	[3 config. switching] (
	[2 parameter sets] (C H R I): Parameter switching 1 [3 parameter sets] (C H R 2): Parameter switching 2		
	[Activ. Analog torque limitation] (£ L C): Torque limitation: Activation (ana	alog input) by a logic inpu	ut
C C 5	[Cmd switching] ([[5): Command channel switching		
	[Fault inhibition] (, n H): Fault inhibition		
	[16 preset speeds] (P 5 1 5): 16 preset speeds [Current limit 2] (L C 2): Current limitation switching		
	[Ref 1B switching] (r [b): Reference channel switching (1 to 1B)		
	[Traverse control] (L r [): Traverse control		
	[Brake contact] (b [,): Brake logic input contact		
5 A F 5 A r	[Stop FW limit sw.] (5 A F): Stop switch forward [Stop RV limit sw.] (5 A F): Stop switch reverse		
dAF	[Slowdown forward] (d R F): Slowdown attained forward		
dAr	[Slowdown reverse] (d R r): Slowdown attained reverse		
C L 5	[Disable limit sw.] (L L 5): Limits switches clearing		
	[Drive lock (Line contact. ctrl)] (L E 5): Emergency stop		
rtr SnC	[Init. traverse ctrl.] (r + r): Reload traverse control [Counter wobble] (5 n L): Counter wobble synchronization		
	[Prod. reset] (¬ P A): Reset Product		
	[2 HSP] (5 H 2): High Speed 2		
	[4 HSP] (5 H 4): High Speed 4		
	[Preset spd2] (F P 5 1): Function key preset speed 1 assignment [Preset spd3] (F P 5 2): Function key preset speed 2 assignment		
	[PID ref. 2] (F P r I): Function key preset PI 1 assignment		
FPr2	[PID ref. 3] (FPr2): Function key preset PI 2 assignment		
	[+Speed] (F u 5 P): Function key faster assignment		
	[-Speed] (F <u>d</u> 5 P): Function key slower assignment [T/K] (F <u>b</u>): Function key bumpless assignment		
	[+speed around ref.] (u 5 ,): + Speed around ref		
	[-speed around ref.] (d 5 1): - Speed around ref		

Code	Name / Description	Adjustment range	Factory setting
u5	[+speed around ref.] (u 5 , ı): + Speed around ref [-speed around ref.] (d 5 , ı): - Speed around ref [IL01] (, L		
FЬгП	[FB start] (F b r 17): Function blocks: Run mode		
5 L S I 5 L S 2			
55 I I 55 I 2	,		
Sto I	[STO ch.1] (5 L D I): STO safety function Channel 1		
5 t o 2 5 N S I			
5 N S 2			
	Note: Safety function channels are available for LI3-LI4 and LI5-LI6 only.		
LId	[Ll1 On Delay]	0 to 200 ms	0 ms
	This parameter is used to take account of the change of the logic input to stand 200 milliseconds, in order to filter out possible interference. The change	,	- 1
1-0-	[INPUTS / OUTPUTS CFG] (continued)		
L 2 -	[LIX CONFIGURATION]		
to <i>L E -</i>	All the logic inputs available on the drive are processed as in the example for	or LI1 above, up to LI6.	
L 5 -	[LI5 CONFIGURATION]		
	Specific parameters for LI5 used as a pulse input.		
PIA	[RP assignment]		
	Read-only parameter, cannot be configured. It displays all the functions associated with the Pulse input in order to check,	, for example, for compat	ibility problems.
	Identical to [Al1 assignment] (# I I #) page 133.		
PıL	[RP min value]	0 to 20.00 kHz	0 kHz
	Pulse input scaling parameter of 0% in Hz * 10 unit.	<u> </u>	
PFr	[RP max value]	0 to 20.00 kHz	20.00 kHz
	Pulse input scaling parameter of 100% in Hz * 10 unit.		
PF i	[RP filter]	0 to 1,000 ms	0 ms
	I/O ext Pulse input cutoff time of the low-filter.		
LAI-	[LAX CONFIGURATION]		
LAS-	The 2 analog inputs Al1 and Al2 on the drive could be used as LI inputs and	are processed as in the	example for LI1 above.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.




To change the assignment of this parameter, press the ENT key for 2 s.


Configuration of analog inputs and Pulse input

The minimum and maximum input values (in volts, mA, etc.) are converted to % in order to adapt the references to the application.

Minimum and maximum input values:

The minimum value corresponds to a reference of 0% and the maximum value to a reference of 100%. The minimum value may be greater than the maximum value:

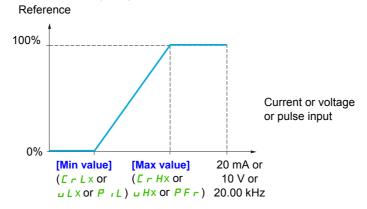


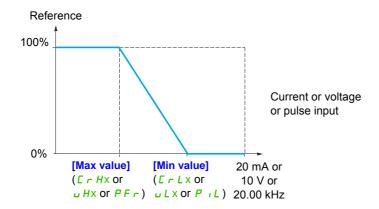



For +/- bidirectional inputs, the min. and max. are relative to the absolute value, for example +/- 2 to 8 V.

Range (output values): For analog inputs only:

This parameter is used to configure the reference range to $[0\% \rightarrow 100\%]$ or $[-100\% \rightarrow +100\%]$ in order to obtain a bidirectional output from a unidirectional input.

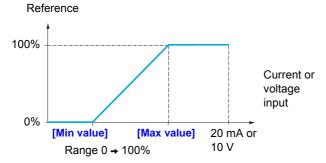

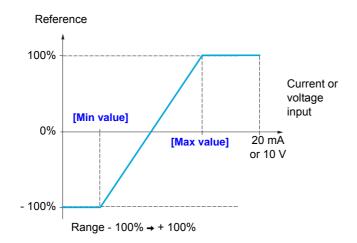

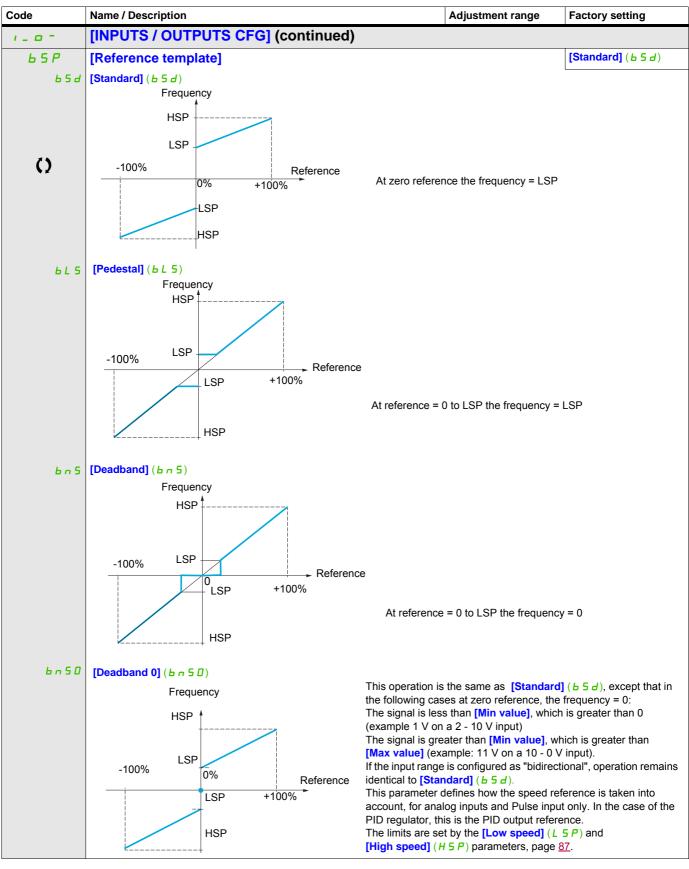





Parameter that can be modified during operation or when stopped.

Delinearization: For analog inputs only:

The input can be delinearized by configuring an intermediate point on the input/output curve of this input:

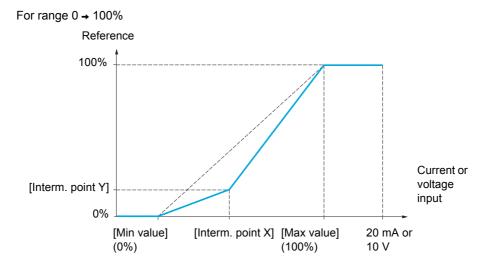

Note: For [Interm. point X], 0% corresponds to [Min value] and 100% to [Max value].

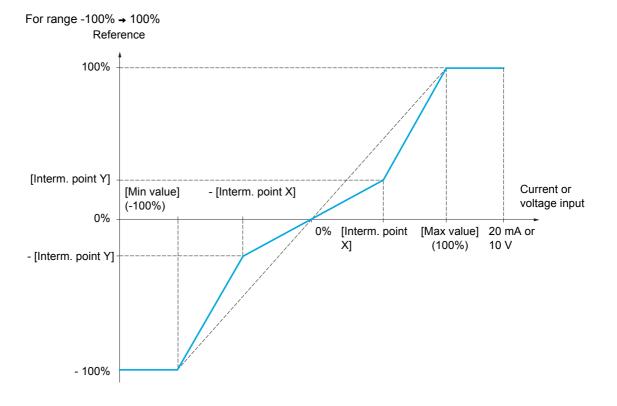

Code	Name / Description	Adjustment range	Factory setting
A , I -	[AI1 CONFIGURATION]		
A , IA	[Al1 assignment]		
	Read-only parameter, cannot be configured.		
	It displays all the functions associated with input Al1 in order to check, for example, for compatibility problems.		
	[No] (no): Not assigned		
Hol Fri	[AO1 assignment] (# a I): Analog output AO1 [Ref.1 channel] (F r I): Reference source 1		
Fr2	[Ref.2 channel] (F - 2): Reference source 2		
5 A 2 P . F	[Summing ref. 2] (5 # 2): Summing reference 2 [PID feedback] (P, F): PI feedback (PI control)		
E A A	[Torque limitation] (E R R): Torque limitation: Activation by an analog value	ıe	
d R ≥	[Subtract. ref. 2] (d R 2): Subtracting reference 2		
Р , П F Р ,	[Manual PID ref.] (P, II): Manual speed reference of the PI(D) regulator ([PID speed ref.] (F, P, I): Speed reference of the PI(D) regulator (predictive		
5 A 3	[Summing ref. 3] (5 F 3): Summing reference 3	,	
Fr 16 d A 3	[Ref.1B channel] (F r Ib): Reference source 1B [Subtract. ref. 3] (d fl 3): Subtracting reference 3		
FLOC	[Forced local] (F L $_{\Box}$ [): Forced local reference source		
	[Ref.2 multiplier] ($\Pi \Pi \supseteq$): Multiplying reference 2		
П Я Э Р Е S	[Ref. 3 multiplier] (
, A O I	[IA01] (, A [] I): Function blocks: Analog Input 01		
 , A 10	[IA10] (, R I D): Function blocks: Analog Input 10		
A , I E	[All Type]		[Voltage] (I 🛭 u)
100	[Voltage] (/ 🗓 ப): Positive voltage input 0 - 10 V (negative values are inter	preted as zero: the input	is unidirectional)
u iL I	[Al1 min value]	0 to 10.0 V	0 V
	Al1 voltage scaling parameter of 0%.		
ו או ט H I	[Al1 max value]	0 to 10.0 V	10.0 V
	Al1 voltage scaling parameter of 100%.		
AilF	[Al1 filter]	0 to 10.00 s	0 s
	Interference filtering.		
AIL	[Al1 range]		[0 - 100%] (P = 5)
	[-100%] (P = 5): Positive logical [-1-100%] (n E [-1): Positive and negative logical		
A , IE	[Al1 Interm. point X]	0 to 100%	0%
	Input delinearization point coordinate. Percentage of the physical input sign	al.	
	0% corresponds to [Al1 min value] (\(\bu \lambda \lambda \). 100% corresponds to [Al1 max value] (\(\bu \lambda \lambda \lambda \lambda \).		
A , 15	[Al1 Interm. point Y]	0 to 100%	0%
	Output delinearization point coordinate (frequency reference).		'
	Percentage of the internal frequency reference corresponding to the [Al1 Ir input signal.	nterm. point X] (A I IE)	percentage of physical
1_0-	[INPUTS / OUTPUTS CFG] (continued)		
A 12-	[AI2 CONFIGURATION]		
A . 2 A	[Al2 assignment]		
	Identical to [Al1 assignment] (R IR) page 133.		
A 12E	[Al2 Type]		[Voltage +/-] (n 0 u)
10 u n 10 u	[Voltage] (/ [] []): Positive voltage input 0 - 10 V (negative values are inter [Voltage +/-] (n / [] []): Positive and negative voltage input +/- 10 V (the in		is unidirectional)
ם ו∟2	[Al2 min value]	0 to 10.0 V	0 V
	Al2 voltage scaling parameter of 0%.		

DRI- > CONF > FULL > I_O- > AU2-

Code	Name / Description	Adjustment range	Factory setting
שוע ⊢2	[Al2 max. value]	0 to 10.0 V	10.0 V
	Al2 voltage scaling parameter of 100%.		
A .2F	[Al2 filter]	0 to 10.00 s	0 s
	Interference filtering.		
A . 2 L	[Al2 range]		[0 - 100%] (<i>P</i> = 5)
	This parameter is forced to [0 - 100%] ($P = 5$) and can not be accessed if +/-] ($n \mid D \mid u$).	[Al2 Type] (age 133) is set to [Voltage
P = 5 = E G	[0 - 100%] (P a 5): Positive logical [+/- 100%] (n E L): Positive and negative logical		
A .2E	[Al2 Interm. point X]	0 to 100%	0%
	Input delinearization point coordinate. Percentage of the physical input sig 0% corresponds to [Min value] if the range is 0 → 100%.	nal.	
	0% corresponds to [Max value] + [Min value] if the range is -100% → + 100% corresponds to [Max value].	100%.	
A .25	[Al2 Interm. point Y]	0 to 100%	0%
	Output delinearization point coordinate (frequency reference). Percentage of the internal frequency reference corresponding to the [Al2 I input signal.	nterm. point X] (R 12E) percentage of physical
1_0-	[INPUTS / OUTPUTS CFG] (continued)		
A . 3 -	[AI3 CONFIGURATION]		
A , 3A	[Al3 assignment]		
	Identical to [Al1 assignment] (R I IR) page 133.		
A .3E	[Al3 Type]		[Current] ([] FI)
O A	[Current] ([]]: Current input 0 - 20 mA		
ErL3	[Al3 min. value]	0 to 20.0 mA	0 mA
	Al3 current scaling parameter of 0%.		
ЕгН∃	[Al3 max. value]	0 to 20.0 mA	20.0 mA
	Al3 current scaling parameter of 100%.		
A .3F	[Al3 filter]	0 to 10.00 s	0 s
	Interference filtering.		
A .3L	[Al3 range]		[0 - 100%] (<i>P</i> ₀ 5)
Pa5 nEG	[0 - 100%] (P a 5): Unidirectional input [+/- 100%] (n E L): Bidirectional input Example: On a 4 - 20 mA input. 4 mA corresponds to reference -100%. 12 mA corresponds to reference 0%. 20 mA corresponds to reference +100%. Since Al3 is, in physical terms, a bidirectional input, the [+/- 100%] (n E L) is unidirectional. A bidirectional signal is not compatible with a bidirectional		e used if the signal applied
A . 3 E	[Al3 Interm. point X]	0 to 100%	0%
	Input delinearization point coordinate. Percentage of the physical input sig 0% corresponds to [Min value] ($\Gamma \cap L \ni$) if the range is 0 \Rightarrow 100%.	nal.	
	0% corresponds to $[Al3 max. value] ([$	range is -100% →+100%	ó.
	100% corresponds to [Al3 max. value] ([r H 3).		


DRI- > CONF > FULL > I_O- > IEn-

Code	Name / Description	Adjustment range	Factory setting
A :35	[Al3 Interm. point Y]	0 to 100%	0%
	Output delinearization point coordinate (frequency reference). Percentage of the internal frequency reference corresponding to the [Al3 I input signal.	nterm. point X] (# 138	percentage of physical
1 - 0 -	[INPUTS / OUTPUTS CFG] (continued)		
Au I-	[VIRTUAL AI1]		
А и ІА	[AIV1 assignment]		
	Virtual analog input 1 via the jog dial available on the front side of the prod Identical to [Al1 assignment] (# I I#) page 133.	uct.	
A u 2 -	[VIRTUAL AI2]		
A u 2 A	[AIV2 assignment]		
	Possible assignments for [Al virtual 2] (H , \sqcup 2): Virtual analog input 2 via net. channel] (H , \square 2).	a communication channe	I, to be configured with [AI2
	Identical to [AIV1 assignment] (# u I #) page 133.		
A . C 2	[Al2 net. Channel]		[No] (n a)
*	[VIRTUAL AI2] (
n o N d b C A n n E t	[No] (n a): Not assigned [Modbus] (n d b): Integrated Modbus [CANopen] (L R n): Integrated CANopen® [Com. card] (n E b): Communication card (if inserted)		
ıEn-	[ENCODER CONFIGURATION]		
	Following parameters can be accessed if the speed monitoring card VW3,	A3620 has been inserted	i.
Епи	[Encoder usage]		[No] (nO)
5 E C	[No] (n p): Function inactive. [Fdbk monit.] (5 E C): The encoder provides speed feedback for monitorin	g.	
E n 5	[Encoder type]		[AABB] (AAbb)
*	Encoder usage configuration.		
	Encoder usage configuration. To be configured in accordance with the type of encoder used.		
Я Я Ь Ь Я Ь	[AABB] (AAbb): For signals A, /A, B, /B. [AB] (Ab): For signals A, B.		
	Following parameters can be accessed if [Encoder usage] (E n u) is set to	[Fdbk monit.] (5 E C).	
PG i	[Number of pulses]	100 to 3600	1024
*	Encoder usage configuration.		1
	Number of pulses per encoder revolution. Following parameters can be accessed if [Encoder usage] (Enu) is set to	p [Fdbk monit.] (5 <i>E C</i>).	

*

These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

Load slip detection:

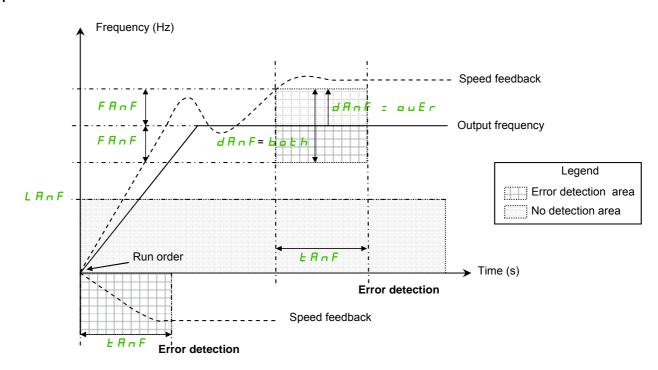

The drive will detect an error and display the error code [Load slipping] ($R \cap F$) in the following cases:

- As soon as the RUN order is received, if the sign of the output frequency and the speed feedback are in opposite way during [ANF Time Thd.] (*E R n F*).
- During operation:
 - if the speed feedback is in the same direction than the output frequency
 - and the speed feedback is over [ANF Detection level] (L R n F).
 - and

"if [ANF Direction check] (dRnF) is set to [Over] (dRnF), the difference between the output frequency and the speed feedback is over [ANF Frequency Thd.] (RnF) during [ANF Time Thd.] (TAnF) (Overspeed detection).

or,

"if [ANF Direction check] (dRnF) is set to [Both] (bnEh), the difference between the output frequency and the speed feedback is over [ANF Frequency Thd.] (FRnF) or below - [ANF Frequency Thd.] (FRnF) during [ANF Time Thd.] (ERnF) (Overspeed or underspeed detection).

Code	Name / Description	Adjustment range	Factory setting	
1 - 0 -	[INPUTS / OUTPUTS CFG] (continued)			
ıEn-	[ENCODER CONFIGURATION] (continued)			
	Following parameters can be accessed if the speed monitoring card VW3A3620 has been inserted and if [Encoder usage] (Enu) is set to [Fdbk monit.] (5 E L).			
FAnF	[ANF Frequency Thd.]	0.1 to 50 Hz	5.0 Hz	
*	Level of [Load slipping] (R n F) detected error.			
	The drive will not detect the error [Load slipping] ($R \cap F$) if the difference between the output frequency and the speed feedback is below than [ANF Frequency Thd.] ($F \cap F$).			
LAnF	[ANF Detection level]	0 to 10 Hz	0.0 Hz	
	Level of ANF detected error.			
*	The drive will not detect the error [Load slipping] (# n F) if the speed feedle	pack is below [ANF Dete	ction level] (L H n F).	

DRI- > CONF > FULL > I_O- > LO1-

Code	Name / Description	Adjustment range	Factory setting	
dAnF	[ANF Direction check]	·	[Over] (a u E r)	
*	Available [Load slipping] (# n F) detection direction.			
	[Over] (
Ł A n F	[ANF Time Thd.]	0 to 10 s	0.10 s	
	Level of [Load slipping] (R n F) detected error.			
*	The drive will detect the error [Load slipping] (F n F) if the condition	ns are present during [ANF Tim	e Thd.] (<i>R</i> n <i>F</i>).	
	11 01 /		• ` '	



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

Code	Name / Description	Adjustment range	Factory setting
1 - 0 -	[INPUTS / OUTPUTS CFG] (continued)		
r 1-	[R1 CONFIGURATION]		
r I	[R1 Assignment]		[No drive flt] (F L E)
ne	[No] (no): Not assigned		
FLE	[No drive flt] (F L E): Drive fault detection status (relay normally energized, and de-energized in the event of an error) [Drv running] (F L E): Drive running		
	[Freq. Th. attain.] ($F \vdash H$): Frequency threshold attained ([Freq. threshold	i] (<i>F Ł d</i>) page <u>102</u>)	
	[HSP attain.] (F L R): High speed attained	() naga 102)	
	[I attained] (L E A): Current threshold attained ([Current threshold] (L E A) [Freq.ref.att] (5 r A): Frequency reference attained	a) page <u>102</u>)	
	[Th.mot. att.] (£ 5 A): Motor 1 thermal state attained		
	[PID error al] (P E E): PID error alarm [PID fdbk al] (P F R): PID feedback alarm		
F2A	[Freq. Th. 2 attained] (F 2 A): Frequency threshold 2 attained ([Freq. thre	eshold 2] (F 2 d) page	<u>102</u>)
	[Th. drv. att.] (E F d): Drive thermal state attained [Pro.Undload] (U L F): Underload alarm		
	[Ovid.P.Airm] (a L R): Overload alarm		
	[Rope slack] (r 5 d fl): Rope slack (see [Rope slack config.] (r 5 d) pa		- 400
	[High tq. att.] (E E H F): Motor torque overshooting high threshold [High to [Low tq. att.] (E E L F): Motor torque undershooting low threshold [Low to		
NFrd	[Forward] (TF r d): Motor in forward rotation		_
Πrr5 E52	[Reverse] (
	[Th.mot3 att] (£ 5 3): Motor 3 thermal threshold (TTD3) reached		
A E S			
	[Cnfg.0 act.] ([n F]): Configuration 0 active [Cnfg.1 act.] ([n F]): Configuration 1 active		
[nF2	[Cnfg.2 act.] ([
	[Set 1 active] ([F P I): Parameter set 1 active [Set 2 active] ([F P 2): Parameter set 2 active		
	[Set 3 active] ([F P 3): Parameter set 3 active		
d b L	[DC charged] (d b L): DC bus charging [In braking] (b c 5): Drive braking		
	[P. removed] (P r 17): Drive locked by "Safe Torque Off" input		
FALA		ng thd.] (F 9 L) page 1	102
ПСР LSA	[I present] ($\Pi \ E P$): Motor current present [Limit sw. att] ($L \ S \ R$): Limit switch attained		
d L d R	[Load alarm] (d L d f): Load variation detection (see page 267)		
A G I	[Alarm Grp 1] (# 🖟 1): Alarm group 1 [Alarm Grp 2] (# 🖟 2): Alarm group 2		
A G 3	[Alarm Grp 3] (F [3): Alarm group 3		
	[LI6=PTC al.] (P L R): LI6 = PTCL alarm [Ext. fault al] (E F R): External fault alarm		
	[Under V. al.] (U 5 F): Undervoltage alarm		
υPA	[Uvolt warn] (u P A): Undervoltage threshold		
	[Al. °C drv] (<i>E H F</i>): Drive overheating [Lim T/l att.] (5 5 F): Torque limit alarm		
E J A	[IGBT al.] (L J F): Thermal junction alarm		
	[Al3 Al. 4-20] (用 P∃): Al3 4-20 mA loss alarm [Ready] (r d ఆ): Ready to start		
r I -	[R1 CONFIGURATION] (continued)		
		0 to 60,000 ms	0 ms
r ∣d (1)	[R1 Delay time] The change in state only takes effect once the configured time has elepsed		
, ,	The change in state only takes effect once the configured time has elapsed The delay cannot be set for the [No drive flt] (F L L) assignment, and rem		occomes nue.
r 15	[R1 Active at]		[1] (P = 5)
	Configuration of the operating logic:		
	[1] (P = 5): State 1 when the information is true		
ntb	[0] ($n E \square$): State 0 when the information is true Configuration [1] ($P \square S$) cannot be modified for the [No drive flt] ($F L E$) a	assignment.	

Code	Name / Description	Adjustment range	Factory setting
r IH	[R1 Holding time]	0 to 9,999 ms	0 ms
	The change in state only takes effect once the configured time has elapsed, The holding time cannot be set for the [No drive flt] (F L E) assignment, ar		ecomes false.
r IF	[Enable Relay1 fallback]		[No] (n a)
	Available if [R1 Assignment] (r I) page 138 is set [No] (n a): Not assign	ed	
no	[YES] (YES): Relay controlled by OL1R. The relay is de-energized if the d [No] (no): Relay controlled by OL1R.	rive is in operating state	"Fault"
1 _ 0 =	[INPUTS / OUTPUTS CFG] (continued)		
r 2 -	[R2 CONFIGURATION]		
r 2	[R2 Assignment]		[No] (n a)
LLC 	Identical to [R1 Assignment] (r I) page 138 with the addition of: [Brk control] (b L C): Brake contactor control [Input cont.] (L L C): Line contactor control [Output cont] (a C C): Output contactor control [End reel] (E b a): End of reel (traverse control function) [Sync. wobble] (b 5 y): "Counter wobble" synchronization [DC charging] (d C a): DC bus precharging contactor control [OL01] (a L D I): Function blocks: Logical Output 01		
aL 10	[OL10] (a L D): Function blocks: Logical Output 10		
r 2 d	[R2 Delay time]	0 to 60,000 ms	0 ms
(1)	The delay cannot be set for the [No drive flt] (F L L), [Brk control] (b L L), [Output cont.] (c L L) and [Input cont.] (L L L) assignments, and remains at 0. The change in state only takes effect once the configured time has elapsed, when the information becomes true.		
r 2 S	[R2 Active at]		[1](Po5)
	Configuration of the operating logic: [1] (P = 5): State 1 when the information is true [0] (n E L): State 0 when the information is true The configuration [1] (P = 5) cannot be modified for the [No drive flt] (F L and [Input cont.] (L L L) assignments.	E), [Brk control] (b L [), [DC charging] (d [a),
r ≥ H	[R2 Holding time]	0 to 9,999 ms	0 ms
	The holding time cannot be set for the [No drive fit] (F L E), [Brk control] (remains at 0.		
r 2 F	The change in state only takes effect once the configured time has elapsed, [Enable Relay2 fallback]	, when the information be	[No] (n p)
rer	Available if [R2 Assignment] (r 2) page 139 is set [No] (n a): Not assign	ad	[NO] (NB)
	[YES] (YES): Relay controlled by OL1R. The relay is de-energized if the d [No] (np): Relay controlled by OL1R. [INPUTS / OUTPUTS CFG] (continued)		"Fault"
Lol-	[LO1 CONFIGURATION]		
Lol	[LO1 assignment]		[No] (n p)
6LC LLC 0CC E60 E59 dC0 0L0 I	Identical to [R1 Assignment] (r I) page 138 with the addition of following paselections can only be configured in the [APPLICATION FUNCT.] (F u n - [Brk control] (b L C): Brake contactor control [Input cont.] (L L C): Line contactor control [Output cont] (a C C): Output contactor control [End reel] (E b a): End of reel(traverse control function) [Sync. wobble] (b 5 y): "Counter wobble" synchronization [DC charging] (d C a): DC bus precharging contactor control [OL01] (a L D I): Function blocks: Logical Output 01 [OL10] (a L I D): Function blocks: Logical Output 10		r information only as these
	[GDL] (0.4.00.000	
Lold	[LO1 delay time] The delay cannot be set for the [No drive flt] (F L E), [Brk control] (b L C)	0 to 60,000 ms (1)	0 ms and [Input cont.] (L L [
	assignments, and remains at 0. The change in state only takes effect once the configured time has elapsed,		

Code	Name / Description	Adjustment range	Factory setting
L = 15	[LO1 active at]		[1](Po5)
	Configuration of the operating logic: [1] ($P = 5$): State 1 when the information is true [0] ($n = 5$): State 0 when the information is true The configuration [1] ($P = 5$) cannot be modified for the [No drive flt] ($F = 5$) assignments.	と), [Brk control] (bLC)	and [Input cont.] (L L C)
Lo IH	[LO1 holding time]	0 to 9,999 ms	0
	The holding time cannot be set for the [No drive flt] (F L E), [Brk control] remains at 0. The change in state only takes effect once the configured time has elapsed		

(1) 0 to 9,999 ms then 10.00 to 60.00 s on the integrated display terminal.

DRI- > CONF > FULL > I_O- > AO1

Use of analog output AO1 as a logic output

Analog output AO1 can be used as a logic output, by assigning DO1. In this case, when set to 0, this output corresponds to the AO1 min. value (0 V, or 0 mA for example), and when set to 1 to the AO1 max. value (10 V, or 20 mA for example).

The electrical characteristics of this analog output remain unchanged. As these characteristics are different from logic output characteristics, check that it is still compatible with the intended application.


Code	Name / Description	Adjustment range	Factory setting
1-0-	[INPUTS / OUTPUTS CFG] (continued)		
do 1-	[DO1 CONFIGURATION]		
do I	[DO1 assignment]		[No] (n a)
6 5 9 6 0 0 1 	Identical to [R1 Assignment] (٠.	nown for information only
dold	[DO1 delay time]	0 to 60,000 ms (1)	0 ms
	The delay cannot be set for the [No drive flt] (F L L), [Brk control] (L L assignments, and remains at 0. The change in state only takes effect once the configured time has elapse		
do 15	[DO1 active at]		[1](Po5)
P = 5 = E G	Configuration of the operating logic: [1] ($P o 5$): State 1 when the information is true [0] ($n o G$): State 0 when the information is true The configuration [1] ($P o 5$) cannot be modified for the [No drive flt] ($F o 5$) assignments.	<i>Ŀ</i>), [Brk control] (<i>Ŀ L ℂ</i>):	and [Input cont.] (L L C)
do IH	[DO1 holding time]	0 to 9,999 ms	0 ms
	The holding time cannot be set for the [No drive flt] (FLE), [Brk control] remains at 0. The change in state only takes effect once the configured time has elapse	. ,	, ,


(1) 0 to 9,999 ms then 10.00 to 60.00 s on the integrated display terminal.

Configuration of analog output

Minimum and maximum values (output values):

The minimum output value, in volts, corresponds to the lower limit of the assigned parameter and the maximum value corresponds to its upper limit. The minimum value may be greater than the maximum value.

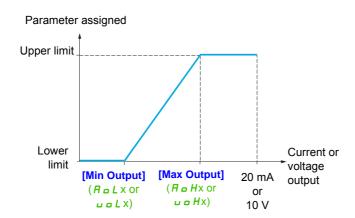

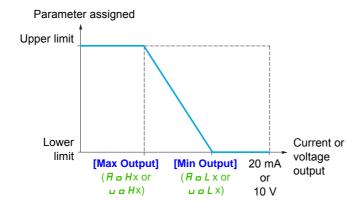


Scaling of the assigned parameter

The scale of the assigned parameter can be adapted in accordance with requirements by modifying the values of the lower and upper limits by means of two parameters for each analog output.

These parameters are given in %. 100% corresponds to the total variation range of the configured parameter, so: 100% = upper limit - lower limit For example, [Sign. torque] (5 £ 9) which varies between -3 and +3 times the rated torque, 100% corresponds to 6 times the rated torque.

- The [Scaling AOx min] (# 5 L x) parameter modifies the lower limit: new value = lower limit + (range x ASLx). The value 0% (factory setting) does not modify the lower limit.
- The [Scaling AOx max] (# 5 Hx) parameter modifies the upper limit: new value = lower limit + (range x ASLx). The value 100% (factory setting) does not modify the upper limit.
- [Scaling AOx min] (# 5 L x) must always be lower than [Scaling AOx max] (# 5 Hx).

Upper limit of the assigned parameter

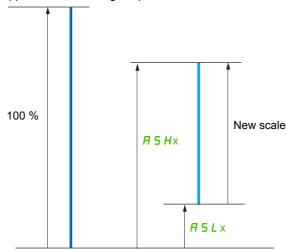

Lower limit of the assigned parameter

Application example 2

The value of the motor current at the AO1 output is to be transferred with 0 - 20 mA, range 2 In motor, In motor being the equivalent of a 0.8 In drive.

The [I motor] (\square Γ \cap) parameter varies between 0 and 2 times the rated drive current, or a range of 2.5 times the rated drive current.

[Scaling AO1 min] (# 5 L I) must not modify the lower limit, which therefore remains at its factory setting of 0%.

[Scaling AO1 max] (# 5 # 1) must modify the upper limit by 0.5x the rated motor torque, or 100 - 100/5 = 80% (new value = lower limit + (range x ASH1).

	Name / Description	Adjustment range	Factory setting
1_0-	[INPUTS / OUTPUTS CFG] (continued)		
A - 1 -	[AO1 CONFIGURATION]		
A o I	[AO1 assignment]		[No] (n a)
0 C C C C C C C C C C C C C C C C C C C	[I motor] (a [r): Current in the motor, between 0 and 2 In (In = rated the drive nameplate) [Motor freq.] (a [r): Output frequency, from 0 to [Max frequency] [Sig. o/p frq.] (a [5): Signed output frequency, between - [Max frequency] [Ramp out.] (a [7]): From 0 to [Max frequency] (b [7]) [Motor torq.] (b [7]): Motor torque, between 0 and 3 times the rated [Sign. torque] (5 [7]): Signed motor torque, between -3 and +3 times motor mode and the - sign to the generator mode (braking). [sign ramp] (a [5): Signed ramp output, between - [Max frequency [PID ref.] (a [7]): PID regulator reference between [Min PID reference [PID feedbk] (a [7]): PID regulator feedback between [Min PID feed [PID error] (a [7]): PID regulator error between -5 % and +5 % of ([7])	motor torque es the rated motor torque. The y] (EFr) and + [Max frequence] (P, P, I) and [Max PID dback] (P, F, I) and [Max PID feedback] (P, F, E)	frequency] (EFr) e + sign corresponds to the ency] (EFr). reference] (P,P2). PID feedback] (P,F2) P) - [Min PID feedback]
a P r u o P E H r E H r 3 E H d	[Motor volt.] (u a P): Voltage applied to the motor, between 0 and [For thermal] (b H r): Motor thermal state, between 0 and 200% of [Mot therm2] (b H r 2): Motor thermal state 2, between 0 and 200 % [Mot therm3] (b H r 3): Motor thermal state 3, between 0 and 200% [Drv thermal] (b H d): Drive thermal state, between 0 and 200% of the state of the s	the rated thermal state of the rated thermal state and the rated thermal state of the rated thermal state the rated thermal state the rated thermal state	
E9L d0 l E9NS aA0 l	[dO1] (do 1): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (E 9 17 5): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (a 8 11 1): Function blocks: Analog Output 01	appear if [DO1 assignment] informational purposes. es the rated motor torque. Th	
60 1 0 A a 1 0 A a	[dO1] (doll): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (E975): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (DRD): Function blocks: Analog Output 01	appear if [DO1 assignment] informational purposes. es the rated motor torque. Th	
40 I E9NS 	[dO1] (d a I): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (E 9 17 5): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (a R II I): Function blocks: Analog Output 01	appear if [DO1 assignment] informational purposes. es the rated motor torque. Th	
40 I E9NS 	[dO1] (dall): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (E 9 17 5): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (a 18 11): Function blocks: Analog Output 01 [OA10] (a 18 11): Function blocks: Analog Output 10 [AO1 Type] [Voltage] (10 11): Voltage output	appear if [DO1 assignment] informational purposes. es the rated motor torque. Th	e + sign and the - sign
40 I E9NS -80 I -8 IC Fo IE	[dO1] (d a I): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (£ 9 17 5): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (a R II): Function blocks: Analog Output 01 [OA10] (a R III): Function blocks: Analog Output 10 [AO1 Type] [Voltage] (III u): Voltage output [Current] (III R): Current output	appear if [DO1 assignment] informational purposes. es the rated motor torque. The (motor or generator).	e + sign and the - sign
# # # # # # # # # # # # # # # # # # #	[dO1] (dall): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (L975): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (aRII): Function blocks: Analog Output 01 [OA10] (aRIII): Function blocks: Analog Output 10 [AO1 Type] [Voltage] (IIII): Voltage output [Current] (IIII): Current output [AO1 min Output] This parameter can be accessed if [AO1 Type] (RaIII) is set to [C	appear if [DO1 assignment] informational purposes. es the rated motor torque. The (motor or generator).	e + sign and the - sign
# # # # # # # # # # # # # # # # # # #	[dO1] (dall): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (E 9 17 5): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (a 18 11): Function blocks: Analog Output 01 [OA10] (a 18 111): Function blocks: Analog Output 10 [AO1 Type] [Voltage] (1111 111): Voltage output [Current] (1118 111): Current output [AO1 min Output]	appear if [DO1 assignment] informational purposes. es the rated motor torque. The (motor or generator). 0 to 20.0 mA urrent] (e + sign and the - sign [Current] ([] H)
# Hall	[dO1] (dal): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (L975): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (aRIII): Function blocks: Analog Output 01 [OA10] (aRIIII): Function blocks: Analog Output 10 [AO1 Type] [Voltage] (IIIII): Voltage output [Current] (IIR): Current output [AO1 min Output] This parameter can be accessed if [AO1 Type] (RaiIE) is set to [CIAO1 max Output]	appear if [DO1 assignment] informational purposes. es the rated motor torque. The (motor or generator). 0 to 20.0 mA urrent] (e + sign and the - sign [Current] ([] H)
# H O H I	[dO1] (dal): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (L975): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (a R II): Function blocks: Analog Output 01 [OA10] (a R III): Function blocks: Analog Output 10 [AO1 Type] [Voltage] (IIII): Voltage output [Current] (IIR): Current output [AO1 min Output] This parameter can be accessed if [AO1 Type] (R III) is set to [CIIII] [AO1 max Output] This parameter can be accessed if [AO1 Type] (R III) is set to [CIIII] This parameter can be accessed if [AO1 Type] (R IIII) is set to [CIIII]	appear if [DO1 assignment] informational purposes. es the rated motor torque. The (motor or generator). 0 to 20.0 mA urrent] (e + sign and the - sign [Current] (II H) 0 mA 20.0 mA
# H O H I	[dO1] (dal): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (L975): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (aRII): Function blocks: Analog Output 01 [OA10] (aRIII): Function blocks: Analog Output 10 [AO1 Type] [Voltage] (IIII): Voltage output [Current] (IIR): Current output [AO1 min Output] This parameter can be accessed if [AO1 Type] (RaIE) is set to [CINCO Incomplete Incomp	appear if [DO1 assignment] informational purposes. es the rated motor torque. The (motor or generator). 0 to 20.0 mA urrent] (e + sign and the - sign [Current] (II H) 0 mA 20.0 mA
# Holl	[dO1] (dal): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (L975): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (aRII): Function blocks: Analog Output 01 [OA10] (aRIII): Function blocks: Analog Output 10 [AO1 Type] [Voltage] (IIII): Voltage output [Current] (IIR): Current output [AO1 min Output] This parameter can be accessed if [AO1 Type] (RaIE) is set to [CIP [AO1 min Output]] This parameter can be accessed if [AO1 Type] (RaIE) is set to [CIP [AO1 min Output]]	appear if [DO1 assignment] informational purposes. es the rated motor torque. The (motor or generator). 0 to 20.0 mA urrent] ([Current] (II R) 0 mA 20.0 mA
# H O H I # U O H I	[dO1] (dal): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (L975): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (aRII): Function blocks: Analog Output 01 [OA10] (aRIII): Function blocks: Analog Output 10 [AO1 Type] [Voltage] (IIII): Voltage output [Current] (IIII): Current output [AO1 min Output] This parameter can be accessed if [AO1 Type] (RaII) is set to [CIIII] [AO1 min Output] This parameter can be accessed if [AO1 Type] (RaIII) is set to [CIIII] [AO1 min Output] This parameter can be accessed if [AO1 Type] (RaIII) is set to [CIIII] [AO1 min Output] This parameter can be accessed if [AO1 Type] (RaIIII) is set to [Voltage] [AO1 max Output]	appear if [DO1 assignment] informational purposes. es the rated motor torque. The (motor or generator). 0 to 20.0 mA urrent] ([Current] (II R) 0 mA 20.0 mA
# # # # # # # # # # # # # # # # # # #	[dO1] (dal): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (L975): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (aRII): Function blocks: Analog Output 01 [OA10] (aRIII): Function blocks: Analog Output 10 [AO1 Type] [Voltage] (IIII): Voltage output [Current] (IIII): Voltage output [Current] (IIII): Voltage output [AO1 min Output] This parameter can be accessed if [AO1 Type] (Raile) is set to [CIAO1 max Output] This parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Raile) is set to [Voltage parameter can be accessed if [AO1 Type] (Ra	appear if [DO1 assignment] informational purposes. es the rated motor torque. The (motor or generator). 0 to 20.0 mA urrent] ([Current] (II R) 0 mA 20.0 mA
# # # # # # # # # # # # # # # # # # #	[dO1] (dal): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (L975): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (aRII): Function blocks: Analog Output 01 [OA10] (aRIII): Function blocks: Analog Output 10 [AO1 Type] [Voltage] (IIII): Voltage output [Current] (IIR): Current output [AO1 min Output] This parameter can be accessed if [AO1 Type] (RIIII) is set to [CIIII] [AO1 min Output] This parameter can be accessed if [AO1 Type] (RIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	appear if [DO1 assignment] informational purposes. es the rated motor torque. The (motor or generator). 0 to 20.0 mA urrent] ([Current] (II R) 0 mA 20.0 mA
# # # # # # # # # # # # # # # # # # #	[d01] (d l): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (L 9 17 5): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (logic II): Function blocks: Analog Output 01 [OA10] (logic III): Function blocks: Analog Output 10 [AO1 Type] [Voltage] (logic): Voltage output [Current] (logic II): Current output [AO1 min Output] This parameter can be accessed if [AO1 Type] (R logic IE) is set to [City II] [AO1 min Output] This parameter can be accessed if [AO1 Type] (R logic IE) is set to [City II] [AO1 min Output] This parameter can be accessed if [AO1 Type] (R logic IE) is set to [Vity II] [AO1 max Output] This parameter can be accessed if [AO1 Type] (R logic IE) is set to [Vity II] [AO1 max Output] This parameter can be accessed if [AO1 Type] (R logic IE) is set to [Vity II] [Scaling AO1 min] Scaling of the lower limit of the assigned parameter, as a % of the max [Scaling AO1 max]	appear if [DO1 assignment] informational purposes. es the rated motor torque. The (motor or generator). 0 to 20.0 mA urrent] ([Current] (
# # # # # # # # # # # # # # # # # # #	[dO1] (dall): Assignment to a logic output. This assignment can only This is the only possible choice in this case, and is only displayed for [Torque 4Q] (L975): Signed motor torque, between -3 and +3 time correspond to the physical direction of the torque, regardless of mode [OA01] (aRII): Function blocks: Analog Output 01 [OA10] (aRIII): Function blocks: Analog Output 10 [AO1 Type] [Voltage] (IIII): Voltage output [Current] (IIR): Current output [AO1 min Output] This parameter can be accessed if [AO1 Type] (RaIL) is set to [CIAO1 max Output] This parameter can be accessed if [AO1 Type] (RaIL) is set to [CIAO1 min Output] This parameter can be accessed if [AO1 Type] (RaIL) is set to [CIAO1 max Output] This parameter can be accessed if [AO1 Type] (RaIL) is set to [Voltage] [AO1 max Output] This parameter can be accessed if [AO1 Type] (RaIL) is set to [Voltage] [AO1 max Output] This parameter can be accessed if [AO1 Type] (RaIL) is set to [Voltage] [AO1 max Output] This parameter can be accessed if [AO1 Type] (RaIL) is set to [Voltage] [AO1 max Output] This parameter can be accessed if [AO1 Type] (RaIL) is set to [Voltage] [AO1 max Output] This parameter can be accessed if [AO1 Type] (RaIL) is set to [Voltage] [AO1 max Output] This parameter can be accessed if [AO1 Type] (RaIL) is set to [Voltage] [AO1 max Output]	appear if [DO1 assignment] informational purposes. es the rated motor torque. The (motor or generator). 0 to 20.0 mA urrent] ([Current] (



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

The following submenus group the alarms into 1 to 3 groups, each of which can be assigned to a relay or a logic output for remote signaling. These groups can also be displayed on the graphic display terminal (see **[3.3 MONITORING CONFIG.]** ($\Pi \ E \ F \ -$) menu page <u>284</u>) and viewed via the **[1.2 MONITORING]** ($\Pi \ E \ F \ -$) menu page <u>47</u>.

When one or a number of alarms selected in a group occurs, this alarm group is activated.

Code	Name / Description	
1 - 0 -	[INPUTS / OUTPUTS CFG] (continued)	
AIC-	[ALARM GRP1 DEFINITION]	
	Selection to be made from the following list:	
PLA	[LI6=PTC al.] (PLR): LI6 = PTCL alarm	
EFA	[Ext. fault al.] (E F A): External fault alarm	
	[Under V. al.] ($_{ m L}$ 5 $_{ m R}$): Undervoltage alarm	
	[I attained] (E + R): Current threshold attained ([Current threshold] (E + d) page 102)	
	[Freq.ref.att] (5 r A): Frequency reference attained	
£ 5 2		
	[Uvolt warn] (u P R): Undervoltage threshold	
	[HSP attain.] (F L R): High speed attained	
	[Al. °C drv] (E H R): Drive overheating	
PEE		
	[PID fdbk al.] (PFR): PID feedback alarm	
	[Al3 Al. 4-20] (# P 3): Alarm indicating absence of 4-20 mA signal on input Al3	
	[Lim T/I att.] (5 5 A): Torque limit alarm	
EAd	[Th. drv. att.] (L R d): Drive thermal state attained	
	[IGBT alarm] (L J R): IGBT alarm [Underload. Proc. Al.] (L R): Underload alarm	
o L A	- ,	
	[Rope slack alarm] (- 5 d R): Rope slack (see [Rope slack config.] (- 5 d) parameter page 205)	
EEHA		
	[Low torque alarm] (E E L R): Motor torque undershooting low threshold[Low torque thd.] (E E L) page 102.	
F9LA		
alan		
	See the multiple selection procedure on page 33 for the integrated display terminal, and page 24 for the graphic display terminal.	
A 5 C -	[ALARM GRP2 DEFINITION]	
	Identical to [ALARM GRP1 DEFINITION] (# I [-) page 145.	
ABC-	[ALARM GRP3 DEFINITION]	
	Identical to [ALARM GRP1 DEFINITION] (# IC -) page 145.	

Command

The parameters in the [COMMAND] ($\Gamma E L -$) menu can only be modified when the drive is stopped and no run command is present.

Command and reference channels

Run commands (forward, reverse, stop, etc.) and references can be sent using the following channels:

Command	Reference
Terminals: logic inputs LI or analog inputs used as logic inputs LA	Terminals: analog inputs AI, pulse input
Function blocks	Function blocks
Remote display terminal	Remote display terminal
Graphic display terminal	Graphic display terminal
Integrated Modbus	Integrated Modbus
Integrated CANopen®	Integrated CANopen®
Communication card	Communication card
	+/- speed via the terminals
	+/- speed via the graphic display terminal

▲ WARNING

UNANTICIPATED EQUIPMENT OPERATION

If analog inputs [AI1] ($H \ I \ I$) or [AI2] ($H \ I \ I$) are used as logic inputs ([LAI1] ($L \ H \ I \ I$) or [LAI2] ($L \ H \ I \ I$), they remain active in their behaviors in analog input mode (example : [Ref.1 channel] ($H \ I \ I$) is still set to [AI1] ($H \ I \ I$).

• Remove the configuration of [Al1] (R | I) or [Al2] (R | Z) in analog input mode

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Note: [LA1] (L Ħ I) and [LA2] (L Ħ Z) can be used as 2 logic inputs in source mode only.

- + 24 V power supply (max. 30 V)
- State 0 if < 7.5 V, state 1 if > 8.5 V.

Note: The stop keys on the graphic display terminal or remote display can be programmed as non-priority keys. A stop key can only have priority if the [Stop Key priority] (P 5 L) parameter in the [COMMAND] (L L -) menu, page 154 is set to [Yes] (4 E 5).

The behavior of the Altivar 320 can be adapted according to requirements:


- [Not separ.] (5 , 17): Command and reference are sent via the same channel.
- [Separate] (5 E P): Command and reference may be sent via different channels.

In these configurations, control via the communication bus is performed in accordance with the DRIVECOM standard with only 5 freely-assignable bits (see Communication Parameters Manual). The application functions cannot be accessed via the communication interface.

• [I/O profile] (, ,): The command and the reference can come from different channels. This configuration both simplifies and extends use via the communication interface. Commands may be sent via the logic inputs on the terminals or via the communication bus. When commands are sent via a bus, they are available on a word, which acts as virtual terminals containing only logic inputs. Application functions can be assigned to the bits in this word. More than one function can be assigned to the same bit.

Note: Stop commands from the graphic display terminal or remote display terminal remain active even if the terminals are not the active command channel.

Reference channel for [Not separ.] (5 , 17), [Separate] (5 E P) and [I/O profile] (1, 12) configurations, PID not configured

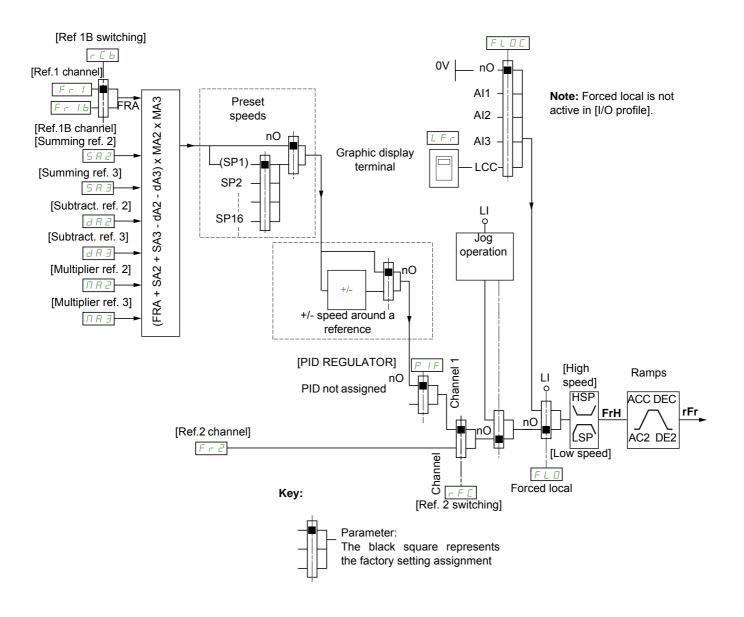

Fr 1, 582, 583, 482, 483, N82, N83:


- Terminals, graphic display terminal, integrated Modbus, integrated CANopen®, communication card
 Fr Ib, for 5 E P and ID:
- Terminals, graphic display terminal, integrated Modbus, integrated CANopen®, communication card
 F Γ Ι Β , for 5 ι Π:
- Terminals, only accessible if F r I = terminals

F r 2:

 Terminals, graphic display terminal, integrated Modbus, integrated CANopen®, communication card, and +/- speed

Note: [Ref.1B channel] ($F \cap Ib$) and [Ref 1B switching] ($\cap Ib$) must be configured in the [APPLICATION FUNCT.] ($F \cup Ib$) menu.

Reference channel for [Not separ.] (5 , 17), [Separate] (5 E P) and [I/O profile] (, 0) configurations, PID configured with PID references at the terminals

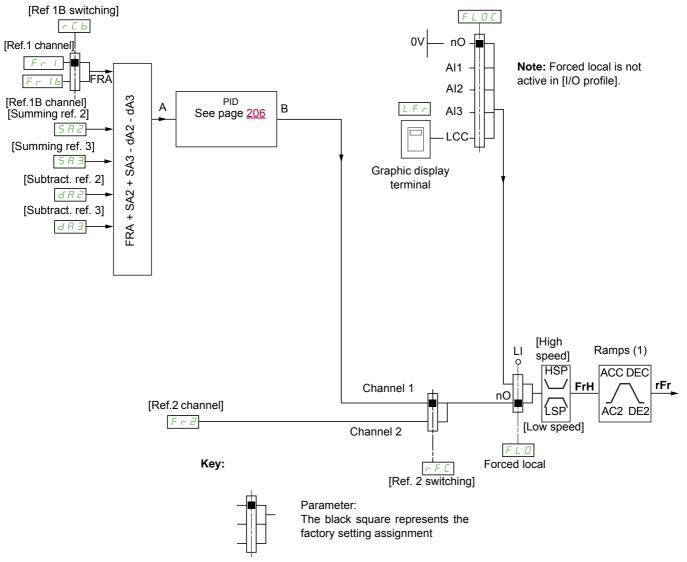

(1) Ramps not active if the PID function is active in automatic mode.

F r 1:

- Terminals, graphic display terminal, integrated Modbus, integrated CANopen®, communication card *F r l b*, for *5 E P* and *r p*:
- Terminals, graphic display terminal, integrated Modbus, integrated CANopen®, communication card Frib, for 5 II:
- Terminals, only accessible if F r I = terminals

SA2, SA3, JA2, JA3:

Terminals only

F r 2:

Terminals, graphic display terminal, integrated Modbus, integrated CANopen®, communication card, and
 +/- speed


Note: [Ref.1B channel] ($F \cap Ib$) and [Ref 1B switching] ($\cap Ib$) must be configured in the [APPLICATION FUNCT.] ($F \cup Ib$) menu.

Command channel for [Not separ.] (5 , 17) configuration


Reference and command, not separate

The command channel is determined by the reference channel. Parameters $F \cap I$, $F \cap Z$, $F \cap F \cap F$, $F \cap C$, and $F \cap C \cap C$ are common to reference and command.

Example: If the reference is F - I = H + I (analog input at the terminals), control is via L + I (logic input at the terminals).

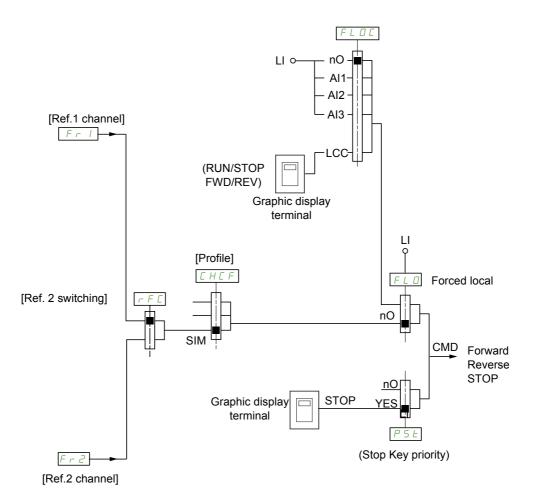

Key:

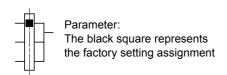


Command channel for [Separate] (5 E P) configuration

Separate reference and command

Parameters $\textit{FL}_{\textit{a}}$ and $\textit{FL}_{\textit{a}}$ are common to reference and command.

Example: If the reference is in forced local mode via H, I (analog input at the terminals), command in forced local mode is via L, (logic input at the terminals).

The command channels $\[\[\] \]$ and $\[\] \[\] \]$ are independent of the reference channels $\[\] \]$ $\[\] \[\] \]$ and $\[\] \[\] \[\] \[\] \]$ are independent of the reference channels $\[\] \]$ $\[\] \[\] \]$ $\[\] \[\] \$

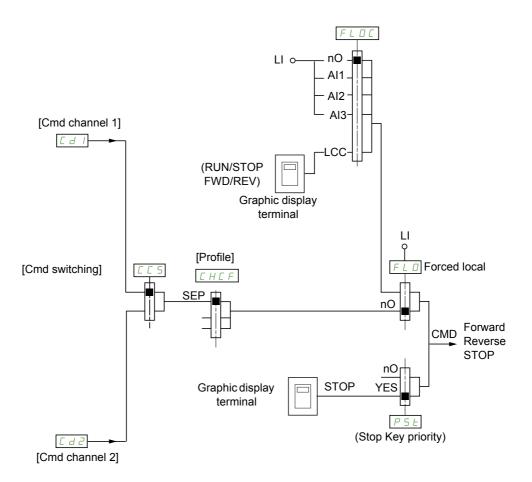

Key:



Parameter:


The black square represents the factory setting assignment, except for [Profile].

[d], [d2:

· Terminals, graphic display terminal, integrated Modbus, integrated CANopen®, communication card

Command channel for [I/O profile] (, p) configuration

Separate reference and command, as in [Separate] (5 E P) configuration

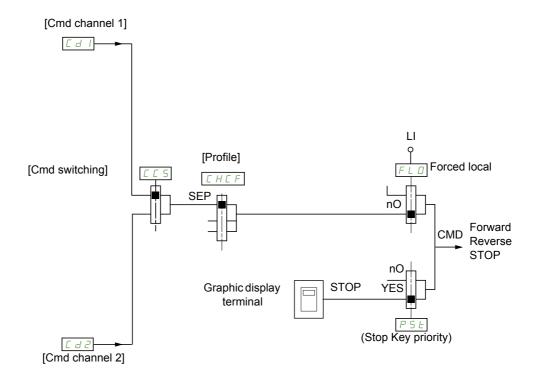

Key:



Parameter:

The black square represents the factory setting assignment, except for [Profile].

[d], [d2:

· Terminals, graphic display terminal, integrated Modbus, integrated CANopen®, communication card

A command or an action can be assigned:

- To a fixed channel by selecting an L , input or a Cxxx bit:
 - By selecting, for example, *L* , ∃, this action will be triggered by *L* , ∃ regardless of which command channel is switched.
 - By selecting, for example, $\[\[\] \]$ / $\[\]$ / $\[\]$ / this action will be triggered by integrated CANopen® with bit 14 regardless of which command channel is switched.
- To a switchable channel by selecting a CDxx bit:
 - By selecting, for example, [d | I | this action will be triggered by:
 - L , I ≥ if the terminals channel is active
 - [| | | | | if the integrated Modbus channel is active
 - [? I I if the integrated CANopen® channel is active
 - [] I if the communication card channel is active

If the active channel is the graphic display terminal, the functions and commands assigned to CDxx switchable internal bits are inactive.

Note: $\[\[\] \] d$ to $\[\[\] d$ $\[\] \] d$ can only be used for switching between 2 networks. They do not have equivalent logic inputs.

DRI- > CONF > FULL > CTL-

Terminals	Integrated Modbus	Integrated CANopen®	Communication card	Internal bit, can be switched
				CD00
LI2 (1)	C101 (1)	C201 (1)	C301 (1)	CD01
LI3	C102	C202	C302	CD02
LI4	C103	C203	C303	CD03
LI5	C104	C204	C304	CD04
LI6	C105	C205	C305	CD05
-	C106	C206	C306	CD06
-	C107	C207	C307	CD07
-	C108	C208	C308	CD08
-	C109	C209	C309	CD09
-	C110	C210	C310	CD10
-	C111	C211	C311	CD11
-	C112	C212	C312	CD12
LAI1	C113	C213	C313	CD13
LAI2	C114	C214	C314	CD14
-	C115	C215	C315	CD15
OL01 to OL10				

⁽¹⁾ If [2/3 wire control] ($E \ E$) page 85 is set to [3 wire] (3E), $E \ P$ (2E) I and $E \ B$ (cannot be accessed.

DRI- > CONF > FULL > CTL-

Assignment conditions for logic inputs and control bits

The following elements are available for every command or function that can be assigned to a logic input or a control bit:

[LI1] (L , I) to [LI6] (L , E)	Drive with or without option
[LAI1] (L # , I) to [LAI2] (L # , 2)	Logical inputs
[C101] ([With integrated Modbus in [I/O profile] (, ,) configuration
[C111] (<i>[</i>) to [C115] (<i>[</i> 5)	With integrated Modbus regardless of configuration
[C201] ([2 [] 1) to [C210] ([2 1 [])	With integrated CANopen® in [I/O profile] (, ,) configuration
[C211] ([2 1 1) to [C215] ([2 1 5)	With integrated CANopen® regardless of configuration
[C301] ([] [] I) to [C310] ([] I [])	With a communication card in [I/O profile] (, ,) configuration
[C311] ([3 1 1) to [C315] ([3 1 5)	With a communication card regardless of configuration
[CD00] ([d [] []) to [CD10] ([d [] [])	In [I/O profile] (, a) configuration
[CD11] ([d I I) to [CD15] ([d I 5)	Regardless of configuration
[OL01] (a L	Regardless of configuration

Note: In [I/O profile] $(\ , \ _{\Box})$ configuration, $L \ , \ I$ cannot be accessed and if [2/3 wire control] $(E \ C \)$ page 85 is set to [3 wire] $(\ \exists \ C \)$, $L \ , \ C \ , \ C \ | \ D \ |$, $L \ , \ C \ , \ D \ |$ I and $L \ \exists \ D \ |$ cannot be accessed either.

AWARNING

LOSS OF CONTROL

Inactive communication channels are not monitored (no error detection in the event of a communication interruption).

Verify that using the commands and functions assigned to bits C101 to C315 does not result in unsafe conditions in the event of a communication interruption.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Code	Name / Description	Adjustment range	Factory setting
Full	[FULL] (continued)		
CFL-	[COMMAND]		
Frl	[Ref.1 channel]		[AI1] (A I I)
AII	L 1 (1) 1 1 1 1 1 1 1 1 1		
	[Al2] (# I 2): Analog input A2 [Al3] (# I 3): Analog input A3		
LCC	[HMI] (L []): Graphic display terminal or remote display terminal source	e	
П d b С A n	[Modbus] (
n E E P i	[Com. card] (n E L): Communication card (if inserted) [RP] (P i): Pulse input		
A iu l	[Al virtual 1] (ilable if [Profile] ([H [F) i	s not set to
0801	[Not separ.] (5 , \(\Pi \)) [OA01] (\(\pi \) \(\Pi \) \(\pi \) Eunction blocks: Analog Output 01		
o R I O	[OA10] (P I D): Function blocks: Analog Output 10		
רוח	[RV Inhibition]		[No] (n a)
	Inhibition of movement in reverse direction, does not apply to direction re Reverse direction requests sent by logic inputs are taken into account.	equests sent by logic inputs	
	Reverse direction requests sent by the graphic display terminal are not t		
	Reverse direction requests sent by the fieldbus are not taken into accou Any reverse speed reference originating from the PID, summing input, e		reference (0 Hz)
		to., to interpreted do a zero	1010100 (0 112).
n o Y E S	[No] (n p) [Yes] (4 E 5)		
PSE	[Stop Key priority]		[Yes] (<i>YE</i> 5)
₹ 2 s	▲ WARNII	NG	
	LOSS OF CONTROL		
	This function disables the Stop keys of the Remote Display Tenchannel] ([minal if the setting of the	parameter [Command
	Only set this parameter to [No] (n a) if you have implemented	l appropriate alternative	stop functions.
	Failure to follow these instructions can result in death, se		-
	This will be a freewheel stop. If the active command channel is the graph to the [Type of stop] (5 L L) page 173 irrespective of the configuration		
		or [otop itey priority] (7-2	2)-
л о 9 Е S	[No] (n p) [Yes] (UE 5): Gives priority to the STOP key on the graphic display term	inal when the graphic displa	uv terminal is not enabled as
	the command channel.	9-гр-	
CHCF	[Profile]		[Not separ.] (5 , Π)
2 s	▲ WARNING		
	UNANTICIPATED EQUIPMENT OPERATION		
	Disabling [I/O profile] (, p) resets the drive to the factory set	•	
	 Verify that restoring the factory settings is compatible with t Failure to follow these instructions can result in death, se 		ent damage
	Tanalo to follow these mistractions can result in death, se	ious injury, or equipin	on damage.
5 i N	[Not separ.] (5 , Π): Reference and command, not separate		
5 E P	[Separate] (5 E P): Separate reference and command. This assignmen	t cannot be accessed in [I/C	profile] (, a).
10	[I/O profile] (, a): I/O profile		

DRI- > CONF > FULL > FBM- > MFB-

Code	Name / Description	Adjustment range	Factory setting
<i>C C 5</i>	[Cmd switching]		[ch1 active] ([d l)
*	This parameter can be accessed if [Profile] ($\mathcal{L} \ H \ \mathcal{L} \ F$) is set to [Separate] (5 If the assigned input or bit is at 0, channel [Cmd channel 1] ($\mathcal{L} \ d \ I$) is active If the assigned input or bit is at 1, channel [Cmd channel 2] ($\mathcal{L} \ d \ \mathcal{L}$) is active		· · · ·).
 C d 2 C d 1	[ch2 active] ([d 2): [Cmd channel 2] ([d 2) active (no switching) [Ll1] (L , I): Logical input Ll1)	
Cd I	[Cmd channel 1]		[Terminals] (EEr)
*	This parameter can be accessed if [Profile] ([H [F]) is set to [Separate] (5	(EP) or [I/O profile]	ı o).
E E r L C C N d b C A n n E E	[HMI] (L C C): Graphic display terminal or remote display terminal [Modbus] (Π d b): Integrated Modbus		
C 4 2	[Cmd channel 2]		[Modbus] (П d b)
*	This parameter can be accessed if [Profile] ($\mathcal{L} H \mathcal{L} F$) is set to [Separate] (5	EP) or [I/O profile] (· •).
E E r L C C N d b C A n n E E	[HMI] (L C C): Graphic display terminal or remote display terminal [Modbus] (
rFC	[Ref. 2 switching]		[Ref.1 channel] (F r I)
Fall	This parameter can be accessed if [Profile] ([F H [F]) is set to [Separate] ([Sep		· · · · · · · · · · · · · · · · · · ·
	[Ref. 2 channel] $(F \cap Z)$: [Cmd channel 2] $(E \cap Z)$ active (no switching)		
Lil	[LI1] (L , I): Logical input LI1 [] (): See the assignment conditions on page 153 (not [d] [] to [d I 5]	\	
Fr2	[Ref.2 channel]	,	[No] (n a)
no	[No] (n a): Not assigned. If [Profile] (LHLF) is set to [Not separ.] (5 , Π) reference. If [Profile] (LHLF) is set to [Separate] (5 EP) or [I/O profile] (e terminals with a zero
A 1 1	[AI2] (# 12): Analog input A2		
	[Al3] (# 13): Analog input A3		
LCC	[+/-Speed] ($ u P d E $): +/- speed command [HMI] ($ L C $): Graphic display terminal or remote display terminal		
	[Modbus] ($\Pi \triangleleft B$): Integrated Modbus		
	[CANopen] (F n): Integrated CANopen® [Com. card] (F E): Communication card (if inserted)		
Pi	[RP] (P i): Pulse input		
A 10 1	[Al virtual 1] (
 A 10	[OA10] (A F I D): Function blocks: Analog Output 10		

DRI- > CONF > FULL > FBM-

Code	Name / Description	Adjustment range	Factory setting		
C o P	[Copy channel 1 <> 2]		[No] (n a)		
₹ 2 s	▲ V	VARNING			
	UNANTICIPATED EQUIPMENT OPERATION				
	This parameter can cause unintended movements motor, sudden acceleration or stops.	s, for example, inversion of the direct	ion of rotation of the		
	Verify that the setting of this parameter does not cause unintended movements.				
	Verify that the setting of this parameter does not be a set of the parameter does				
	Failure to follow these instructions can result in death, serious injury, or equipment damage.				
	Can be used to copy the current reference and/or the comexample. If [Profile] ([H [F]) page 154 is set to [Not separ.] (5 1 for to channel 2. If [Profile] ([H [F]) is set to [I/O profile] (10), copying to A reference or a command cannot be copied to a channel. The reference copied is [Frequency ref.] (F r H) (before the this case, the reference copied is [Output frequency] (r H)	7) or [Separate] (5 E P), copying will only will be possible in both directions. on the terminals. ramp) unless the destination channel reference.	be possible from channel 1		
n					
5 .	()				
Γ.					



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



To change the assignment of this parameter, press the ENT key for 2 s.

DRI- > CONF > FULL > FBM- > FBA-

As the graphic display terminal may be selected as the command and/or reference channel, its action modes can be configured.

The parameters on this page can only be accessed on the graphic display terminal, and not on the integrated display terminal.

Comments:

- The display terminal command/reference is only active if the command and/or reference channels from the terminal are active with the exception of [T/K] (F L) (command via the display terminal), which takes priority over these channels. Press [T/K] (F L) (command via the display terminal) again to revert control to the selected channel.
- Command and reference via the display terminal are impossible if the latter is connected to more than one drive.
- The JOG, preset speed and +/- speed functions can only be accessed if [Profile] (☐ H ☐ F) is set to [Not separ.] (5 , П).
- The preset PID reference functions can only be accessed if [Profile] (L H L F) is set to [Not separ.] (5 , Π) or [Separate] (5 E P).
- The [T/K] (F L) (command via the display terminal) can be accessed regardless of the [Profile] (L H L F).

Code	Name / Description	Adjustment range	Factory setting
Fnl	[F1 key assignment]	1	[No] (n a)
	[No] (na): Not assigned [Jog] (F Ja L): JOG operation [Preset spd2] (F P 5 I): Press the key to run the drive at the 2nd preset spt to stop the drive.	peed [Preset speed 2] (5	₽ ₴) page 97. Press STOP
F P S 2	[Preset spd3] (F P 5 2): Press the key to run the drive at the 3rd preset spto stop the drive.	peed [Preset speed 3] (5	P ∃) page <u>97</u> . Press STOP
FPrl			
FPr∂	[PID ref. 3] (F P r 2): Sets a PID reference equal to the 3rd preset PID reference [Preset ref. PID 3] (r P 3) page 100, without sending a run command. Only operates if [Ref.1 channel] (F r I) is set to [HMI] (L [[]). Does not operate with the [T/K] (F L) function.		
F u S P	[+speed] (F u 5 P): Faster, only operates if [Ref.2 channel] (F r 2) is seincrease the speed. Press STOP to stop the drive.	et to [HMI] (L [[). Press	the key to run the drive and
FdSP	[- speed] (F d 5 P): Slower, only operates if [Ref.2 channel] (F r 2) is s assigned to [+ speed]. Press the key to run the drive and decrease the sp		
FĿ	[T/K] (F L): Command via the display terminal: Takes priority over [Cmd [Ref. 2 switching] (r F L).		
Fn2	[F2 key assignment]		[No] (n a)
	Identical to [F1 key assignment] (F n I) page 157.		
Fn3	[F3 key assignment]		[No] (n a)
	Identical to [F1 key assignment] (F n I) page 157.		
Fn4	[F4 key assignment]		[No] (n a)
	Identical to [F1 key assignment] (F n I) page 157.		
ЬПР	[HMI cmd.]		[Stop] (5 L a P)
*	When the [T/K] (F L) function is assigned to a key and that function is actively when control returns to the graphic display terminal or remote display term		the behavior at the moment
5 <i>L o P</i>	[Stop] (5 £ a P): Stops the drive (although the controlled direction of opera (to be taken into account on the next RUN command)).	ation and reference of the p	previous channel are copied
Ь⊔ПҒ	[Bumpless] (b u IT F): Does not stop the drive (the controlled direction of are copied)	f operation and the referer	nce of the previous channel



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

DRI- > CONF > FULL > FBM- > FBP-

Function Block Management

Code	Name / Description	Adjustment range	Factory setting
Full	[FULL] (continued)		
ГЬП -	[FUNCTION BLOCKS]		
ПГЬ-	[MONIT. FUN. BLOCKS]		
	Note: This section shows only what is possible to do with local or remote dip PC software, please refer to the dedicated Function blocks manual.	splay on the drive. For a	dvanced configuration using
F 6 5 E	[FB Status]		
.dLE CHEC StoP .n.t cun Err	[Check prog.] ([H E [): Check the program downloaded [Stop] (5 L p P): The Function blocks application is stopped [Init] (p p L E): Check coherency between ATVLogic program and Function blocks parameters [Run] (p p p): The Function blocks application is running		
FBFE	[FB Fault]		
 6 6 7 P P 6 A U 6 A U 7 A D 8 A D 1 C	[Internal] (In E): Internal detected error [Binary file] (In D): Binary file corrupted [Intern Para.] (In P): Internal parameter detected error [Para. RW] (P In D): Parameter access detected error [Calculation] (In L D): Calculation detected error [TO AUX] (In In Internal D): TimeOut AUX task [TO synch] (In Internal D): TimeOut in PRE/POST task [Bad ADLC] (In Internal D): ADLC with bad parameter		
Fb :-	[FB IDENTIFICATION]		
buEr	[Program version]	0 to 255	-
*	Program user version.		
b n 5	[Program size]	0 to 65,535	-
*	Program file size.		
bnu	[Prg. format version]	0 to 255	-
	Binary format version of the drive.		
ΓĿυ	[Catalog version]	0 to 65,535	-
	Catalog version of the drive.		
FЬП-	[FUNCTION BLOCKS] (continued)		
FbCd	[FB Command]		
0	Allows to start and stop the function blocks manually.		
	[FB Command] (F b c d) is forced to [Stop] (5 b c P) if there is no valid function blocks application in the drive memory. [FB Command] (F b c d) is set to [Start] (5 b c b) when the function blocks application switch to Run according to [FB start mode] (F b c n) configuration. Note: As soon as the function blocks are started, the drive is considered as in running state and the modification of configuration parameters is no longer possible.		
5 t o P 5 t r t			

Code	Name / Description	Adjustment range	Factory setting		
FbrN	[FB start mode]	,	[No] (n a)		
₹ 2 s	UNANTICIPATED EQUIPMENT OPERATION Depending on the setting of this parameter, function bloc • Verify that this setting does not result in unsafe conditi Failure to follow these instructions can result in deat	ks may be immediately exections.			
	Allows to choose the different ways of starting the Function blocks Note: Modifications of this parameter are not taken into account if		s running.		
9 E S	YE 5 [Yes] (YE 5): Function blocks application switches to Run automatically at drive power on				
F 6 5 N	[Stop FB Stop motor]		[Freewheel] (4 E 5)		
	▲ WAR	NING			
	LOSS OF CONTROL If [Stop FB stop motor] (F ₺ 5 爪) is set to [No] (¬□), the stopped. • Only set this parameter to [No] (¬□) if you have imple Failure to follow these instructions can result in deat	emented appropriate alternat	ive stop functions.		
	Allows to setup the way of working of the drive when function block	ks are stopped.			
76 965 70 756 40 1	[Ignore] (n a): The drive does not stop [Freewheel] (4 E 5): Motor stops in freewheel [Ramp stop] (n n P): Ramp stop [Fast stop] (F 5 E): Fast stop [DC injection] (d I v): DC injection				
FbdF	[FB on drive fault]		[Stop] (5 L a P)		
	Behavior of function blocks when the drive trips.				
5 t o P	[Stop] (5 ½ ¬ P): Function blocks stops when the drive trips, output [Ignore] (¬ ¬ ¬): Function blocks continue to work when the drive				
F b A -	[INPUTS ASSIGNMENTS]	trips (except Cr r and int L)			
, L D 1	[Logic input 1 assignment]		[No] (n a)		
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	Possible assignment for the Function block logic input.				
n o FL b F b R F c I F c d C d I	[Ref.1 channel] (F r I) Reference source 1 [Ref.2 channel] (F r 2) Reference source 2	hreshold] (F & d) page 102) freq. threshold 2] (F & d) page vitching] (E 5 5))	,		
Fr 16 4F5	[Ref.1B channel] (F r L b): Reference channel = channel 1b (for [Yes] (4 E 5): Yes	[Ref. 2 switching] (r F [))			
	[LI1] (L I): Logical input LI1 [] (): See the assignment conditions on page 153				
, L	[Logic input x assignment]		[No] (n a)		
, _	All the Function Blocks logic inputs available on the drive are proce [Logic input 1 assignment] (, L [] I) above, up to [Logic input		<u> </u>		

Code	Name / Description	Adjustment range	Factory setting
FЬП-	[FUNCTION BLOCKS] (continued)	-	
FBP-	[FB PARAMETERS]		
	Internal parameters available for the user program.		
поот	П	0 to 65,535	0
(1)	M001 Parameter saved in EEprom.		
()			
0002	П	0 to 65,535	0
(1)	M002 Parameter saved in EEprom		
()			
пооз	[]	0 to 65,535	0
(1)	M003 Parameter saved in EEprom		1
()			
ПООЧ	П	0 to 65,535	0
(1)	M004 Parameter saved in EEprom		
()			
ПОО5	П	0 to 65,535	0
(1)	M005 Parameter written in RAM		
()			
ПООБ	П	0 to 65,535	0
(1)	M006 Parameter written in RAM		1
()			
רםםח	П	0 to 65,535	0
(1)	M007 Parameter written in RAM		•
()			
поов	П	0 to 65,535	0
(1)	M008 Parameter written in RAM	L	1
0			

(1) If a graphic display terminal is not in use, values greater than 9,999 will be displayed on the 4-digit display with a period mark after the thousand digit, for example, 15.65 for 15,650.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

[APPLICATION FUNCT.] (F u n -)

Summary of functions:

Code	Name	Page
(r E F -)	[REFERENCE SWITCH.]	<u>167</u>
(- H -)	[REF. OPERATIONS]	<u>168</u>
(r P E -)	[RAMP]	<u>170</u>
(5 L L -)	[STOP CONFIGURATION]	<u>173</u>
(Ad[-)	[AUTO DC INJECTION]	<u>176</u>
([JOG]	<u>178</u>
(P55-)	[PRESET SPEEDS]	<u>181</u>
(u P d)	[+/- SPEED]	<u>185</u>
(5 r E -)	[+/-SPEED AROUND REF.]	187
(5 <i>P</i> П-)	[MEMO REFERENCE]	<u>188</u>
(FL ,-)	[FLUXING BY LI]	<u>189</u>
(b L C -)	[BRAKE LOGIC CONTROL]	<u>194</u>
(ELП-)	[EXTERNAL WEIGHT MEAS.]	200
(H5H-)	[HIGH SPEED HOISTING]	<u>205</u>
(P id-)	[PID REGULATOR]	<u>210</u>
(Pr I-)	[PID PRESET REFERENCES]	214
(<i>E a L -</i>)	[TORQUE LIMITATION]	<u>216</u>
([L -)	[2nd CURRENT LIMIT.]	<u>218</u>
(, 2 E -)	[DYN CURRENT LIMIT]	<u>219</u>
(L L C -)	[LINE CONTACTOR COMMAND]	221
(o [[-)	[OUTPUT CONTACTOR CMD]	<u>223</u>
(L P o -)	[POSITIONING BY SENSORS]	227
(NLP-)	[PARAM. SET SWITCHING]	230
(ППС-)	[MULTIMOTORS/CONFIG.]	235
(Ful-)	[AUTO TUNING BY LI]	236
(<i>Ero-</i>)	[TRAVERSE CONTROL]	237
(<i>LH5-</i>)	[HSP SWITCHING]	244
(d[[-)	[DC BUS]	245

The parameters in the [APPLICATION FUNCT.] ($F \sqcup n -$) menu can only be modified when the drive is stopped and there is no run command, except for parameters with a $\$ symbol in the code column, which can be modified with the drive running or stopped.

Note: Compatibility of functions

The choice of application functions may be limited by the number of I/O and by the fact that some functions are incompatible with others. Functions that are not listed in the table below are fully compatible.

If there is an incompatibility between functions, the first function configured will help to prevent the others being configured.

Each of the functions on the following pages can be assigned to one of the inputs or outputs.

AWARNING

UNANTICIPATED EQUIPMENT OPERATION

Multiple functions can be assigned to and simultaneously activated via a single input.

• Verify that assigning multiple functions to a single input does not result in unsafe conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

DRI- > CONF > FULL > REF-

It is only possible to assign one input to several functions at [Advanced] ($\mathcal{H} d u$) and [Expert] ($\mathcal{E} \mathcal{P} r$) levels. Before assigning a command, reference or function to an input or output, the user must check that this input or output has not already been assigned and that another input or output has not been assigned to an incompatible function.

The drive factory setting or macro configurations automatically configure functions, which may help to prevent other functions being assigned.

In some case, it is necessary to unconfigure one or more functions in order to be able to enable another. Check the compatibility table below.

Stop functions have priority over run commands.

Speed references via logic command have priority over analog references.

Note: This compatibility table does not affect commands that can be assigned to the keys of the graphic display terminal (see page $\underline{24}$).

Compatibility table

Companionity table				1	1	1						1	1	1							
	Reference operations (page 168)	+/- speed (3) (page <u>185</u>)	Preset speeds (page <u>180</u>)	PID regulator (page <u>210</u>)	Traverse control (page 242)	JOG operation (page 178)	Reference switching	Skip frequency	(page 103) Brake logic control	(page <u>194</u>)	Auto DC injection (page <u>176</u>)	Catch on the fly (page 253)	Output contactor command (page 223)	DC injection stop (page 173)	Fast stop	Freewheel stop	(page 1/3) +/- speed around a reference	(page <u>187</u>)	High speed hoisting (page <u>205</u>)	Load sharing (page 122)	Positioning by sensors (page 227)
Reference operations (page <u>168</u>)			†	(2)		1	1	1													
+/- speed (3) (page <u>185</u>)					•	•	1	1													
Preset speeds (page 180)	+					†	1	1													
PID regulator (page 210)	• (2)				•	•	1	1	•	•							•		•	•	•
Traverse control (page 242)		•		•		•	1	t									•	•	•		
JOG operation (page <u>178</u>)	+	•	+	•	•			t	•	•	←						•		•		
Reference switching (page <u>167</u>)	+	+	+	+	+			t									4	t			
Skip frequency (page <u>183</u>)	+	+	←	←	←	+	←										•	–			
Brake logic control (page 194)				•		•						•	•	•							
Auto DC injection (page 176)						1								Ť		1					
Catch on the fly (page <u>253</u>)									•	•											
Output contactor command (page 223)									•	•											
DC injection stop (page <u>173</u>)									•		+				• (1)	1					
Fast stop (page 173)														• (1)		t					
Freewheel stop (page 173)											←			+	+						
+/- speed around a reference (page 187)				•	•	•	+	1													
High speed hoisting (page 205)				•	•	•															
Load sharing (page 122)				•																	
Positioning by sensors (page <u>227</u>)				•																	

(1) Priority is given to the first of these two stop modes to be activated.

(2) Only the multiplier reference is incompatible with the PID regulator.							
Incompatible functions	Compatible functions	Not applicable					

Priority functions (functions which cannot be active at the same time):

The function indicated by the arrow has priority over the other.


DRI- > CONF > FULL > FUN- > OAI-

Incompatible Functions

The following function will be inaccessible or deactivated after an Automatic restart.


This is only possible for control type if [2/3 wire control] ($E \ E$) is set to [2 wire] ($E \ E$) and if [2 wire type] ($E \ E$) is set to [Level] ($E \ E$) or [Fwd priority] ($E \ E$). See [2/3 wire control] ($E \ E$) page 85.

When a function is assigned, a ✓ appears on the graphic display terminal, as illustrated in the example below:

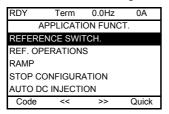

If you attempt to assign a function that is incompatible with another function that has already been assigned, an alarm message will appear:

· With the graphic display terminal:

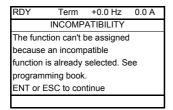


With the integrated display terminal and the remote display terminal:
 COMP flashes until ENT or ESC is pressed.

When you assign a logic input, an analog input, a reference channel or a bit to a function, pressing the HELP key will display the functions that may already have been activated by this input, bit or channel.


When a logic input, an analog input, a reference channel or a bit that has already been assigned to another function, the following screens appear:

• With the graphic display terminal:

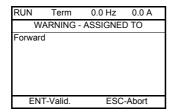

If the access level permits this new assignment, pressing ENT confirms the assignment.

If the access level does not permit this new assignment, pressing ENT results in the following display:

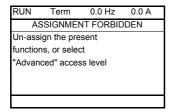

· With the integrated display terminal:

The code for the first function, which is already assigned, is displayed flashing.

If the access level permits this new assignment, pressing ENT confirms the assignment.

If the access level does not permit this new assignment, pressing ENT has no effect, and the message continues to flash. It is only possible to exit by pressing ESC.

DRI- > CONF > FULL > FUN- > RPT-


REFERENCE SWITCHING

Code	Name / Description	Adjustment range	Factory setting					
Fun-	[APPLICATION FUNCT.]							
rEF-	[REFERENCE SWITCH.]							
г[Ь	[Ref 1B switching]	[Ref 1B switching] [ch1 active] (F r I)						
	See the diagrams on pages 147 and 148. If the assigned input or bit is at 0, [Ref.1 channel] (Fr I) is active (see [Ref.1 channel] (Fr I) page 154). If the assigned input or bit is at 1, [Ref.1B channel] (Fr Ib) is active. [Ref 1B switching] (r L b) is forced to [ch1 active] (Fr I) if [Profile] (L H L F) is set to [Not separ.] (5 III) with [Ref.1 channel] (Fr I) assigned via the terminals (analog inputs, pulse input). See [Ref.1 channel] (Fr I) page 154.							
	[ch1 active] (F r L): No switching, [Ref.1 channel] (F r I) active							
	[ch1B active] (F r 1b): No switching, [Ref.1B channel] (F r 1b) active [LI1] (L , 1): Logical input LI1	:						
	[] (): See the assignment conditions on page 153 (not [Cd00] ([d a a a) to [Cd15] ([d /5)).						
Frlb	[Ref.1B channel]		[No] (n p)					
A I I A I 2 A I 3 L C C N d b C A n E b P i	[No] (no): Not assigned [Al1] (fl l): Analog input A1 [Al2] (fl l): Analog input A2 [Al3] (fl l): Analog input A3 [HMI] (L C): Graphic display terminal or remote display terminal source [Modbus] (fl d b): Integrated Modbus [CANopen] (fl fl fl): Integrated CANopen® [Com. card] (fl fl fl): Communication option board source [RP] (fl fl): Pulse input [Al virtual 1] (fl fl fl): Virtual analog input 1 with the jog dial (only availation separ.] (5 fl)) [OA01] (fl fl fl): Function blocks: Analog Output 01	ible if [Profile] ([H [F) is not set to					
 0 R 1 D	[OA10] (¬ R I □): Function blocks: Analog Output 10							

DRI- > CONF > FULL > FUN- > RPT

REFERENCE OPERATIONS

Summing input / Subtracting input / Multiplier

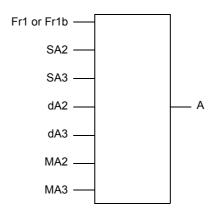

 $A = (Fr1 \text{ or } Fr1b + SA2 + SA3 - dA2 - dA3) \times MA2 \times MA3$

- If 5 R 2, 5 R 3, d R 2, d R 3 are not assigned, they are set to 0.
- If Π R 2, Π R 3 are not assigned, they are set to 1.
- A is limited by the minimum L 5 P and maximum H 5 P parameters.
- For multiplication, the signal on \$\Pi P \cdot \text{or } P P \cdot \text{is interpreted as a %. 100% corresponds to the maximum value of the corresponding input. If \$\Pi P \cdot \text{or } P P \cdot \text{is sent via the communication bus or graphic display terminal, an \$\Pi F \cdot \text{multiplication variable, page } \frac{284}{284}\$ must be sent via the bus or graphic display terminal.
- Reversal of the direction of operation in the event of a negative result can be inhibited (see [RV Inhibition] (5 , n) page 154).

Code	Name / Description Ac	ljustment range	Factory setting			
Fun-	[APPLICATION FUNCT.] (continued)					
o A , -	[REF. OPERATIONS] Reference = (Fr1 or Fr1b + SA2 + SA3 - dA2 - dA3) x MA2 x MA3. See the diagrams on pages 147 and 148.					
	Note: This function cannot be used with certain other functions. Follo	· · · · —	_			
5 A 2	[Summing ref. 2]		[No] (n a)			
	Selection of a reference to be added to [Ref.1 channel] (F r I) or [F	Ref.1B channel] (Fr Ib).				
0.0	[No] (np): Not assigned					
	[AI1] (F / I): Analog input A1					
	[Al2] (R / 2): Analog input A2					
A 13	[Al3] (R I 3): Analog input A3					
	[HMI] (L []): Graphic display terminal or remote display terminal so	urce				
	[Modbus] (П d b): Integrated Modbus					
	[CANopen] ([Fn]): Integrated CANopen®					
	[Com. card] (n E L): Communication option board source					
	[RP] (P i): Motor voltage					
	[Al virtual 1] (F , u l): Virtual analog input 1 with the jog dial	h				
	[Al virtual 2] (F, u 2): Virtual analog input 2 by the communication	DUS				
0 H U I	[OA01] (B I I): Function blocks: Analog Output 01					
 A I D	[OA10] (¬ R I □): Function blocks: Analog Output 10					
5 A 3	[Summing ref. 3]		[No] (n a)			
	Selection of a reference to be added to [Ref.1 channel] ($F r I$) or [Identical to [Summing ref. 2] ($5 R 2$) page 168.	Ref.1B channel] (Fr Ib).				
4 A 2	[Subtract. ref. 2]		[No] (n a)			
	Selection of a reference to be subtracted from [Ref.1 channel] (Fr Identical to [Summing ref. 2] (5 P 2) page 168.	I) or [Ref.1B channel] (F r	<i>1</i> b).			

DRI- > CONF > FULL > FUN- > RPT-

Code	Name / Description	Adjustment range	Factory setting			
<i>d A</i> 3	[Subtract. ref. 3]		[No] (n a)			
	Selection of a reference to be subtracted from [Ref.1 channel] (Figure 168 Identical to [Summing ref. 2] (5 Fi 2) page 168.	reference to be subtracted from [Ref.1 channel] (F r I) or [Ref.1B channel] (F r Ib). umming ref. 2] (5 R 2) page 168.				
ПАЗ	[Multiplier ref. 2]	[No] (n o)				
	Selection of a multiplier reference [Ref.1 channel] (Fr I) or [Ref.1B channel] (Fr Ib). Identical to [Summing ref. 2] (5 ft 2) page 168.					
ПЯЗ	[Multiplier ref. 3]		[No] (n a)			
	Selection of a multiplier reference [Ref.1 channel] ($F \ r \ l$) or [Red Identical to [Summing ref. 2] ($5 \ R \ d$) page $\underline{168}$.	f.1B channel] (<i>F r 1b</i>).				

RAMP

Code	Name / Description		Adjustment range	Factory setting
Fun-	[APPLICATION FUNCT.]	(continued)		
rPE-	[RAMP]			
rPE	[Ramp type]			[Linear] (L ,n)
L in 5 C u 5	[Linear] (L r n) [S ramp] (5) [U ramp] (u) [Customized] (L u 5)			
O	S ramps f (Hz) Frs 0 12 11 12 12 13 U ramps f (Hz) f (Hz)			
	Frs Frs 11 12 t	The rounding coefficient is f t1 = 0.5 set ramp time (linea t2 = 1.0 set ramp time (roun t3 = 1.5 set ramp time	r)	
	Customized ramps f (Hz) FrS 10 112 = ACC * (tA1(%) / 100 + tA2(%) t34 = DEC * (tA3(%) / 100 + tA4(%)		0% - tA1) 0%	
ınr	[Ramp increment]	<u>, </u>		[0,1](0.1)
(1) (1)	This parameter is valid for [Acceleration 2] (d E 2). [0,01]: Ramp up to 99.99 seconds [0,1]: Ramp up to 999.9 seconds [1]: Ramp up to 6,000 seconds	ation] (Ħ Ը), [Deceleration] (d E C), [Acceleration 2] (R C	<i>: ⊋</i>) and
ACC	[Acceleration]		0.00 to 6,000 s (2)	3.0 s
(1)	Time to accelerate from 0 to the [Ra parameter must be set according to			ramps, the value of this
d ∈ C	[Deceleration]		0.00 to 6,000 s (2)	3.0 s
O	Time to decelerate from the [Rated parameter must be set according to			ramps, the value of this
(1)	rp and A an an are		0 to 4000/	400/
E Π I ★ () (1)	[Begin Acc round] Rounding of start of acceleration rar Can be set between 0 and 100%. This parameter can be accessed if t			10% (₱ € ₴) ramp time.

DRI- > CONF > FULL > FUN- > STT-

Code	Name / Description	1	Adjustment range	Factory setting
Ł A ≥	[End Acc round] 0 to 100%			10%
* ()	Can be set between	n 0 and (100% - <mark>[Begin Acc ro</mark>	the [Acceleration] ($H \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$	tion 2] (Ħ [₴) ramp time.
(1)				
L A 3	[Begin Dec rou	ınd]	0 to 100%	10%
* () (1)	Can be set between	n 0 and 100%.	the [Deceleration] ($d E \mathcal{L}$) or [Decelerate] ($P \mathcal{L}$) is [Customized] ($\mathcal{L} \cup \mathcal{L}$).	ation 2] (d E 2) ramp time.
L A Y	[End Dec roun	d1	0 to 100%	10%
* () (1)	Can be set betweer	n 0 and (100% - <mark>[Begin Dec ro</mark>	ne [Deceleration] (d E [) or [Deceleration] (L R 3)). e] (r P b) is [Customized] ([u 5).	tion 2] (d E ∂) ramp time.
FrE	[Ramp 2 threst	nold1	0 to 599 Hz according	to rating 0 Hz
		tching can be combined with [Ramp switch ass.] (r P 5) switching a	as follows:
	0	< Frt	ACC, dEC	
	0	> Frt	AC2, dE2	
	1	< Frt	AC2, dE2	
	1	> Frt	AC2, dE2	
r P 5	[Ramp switch	ass.] channel] (F r 1b) page 167	·	[No] (n p)
AC2	[Acceleration 2		0.00 to 6,000 s (2)	5.0 s
* () (1)	Time to accelerate to be set according to	from 0 to the [Rated motor fre the possibility of the applicatio	q.] (F r 5). To have repeatability in rar	mps, the value of this parameter mu
d E 2	[Deceleration 2	2]	0.00 to 6,000 s (2)	5.0 s
* () (1)	Time to decelerate set according to the	from [Rated motor freq.] (F rossibility of the application.	5) to 0. To have repeatability in ramps hold] (F r E) is greater than 0 or if [Ra	

DRI- > CONF > FULL > FUN- > STT-

Code	Name / Description	Adjustment range	Factory setting						
ЬгЯ	[Dec ramp adapt.]		[Yes] (<i>YE</i> 5)						
	N	NOTICE							
	DAMAGE TO THE MOTOR								
	• Only set this parameter to [Yes] (YE 5) or [No synchronous motor.] (\square \square) if the connected moto	r is a permanent magnet						
	Other settings demagnetize permanent magnet sy	nchronous motors.							
	Failure to follow these instructions can result i	n equipment damage.							
	Activating this function automatically adapts the deceleration ramp, if this has been set at a too low value according to the inertia of the load, which can cause an overvoltage detected fault.								
	[Dec ramp adapt.] (b r R) is forced to [No] (n p) if the bra The function is incompatible with applications requiring:	ke logic control [Brake assignme	ent] (L L) is assigned (page 194).						
	Positioning on a ramp.The use of a braking resistor (the resistor would not continuous)	operate correctly).							
n	[No] (na): Function inactive								
	[Yes] (YES): Function active, for applications that do not require strong deceleration The following selections appear depending on the rating of the drive and [Motor control type] (E & E) page 105. They estronger deceleration to be obtained than with [Yes] (YES). Use comparative testing to determine your selection.								
d 4 n l	[High torq. A] (d y n R): Addition of a constant current flow When [Dec ramp adapt.] (b r R) is configured on [High to by the addition of a current flow component. The aim is to it	orq. x] (႕ 별 దx), the dynamic perf							

- (1) The parameter can also be accessed in the [SETTINGS] (5 E L -) menu.
- (2) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1 to 6,000 s according to [Ramp increment] (, , r) page 170.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

DRI- > CONF > FULL > FUN- > ADC-

STOP CONFIGURATION

Code	Name / Description	Adjustment range	Factory setting				
Fun-	[APPLICATION FUNCT.] (continued)						
5 <i>E E -</i>	[STOP CONFIGURATION]						
	Note: Some types of stops cannot be used with all other functions. Follow the instructions on page <u>163</u> .						
5 <i>E E</i>	[Type of stop]		[Ramp stop] (r ПP)				
	Stop mode on disappearance of the run command or appearance Note: If the "brake logic" function on page <u>194</u> has been enabled only ramp type stops may be configured.	•	L 5) page <u>95</u> or <u>213</u> is not 0,				
r N P F S E n S E d C i	[Ramp stop] (r \(\Pi \) P): Stop on ramp [Fast stop] (F \(\subseteq E \)): Fast stop [Freewheel] (n \(\subseteq E \)): Freewheel stop [DC injection] (d \(E \) i): DC injection stop. Available only if [Moto [Sync. mot.] (\(\supseteq E \))).	r control type] (Γ Ł Ŀ) page <u>10</u>	0 <u>5</u> is not set to				
FFE	[Freewheel stop Thd.]	0.2 to 599 Hz	0.2 Hz				
* () (1)	Speed threshold below which the motor will switch to freewheel stop. This parameter supports switching from a ramp stop or a fast stop to a freewheel stop below a low speed threshold. This parameter can be accessed if [Type of stop] (5 £ £) is set to [Fast stop] (F 5 £) or [Ramp stop] (r П P) and if [Brake assignment] (b L C) or [Auto DC injection] (R d C) are configured.						
n 5 E	[Freewheel stop ass.]		[No] (n p)				
	The stop is activated when the input or the bit changes to 0. If the imotor will only restart if [2/3 wire control] (£ £ £) page 85 is set [Level] (£ £ £) or [Fwd priority] (P F a). If not, a new run comm [No] (n a): Not assigned [LI1] (£ i l): Logical input LI1 [] (): See the assignment conditions on page 153	· to [2 wire] (∠ C) and if [2 wire	-				
F S Ł	[Fast stop assign.]		[No] (n a)				
	The stop is activated when the input changes to 0 or the bit change if the input returns to state 1 and the run command is still active, the control $(E \ E)$ page 85 is set to $[2 \ wire] (E \ E)$ and if $[2 \ wire]$ if not, a new run command must be sent. Note: This function cannot be used with certain other functions. Find $[NO] (RB)$: Not assigned	he motor will only restart if [2/3 ne] (L L L) is set to [Level] (L E	wire L) or [Fwd priority] (PF a).				
	[LI1] (L , I): Logical input LI1 [] (): See the assignment conditions on page 153						
d C F	[Ramp divider]	0 to 10	4				
* () (1)	This parameter can be accessed if [Type of stop] (5 \pm \pm) is set to [No] (n \pm) and if [Stop type] (P \mp 5) is set to [Fast stop] (F 5 \pm The ramp that is enabled ([Deceleration] (d \pm \pm 0) or [Deceleration] requests are sent. Value 0 corresponds to a minimum ramp time.).					

DRI- > CONF > FULL > FUN- > ADC-

Code	Name / Description	Adjustment range	Factory setting							
d [,	[DC injection assign.]	,	[No] (n a)							
		▲ WARNING								
	UNINTENDED MOVEMENT									
	Do not use DC injection to generate holdi		tandstill.							
	Use a holding brake to keep the motor in Failure to follow these instructions can re		equipment damage.							
	DC injection braking is initiated when the assigned in If the input returns to state 0 and the run command is is set to [2 wire] (s still active, the motor will only restart if set to [Level] (L E L) or [Fwd priority]	(PF a). If not, a new run command							
	[] (): See the assignment conditions on page 153		0.64 In (2)							
ı d C	[DC inject. level 1]	0.1 to 1.41 ln (2)	0.04 III (2)							
*	NOTICE									
(1) (3)	Verify that the connected motor is properly ra and time in order to avoid overheating and d	OVERHEATING AND DAMAGE TO THE MOTOR Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time in order to avoid overheating and damage to the motor. Failure to follow these instructions can result in equipment damage.								
	Level of DC injection braking current activated via logic input or selected as stop mode. This parameter can be accessed if [Type of stop] (5 £ £) is set to [DC injection] (d [1) or if [DC injection assign.] (d [1) is not [No] (n p).									
Ed i	[DC injection time 1]	0.1 to 30 s	0.5 s							
	NOTICE									
* ()	OVERHEATING AND DAMAGE TO THE MOTOR Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time in order to avoid overheating and damage to the motor. Failure to follow these instructions can result in equipment damage.									
(1) (3)	Maximum current injection time [DC inject. level 1] (, d [). After this time, the injection current becomes [DC inject. level 2] (, d []). This parameter can be accessed if [Type of stop] (5 \(\mathbb{E} \) is set to [DC injection] (d []) or if [DC injection assign.] (d []) is not set to [No] (n a).									

DRI- > CONF > FULL > FUN- > JOG-

Code	Name / Description	Adjustment range	Factory setting						
1 d C 2	[DC inject. level 2]	0.1 ln (2) to [DC inject. level 1]	0.5 ln (2)						
*	NOTICE								
(1) (3)	OVERHEATING AND DAMAGE TO THE MOTOR Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time in order to avoid overheating and damage to the motor. Failure to follow these instructions can result in equipment damage.								
	Injection current activated by logic input or select elapsed. This parameter can be accessed if [Type of storis not set to [No] (np).		-						
ΕdC	[DC injection time 2]	0.1 to 30 s	0.5 s						
	NOTICE								
(1) (3)	OVERHEATING AND DAMAGE TO THE MOTOR Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time in order to avoid overheating and damage to the motor. Failure to follow these instructions can result in equipment damage.								
		Maximum injection time [DC inject. level 2] ($ \ \ d \ \ C \ \ C$) for injection, selected as stop mode only. This parameter can be accessed if [Stop type] ($ \ \ C \ \ \ C \ \ \ C \ \ C \ \ C \ \ C \ \$							
dotd	[Dis. operat opt code]		[Ramp stop] (¬ П P)						
	Disable operation stop mode.								
n 5 L r N I		rive function							

- (1) The parameter can also be accessed in the [SETTINGS] (5 E L -) menu.
- (2) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.
- (3) These settings are independent of the [AUTO DC INJECTION] (R d [-) function.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

()


Parameter that can be modified during operation or when stopped.

AUTO DC INJECTION

Code	Name / Description	Adjustment range	Factory setting			
Fun-	[APPLICATION FUNCT.] (continued)					
AGC-	[AUTO DC INJECTION]					
A 9 C	[Auto DC injection]		[Yes] (4E 5)			
O	HAZARD OF ELECTRIC SHOCK, EXPLOSIC If the parameter [Auto DC injection] (A d C) is if the motor does not run. • Verify that using this setting does not result Failure to follow these instructions will result	set to [Continuous] (E b), DC in in unsafe conditions.	njection is always active, even			
2 s		WARNING				
	UNINTENDED MOVEMENT • Do not use DC injection to generate holding torque when the motor is at a standstill. • Use a holding brake to keep the motor in the standstill position. Failure to follow these instructions can result in death, serious injury, or equipment damage.					
	Automatic current injection on stopping (at the end of t Note: There is an interlock between this function and to [Continuous] (F L E), [Auto DC injection] (R d L Note: [Auto DC injection] (R d L) is set to [No] (n a [Sync. mot.] (5 y n). [Auto DC injection] (R d L) is forced to [No] (n a) w This parameter gives rise to the injection of current ever running.	Motor fluxing] (FL \Box) page 95. If [I] must be [No] (π \Box). When [Motor control type] (ELE) are [Brake assignment] (ELE) page	page 105 is set to ge 194 is not set to [No] (n a).			
9ES CE 5 d C 1	[Yes] (YES): Adjustable injection time	0 to 1.2 In (2)	0.7 ln (2)			
		, ,	. , ,			
	NOTICE					
* () (1)	OVERHEATING AND DAMAGE TO THE MOTOR Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time in order to avoid overheating and damage to the motor. Failure to follow these instructions can result in equipment damage.					
	Level of standstill DC injection current [Auto DC injec	tion] (Ħ d ⊑) is not [No] (ਜ਼ ਜ਼).				
F d C I	[Auto DC inj. time 1]	0.1 to 30 s	0.5 s			
	NOTICE					
* () (1)	OVERHEATING AND DAMAGE TO THE MOTOR Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time in order to avoid overheating and damage to the motor. Failure to follow these instructions can result in equipment damage.					
, ,	Standstill injection time. This parameter can be access If [Motor control type] (<i>E & E</i>) page 105 is set to [Sy time.					

Code	Name / Des	scription		Adjustment range	Factory setting	
5465	[Auto DC	C inj. leve	el 2]	0 to 1.2 In (2)	0.5 In (2)	
* () (1)	NOTICE OVERHEATING AND DAMAGE TO THE MOTOR Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time in order to avoid overheating and damage to the motor. Failure to follow these instructions can result in equipment damage.					
			OC injection current. accessed if [Auto DC injection]	(Ħ d ℂ) is not [No] (n a).		
F G C 2	[Auto DC	C inj. time	e 2]	0 to 30 s	0 s	
* () (1)	Verify the and time Failure 2nd stands	nat the con e in order t to follow till injection	o avoid overheating and dam these instructions can resu	d for the DC injection current to age to the motor. Ilt in equipment damage.	be applied in terms of amount	
	YES	x ≠ 0	SdC1 - tdC1 SdC1	tdC1+tdC2 t		
	Ct	= 0	SdC2 tdC1	t		
	Run command Speed		1	t		

- (1) The parameter can also be accessed in the [SETTINGS] (5 E L -) menu.
- (2) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.

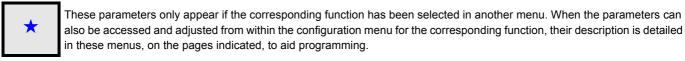

Parameter that can be modified during operation or when stopped.

To change the assignment of this parameter, press the ENT key for 2 s.

JOG

Code	Name / Description			Adjustment	range	Factory setting	
Fun-	[APPLICATION FUNC	T.] (continued)					
J o G -	[JOG] Note: This function cannot be used with certain other functions. Follow the instructions on page 163.						
J o G	[JOG]					[LI3] (L , 3)	
	Pulse operation. The JOG function is only active if the command channel and the reference channels are on the terminals. The function is active when the assigned input or bit is at 1. Example: 2-wire control operation (tCC = 2C).						
	Motor frequency	Ramp DEC/DE2	Ramp force	d to 0.1 s			
	Reference						
	JGF reference	/					
	0		1				
	JGF reference						
	LI (JOG)						
	1 -					_	
	0		JGt			→	
	Forward A						
	0		-				
	Reverse A						
	1						
	3						
L i		nditions on page <u>153</u>	(not [Cd00]	(┌d▯▯) to [Cd15]([d 15))	
J G F	[Jog frequency]			0 to 10 Hz		10 Hz	
*	Reference in jog operation. This parameter can be accesse	d if [.lOG] (/ a [.) is r	not set to [N				
()	This parameter can be accessed	~ [000] (1 1 1 1) is i	iot dot to [N	~] (11 <i>Ll</i>).			
(1)							

DRI- > CONF > FULL > FUN- > PSS-

Code	Name / Description	Adjustment range	Factory setting
J G E	[Jog delay]	0 to 2.0 s	0.5 s
*	Anti-repeat delay between 2 consecutive jog operat This parameter can be accessed if [JOG] (J a []) is		,
\Diamond	inio paramotor can se decesses in [655] (1122) is	s not oot to proj (172).	
(1)			

(1) The parameter can also be accessed in the [SETTINGS] (5 E L -) menu.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

PRESET SPEEDS

2, 4, 8 or 16 speeds can be preset, requiring 1, 2, 3 or 4 logic inputs respectively.

Note:

You must configure 2 and 4 speeds in order to obtain 4 speeds.

You must configure 2, 4 and 8 speeds in order to obtain 8 speeds.

You must configure 2, 4, 8, and 16 speeds in order to obtain 16 speeds.

Combination table for preset speed inputs

16 speeds LI (PS16)	8 speeds LI (PS8)	4 speeds LI (PS4)	2 speeds LI (PS2)	Speed reference
0	0	0	0	Reference (1)
0	0	0	1	SP2
0	0	1	0	SP3
0	0	1	1	SP4
0	1	0	0	SP5
0	1	0	1	SP6
0	1	1	0	SP7
0	1	1	1	SP8
1	0	0	0	SP9
1	0	0	1	SP10
1	0	1	0	SP11
1	0	1	1	SP12
1	1	0	0	SP13
1	1	0	1	SP14
1	1	1	0	SP15
1	1	1	1	SP16

⁽¹⁾ See the diagram on page $\underline{147}$: Reference 1 = (SP1).

Code	Name / Description	Adjustment range	Factory setting	
Fun-	[APPLICATION FUNCT.] (continued)			
P55-	[PRESET SPEEDS]			
	Note: This function cannot be used with certain other functions. Follow the instructions on page 163			
P S 2	[2 preset speeds]		[No] (n p)	
L , I	[No] (n a): Not assigned [Ll1] (L , I): Logical input Ll1 [] (): See the assignment conditions on page 153			
P 5 4	[4 preset speeds]		[No] (n p)	
	Identical to [2 preset speeds] (P 5 2) page 181. To obtain 4 speeds, you must also configure 2 speeds.			
P 5 8	[8 preset speeds]		[No] (n p)	
	Identical to [2 preset speeds] (P 5 2) page 181. To obtain 8 speeds, you must also configure 2 and 4 speeds.			
P5 16	[16 preset speeds]		[No] (n o)	
	Identical to [2 preset speeds] (P 5 2) page 181. To obtain 16 speeds, you must also configure 2, 4 and 8 speeds.		_	
5 P 2	[Preset speed 2]	0 to 599 Hz	10 Hz	
*	Preset speed 2. See the Combination table for preset PID references page	206		
O				
(1)		1		
5 P 3	[Preset speed 3]	0 to 599 Hz	15 Hz	
* () (1)	Preset speed 3. See the Combination table for preset PID references page	· <u>200</u> .		
5 P 4	[Preset speed 4]	0 to 599 Hz	20 Hz	
★ () (1)	Preset speed 4. See the Combination table for preset PID references page	2 <u>206</u> .		
5 P 5	[Preset speed 5]	0 to 599 Hz	25 Hz	
* () (1)	Preset speed 5. See the Combination table for preset PID references page	206.		
5 P 6	[Preset speed 6]	0 to 599 Hz	30 Hz	
★ () (1)	Preset speed 6. See the Combination table for preset PID references page	2 <u>206</u> .		
5 P 7	[Preset speed 7]	0 to 599 Hz	35 Hz	
*	Preset speed 7. See the Combination table for preset PID references page	2 <u>06</u> .		
Ô				
(1)				

DRI- > CONF > FULL > FUN- > UPD-

Code	Name / Description	Adjustment range	Factory setting
5 P B	[Preset speed 8]	0 to 599 Hz	40 Hz
*	Preset speed 8. See the Combination table for preset PID re	eferences page 206.	
\circ			
(1)			
5 <i>P</i> 9	[Preset speed 9]	0 to 599 Hz	45 Hz
*	Preset speed 9. See the Combination table for preset PID re	ferences page <u>206</u> .	
()			
(1)	IDroot aread 401	0 to 599 Hz	50 Hz
5 P 1 0	[Preset speed 10] Preset speed 10. See the Combination table for preset PID		50 HZ
*	rieset speed to. See the Combination table for preset rib	elelelices page <u>200</u> .	
()			
(1)			
5 <i>P I I</i>	[Preset speed 11]	0 to 599 Hz	55 Hz
*	Preset speed 11. See the Combination table for preset PID	references page <u>206</u> .	
()			
(1)			
5P 12	[Preset speed 12]	0 to 599 Hz	60 Hz
*	Preset speed 12. See the Combination table for preset PID	references page <u>206</u> .	
()			
(1)	IDroot aread 421	0 to 599 Hz	70 Hz
5 <i>P</i> 13	[Preset speed 13] Preset speed 13. See the Combination table for preset PID		70 HZ
*	reset speed 15. See the Combination table for preset 1 lb	elelelices page <u>200</u> .	
()			
(1)			
5 <i>P</i> 14	[Preset speed 14]	0 to 599 Hz	80 Hz
*	Preset speed 14. See the Combination table for preset PID	references page <u>206</u> .	
()			
(1)			
5 P 1 S	[Preset speed 15]	0 to 599 Hz	90 Hz
*	Preset speed 15. See the Combination table for preset PID	references page <u>206</u> .	
()			
(1)	[Procet cheed 46]	0 to 599 Hz	100 Hz
5 <i>P</i> 16	[Preset speed 16] Preset speed 16.	0 10 388 112	100 112
*	The appearance of these [Preset speed x] (5 Px) parameter		eeds configured.
()	See the Combination table for preset PID references page 2	<u>06</u> .	
(1)			

Code	Name / Description	Adjustment range	Factory setting	
JPF	[Skip Frequency]	0 to 599 Hz	0 Hz	
()	Skip frequency. This parameter helps to prevent prolonged operation withir This function can be used to help to prevent a critical speed, which would on to 0 renders it inactive.	•		
JF2	[Skip Frequency 2]	0 to 599 Hz	0 Hz	
()	2nd skip frequency. This parameter helps to prevent prolonged operation frequency. This function can be used to help to prevent a critical speed, w the function to 0 renders it inactive.	,	, ,	
JF 3	[3rd Skip Frequency]	0 to 599 Hz	0 Hz	
()	3rd skip frequency. This parameter helps to prevent prolonged operation within an adjustable range around the regulated frequency. This function can be used to help to prevent a critical speed, which would cause resonance, being reached. Setting the function to 0 renders it inactive.			
JF H	[Skip.Freq.Hysteresis]	0.1 to 10 Hz	1 Hz	
*	This parameter is visible if at least one skip frequency [Skip Frequency] (JFF), [Skip Frequency 2] (JFZ) or [3rd Skip Frequency] (JF 3) is different from 0. Skip frequency range: between (JFF – JFH) and (JFF + JFH), for example. This adjustment is common to the 3 frequencies (JPF, JFZ, JF3).			

(1) The parameter can also be accessed in the [SETTINGS] (5 E E -) menu.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

+/- SPEED

Two types of operations are available:

- Use of single action keys: Two logic inputs are required in addition to the operating direction(s).


 The input assigned to the "+ speed" command increases the speed, the input assigned to the "- speed" command decreases the speed.
- Use of double action keys: Only one logic input assigned to "+ speed" is required.

+/- speed with double-press buttons:


Description: 1 button pressed twice (2 steps) for each direction of rotation. A contact closes each time the button is pressed.

	Released (- speed)	1st press (speed maintained)	2nd press (faster)
Forward button	_	а	a and b
Reverse button	_	С	c and d

Example of wiring:

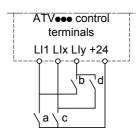

LI1: Forward LIx: Reverse Lly: + speed

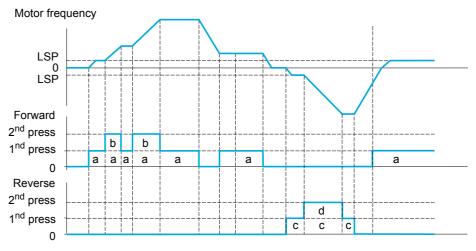

Do not use this +/-speed type with 3-wire control.

Whichever type of operation is selected, the max. speed is set by [High speed] (H 5 P) (see page 87).

Note:

If the reference is switched via [Ref. 2 switching] ($r F \mathcal{L}$) (see page 155) from any one reference channel to another reference channel with "+/- speed", the value of reference [Output frequency] (r F r) (after ramp) may be copied at the same time in accordance with the [Copy channel 1 --> 2] ($\mathcal{L} \mathcal{L} \mathcal{P}$) parameter (see page 156).

If the reference is switched via [Ref. 2 switching] (r F L) (see page 155) from one reference channel to any other reference channel with "+/- speed", the value of reference [Output frequency] (r F r) (after ramp) is copied at the same time.

This helps to prevent the speed being incorrectly reset to zero when switching takes place.

Code	Name / Description	Adjustment range	Factory setting
Fun-	[APPLICATION FUNCT.] (continued)		
uPd-	[+/- SPEED]		
	This function can be accessed if reference channel [Ref.2 channel] ($F r 2$) Note: This function cannot be used with certain other functions. Follow the in		d E), see page <u>155</u> .
ы 5 <i>Р</i>	[+ speed assignment]		[No] (n a)
	Function active if the assigned input or bit is at 1.		
L + I	[No] (ne): Not assigned [Ll1] (L I): Logical input Ll1 [] (): See the assignment conditions on page 153		
d 5 P	[-Speed assignment]		[No] (n a)
	See the assignment conditions on page <u>153</u>		
	Function active if the assigned input or bit is at 1.		
5 t r	[Reference saved]		[No] (n a)
*	Associated with the "+/- speed" function, this parameter can be used to save - When the run commands disappear (saved to RAM). - When the supply mains or the run commands disappear (saved to EEF Therefore, the next time the drive starts up, the speed reference is the last reference.	PROM).	
гЯП	[No] (n a): No save (the next time the drive starts up, the speed reference is [RAM] (r R n): Saved in RAM [EEprom] (E E P): Saved in EEPROM	s [Low speed] (L 5 P), s	ee page <u>87</u>)




These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

+/- SPEED AROUND A REFERENCE

The reference is given by **[Ref.1 channel]** (F r I) or **[Ref.1B channel]** (F r Ib) with summing/subtraction/multiplication functions and preset speeds if relevant (see the diagram on page <u>147</u>). For improved clarity, we will call this reference A. The action of the +speed and -speed keys can be set as a % of this reference A. On stopping, the reference (A +/- speed) is not saved, so the drive restarts with reference A+ only.

The maximum total reference is limited by **[High speed]** (H 5 P) and the minimum reference by **[Low speed]** (L 5 P), see page <u>87</u>.

Example of 2-wire control:

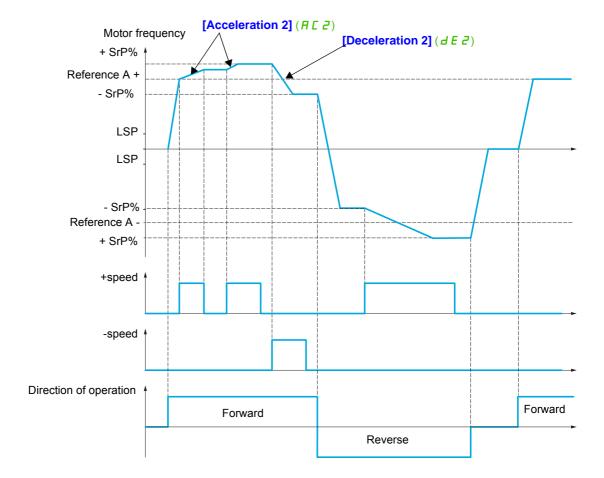

DRI- > CONF > FULL > FUN- > FLI-

Code	Name / Description	Adjustment range	Factory setting		
Fun-	[APPLICATION FUNCT.] (continued)				
5 r E -	[+/-SPEED AROUND REF.]				
	The function can be accessed for reference channel [Ref.1 channel] (F - Note: This function cannot be used with certain other functions. Follow the		<u>66</u> .		
ו 5 ע	[+ speed assignment]		[No] (n a)		
	No] (n a): Not assigned [Ll1] (L , I): Logical input Ll1 [] (): See the assignment conditions on page 153				
d 5 i	[-Speed assignment]		[No] (n a)		
	See the assignment conditions on page <u>153</u>				
	Function active if the assigned input or bit is at 1.				
5 r P	[+/-Speed limitation]	0 to 50%	10%		
*	This parameter limits the variation range with +/- speed as a % of the reference. The ramps used in this function are [Acceleration 2] (# [2]) and [Deceleration 2] (# [2]). This parameter can be accessed if +/- speed is assigned.				
AC 2	[Acceleration 2]	0.00 to 6,000 s (2)	5.00 s		
*	Time to accelerate from 0 to the [Rated motor freq.] (F - 5). To have repute set according to the possibility of the application.	peatability in ramps, the v	value of this parameter must		
()	This parameter can be accessed if [+/- speed] (L u d) is assigned.				
(1)					
d E ≥	[Deceleration 2]	0.00 to 6,000 s (2)	5.00 s		
*	Time to decelerate from the [Rated motor freq.] (F r 5) to 0. To have repute set according to the possibility of the application.	peatability in ramps, the v	value of this parameter must		
()	This parameter can be accessed if [+/- speed] (L u d) is assigned.				
(1)					

- (1) The parameter can also be accessed in the [SETTINGS] (5 E L -) menu.
- (2) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1 to 6,000 s according to [Ramp increment] (, , ,) page 170.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.




Parameter that can be modified during operation or when stopped.

REFERENCE MEMORIZING

Saving a speed reference value using a logic input command lasting longer than 0.1 s.

- This function is used to control the speed of several drives alternately via a single analog reference and one logic input for each drive.
- It is also used to confirm a line reference (communication bus or network) on several drives via a logic input. This allows movements to be synchronized by getting rid of variations when the reference is set.
- The reference is acquired 100 ms after the rising edge of the request. A new reference is not then acquired until a new request is made.

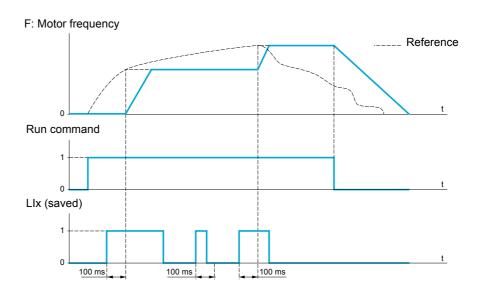

Code	Name / Description	Adjustment range	Factory setting
Fun-	[APPLICATION FUNCT.] (continued)		
5 P N -	[MEMO REFERENCE]		
5 <i>P</i> П	[Ref. memo ass.]		[No] (n a)
	Assignment to a logic input. Function active if the assigned input is at active state.		
	[No] (no): Not assigned		
L 1 I	[LI1] (L , I): Logical input LI1 [] (): See the assignment conditions on page <u>153</u>		

FLUXING BY LOGIC INPUT

Code	Name / Description	Adjustment range	Factory setting		
Fun-	[APPLICATION FUNCT.] (continue	d)			
FL 1-	[FLUXING BY LI]				
FLu	[Motor fluxing]		[No] (F n a)		
		A A DANGER			
	HAZARD OF ELECTRIC SHOCK, EXPL				
A	If the parameter [Motor fluxing] (F L u)		is always active, even if the		
*	motor does not run.				
()	 Verify that using this setting does not refailure to follow these instructions will 				
(1)	The state of the s				
2 s		NOTICE			
∆ 2 S	OVERHEATING AND DAMAGE TO THE	MOTOR			
	Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount				
	and time in order to avoid overheating and damage to the motor. Failure to follow these instructions can result in equipment damage.				
	railure to follow these instructions can	rresuit in equipment damage.			
Fnl	[Not cont.] (F n [): Non-continuous mode				
FEL	[Continuous] (F [L): Continuous mode.				
	This option is not possible if [Auto DC injection] ($H d L$) page $\underline{176}$ is [Yes] ($\underline{Y} E S$) or if [Type of stop] ($\underline{S} E L$) page $\underline{173}$ is [Freewheel] ($\underline{n} S L$).				
Fna	[No] (F n a): Function inactive				
	In order to obtain rapid high torque on startup, magnetic flux needs to already have been established in the motor.				
	In [Continuous] (F L E) mode, the drive automatically builds up flux when it is powered up. In [Not cont.] (F n L) mode, fluxing occurs when the motor starts up.				
	The flux current is greater than [Rated mot. current] (¬ [¬) (configured rated motor current) when the flux is established and				
	is then adjusted to the motor magnetizing current.				
	If [Motor control type] (E & E) page 105 is set to [Sync. mot.] (5 4 n), the [Motor fluxing] (F L u) parameter causes the alignment of the rotor and not the fluxing.				
	If [Brake assignment] (b L C) page 194 is not [N	o] (n a), the [Motor fluxing] (F L u) para	meter has no effect.		
FLi	[Fluxing assignment]		[No] (n a)		
			,		
	NOTICE				
*	OVERHEATING AND DAMAGE TO THE	MOTOR			
	Verify that the connected motor is properly rated for the flux current to be applied in order to avoid				
	overheating and damage to the motor. Failure to follow these instructions can result in equipment damage.				
	Assignment is only possible if [Motor fluxing] (F L u) is set to [Not cont.] (F n L).				
	If an LI or a bit is assigned to the motor fluxing command, flux is built up when the assigned input or bit is at 1.				
	If an LI or a bit has not been assigned, or if the assimotor starts.	signed LI or bit is at 0 when a run comman	d is sent, fluxing occurs when the		
n					
Li	 [LI1] (L , I): Logical input LI1 [] (): See the assignment conditions on page 1 	53			
	[[] (). Occ are assignment conditions on page [<u> </u>			

Code	Name / Description	Adjustment range	Factory setting	
A S Ł	[Angle setting type]		[PSIO align.] (P5 10)	
*	[PSI align] (P5 ,) and [PSIO align] (P5 , p) are working for all	le for measuring the phase-shift angle. Visible only if [Motor control type] ([E E) is set to [Sync. mot.] (5 ½ n). lalign] (P 5 ,) and [PSIO align] (P 5 , n) are working for all type of synchronous motors. [SPM align] (5 P \(\Pi \) R) and lalign] (, P \(\Pi \) R) increase performances depending on the type of synchronous motor.		
	[IPM align] (, P \(\text{P} \(\text{R} \)): Alignment for IPM motor. Alignment mode for Interior-buried Permanent Magnet motor (usually, this kind of motor has a high saliency level). It uses high frequency injection, which is less noisy than standard alignment mode. [SPM align] (5 \(\text{P} \(\text{R} \)): Alignment for SPM motor. Mode for Surface-mounted Permanent Magnet motor (usually, this kind of motor has a medium or low saliency level). It uses high frequency injection, which is less noisy than standard alignment mode.			
	[PSI align] (P 5 1): Pulse signal injection. Standard alignment mode by pulse signal injection.			
	[PSIO align] (P 5 , a): Pulse signal injection - Optimized. Standar phase-shift angle measurement time is reduced after the first run of [No align] (n a): No alignment	rd optimized alignment mode order or tune operation, even	by pulse signal injection. The if the drive has been turned off.	

(1) The parameter can also be accessed in the [SETTINGS] (5 E L -) menu.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

BRAKE LOGIC CONTROL

Used to control an electromagnetic brake by the drive, for horizontal and vertical hoisting applications, and for unbalanced machines.

Principle:

- Vertical hoisting movement:

Maintain motor torque in the driving load holding direction during brake opening and closing, in order to hold the load, start smoothly when the brake is released and stop smoothly when the brake is engaged.

- Horizontal movement:

Synchronize brake release with the build-up of torque during startup and brake engage at zero speed on stopping, to help to prevent jolting.

Instructions for brake logic control for a vertical hoisting application:

AWARNING

UNANTICIPATED EQUIPMENT OPERATION

Verify that the selected settings will not result in the loss of control of the load being lifted.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

• [Brake impulse] (b , P): [Yes] (y E 5). Ensure that the direction of rotation FW corresponds to lifting the load.


For applications in which the load being lowered is very different from the load being lifted, set $b \cdot P = 2 \cdot b \cdot C$ (for example, ascent always with a load and descent always without a load).

- Brake release current ([Brake release | FW] (, b r) and [Brake release | Rev] (, r d) if [Brake impulse]
 (b , P) = 2 , b r): Adjust the brake release current to the rated current indicated on the motor.
 During testing, adjust the brake release current in order to hold the load smoothly.
- Acceleration time: For hoisting applications, it is advisable to set the acceleration ramps to more than 0.5 seconds. Ensure that the drive does not exceed the current limit.
 - The same recommendation applies for deceleration.
 - Reminder: For a hoisting movement, a braking resistor should be used.
- [Brake Release time] (b r b): Set according to the type of brake. It is the time required for the mechanical brake to release.
- [Brake release frequency] (b , r), in open-loop mode only: Leave in [Auto] (R u b a), adjust if necessary.
- [Brake engage frequency] (b E n): Leave in [Auto] (R u L a), adjust if necessary.
- [Brake engage time] (b E b): Set according to the type of brake. It is the time required for the mechanical brake to engage.

Instructions for brake logic control for a horizontal hoisting application:

- [Brake impulse] (b , P): No
- [Brake release I FW] (, b r): Set to 0.
- [Brake Release time] (b r b): Set according to the type of brake. It is the time required for the mechanical brake to release.
- [Brake engage frequency] (b E n), in open-loop mode only: Leave in [Auto] (H u E n), adjust if necessary.
- [Brake engage time] (b E b): Set according to the type of brake. It is the time required for the mechanical brake to engage.


Brake logic control, horizontal movement in open-loop mode

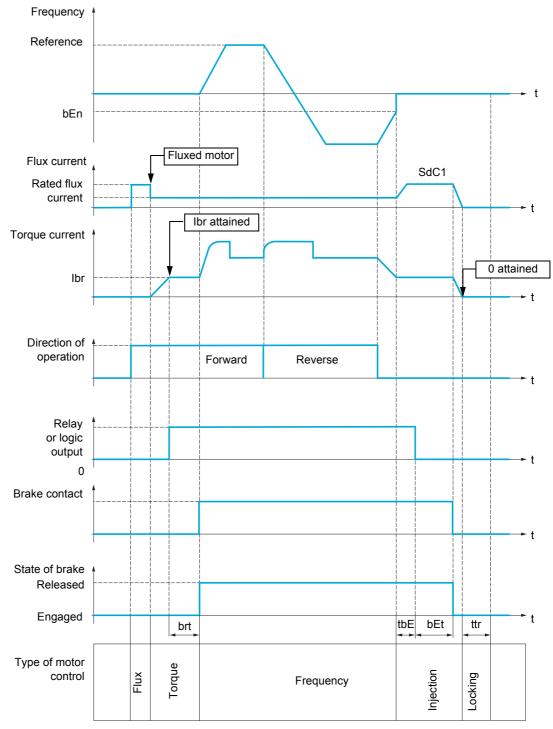

Key:

- (b E n): [Brake engage freq]
- (b E b): [Brake engage time]
- (br E): [Brake Release time]
- (, b r): [Brake release I FW]
- (5 d [1): [Auto DC inj. level 1]
- (L b E): [Brake engage delay]
- (EEr): [Time to restart]

Brake logic control, vertical movement in open-loop mode

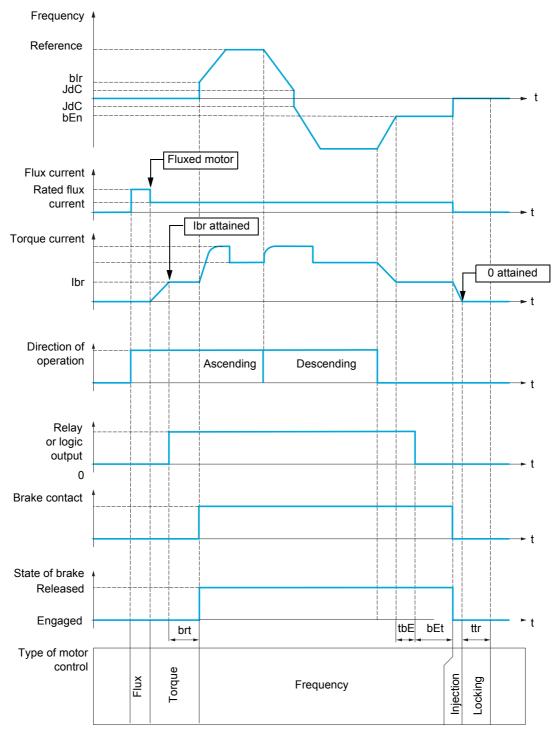

Key:

- (b E n): [Brake engage freq]
- (b E b): [Brake engage time]
- (b , r): [Brake release freq]
- (br E): [Brake Release time]
- (, b r): [Brake release I FW]
- (J d [): [Jump at reversal]
- (L b E): [Brake engage delay]
- (LEr): [Time to restart]

Code	Name / Description	Adjustment range	Factory setting	
Fun-	[APPLICATION FUNCT.] (continued)			
BLC-	[BRAKE LOGIC CONTROL]			
	Note: This function cannot be used with certain other functions. Follow t	he instructions on page <u>163</u>		
6 L C	[Brake assignment]		[No] (n a)	
	Logic output or control relay. Note: If the brake is assigned, only a ramp stop is possible. Check the [Type of stop] (5 \(\beta \) page \(\frac{173}{2} \). Brake logic control can only be assigned if [Motor control type] (\(\beta \) \(\beta \) is not set to [Standard] (5 \(\beta \) d), [V/F 5pts] (\(\beta \) F [V/F Quad.] (\(\beta \) F (\(\beta \)) or [Sync. mot] (5 \(\beta \) n). See Compatibility table page \(\frac{165}{2} \) to see the compatible functions.			
no rz Lol dol	[R2] (r 2): Relay	,	gnment] (# a 1) page <u>144</u>	
65 E	[Movement type]		[Hoisting] (\square E Γ)	
*				
Har	[Traveling] (H o r): Resistive-load movement (translational motion of or Note: If [Motor control type] (E E b) is set to [Standard] (5 E d) or [V/I [Traveling] (H o r). [Hoisting] (u E r): Driving-load movement (hoisting winch, for example Note: If [Weight sensor ass.] (P E 5) page 200 is not [No] (n o), [Mov	F 5pts] (<i>u F</i> 5), [Movemen	t type] (b 5 b) is forced to	
ьс,	[Brake contact]		[No] (n o)	
*	If the brake has a monitoring contact (closed for released brake).			
	[No] (n a): Not assigned [LI1] (L , I): Logical input LI1 [] (): See the assignment conditions on page 153			
6 · P	[Brake impulse]		[Yes] (4 E 5)	
*	Brake impulse. This parameter can be accessed if [Weight sensor ass.] (PE 5) is set t if [Movement type] (b 5 b) is set to [Hoisting] (u E r).	o [No] (n	2). It is set to [Yes] (YE 5)	
л о У Е 5	[No] (no): The motor torque is given in the required operating direction [Yes] (4 E 5): The motor torque is in forward direction (check that this definition [Brake release FW] (16 C)			
2 ibr	[2 IBR] (2 , b r): The torque is in the required direction, at current [Bra [Brake release Rev] (, r d) for Reverse, for certain specific application		r Forward and	
ıbr	[Brake release I FW]	0 to 1.36 In (2)	0 A	
* ()	Brake release current threshold for ascending or forward movement. This parameter can be accessed if [Weight sensor ass.] (PE 5) is set	to [No] (n a) page 200.		
(1)				
ır d	[Brake release I Rev]	0 to 1.36 In (2)	0 A	
*	Brake release current threshold for descending or reverse movement.			
Ô	This parameter can be accessed if [Brake impulse] (b , P) is set to [2	IBR](2 ₁Ьァ).		
brE	[Brake Release time]	0 to 5.00 s	0 s	
*	Brake release time delay.			
()				
(1)				

DRI- > CONF > FULL > FUN- > BLC-

Code	Name / Description	Adjustment range	Factory setting			
Біг	[Brake release freq]	[Auto] (Aubo) to 10 Hz	[Auto] (Au L a)			
*	Brake release frequency threshold (initialization of acceleration This parameter can be accessed if [Movement type] (b 5 b)	• *				
(1)						
Auti	[Auto] (Fubo): The drive takes a value equal to the rated slip of the motor, calculated using the drive parameters 0 to 10 Hz: Manual control.					
ЬЕп	[Brake engage freq]	[Auto] (Auto) 0 to 10 Hz	[Auto] (# u Ł a)			
*	Brake engage frequency threshold. Note: [Brake engage freq] (b E n) cannot be higher than [L]	_ow speed] (<i>L</i> 5 <i>P</i>).				
(1)						
(1) <i>Au E</i> i	[Auto] (Ruba): The drive takes a value equal to the rated 0 to 10 Hz: Manual control.	slip of the motor, calculated using the dri	ive parameters			
Ł b E	[Brake engage delay]	0 to 5.00 s	0 s			
() (1)	Time delay before request to engage brake.	Time delay before request to engage brake.				
b E E	[Brake engage time]	0 to 5.00 s	0 s			
*	Brake engage time (brake response time).					
(1) 5 d C 1	[Auto DC inj. level 1]	0 to 1.2 ln (2)	0.7 ln (2)			
*						
()	No	OTICE				
(1)	OVERHEATING AND DAMAGE TO THE MOTOR Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amoun and time in order to avoid overheating and damage to the motor. Failure to follow these instructions can result in equipment damage.					
	Level of standstill DC injection current. Note: This parameter can be accessed if [Movement type]	(b 5 b) page <u>194</u> is set to [Traveling] (b	Hor).			
ЬЕ Д	[Engage at reversal]		[No] (n p)			
*	Can be used to select whether or not the brake engages on	transition to zero speed when the operat	ing direction is reversed.			
$\langle \rangle$						
л . У Е :						
7 9 C	[Jump at reversal]	[Auto] (A u L a) to 10 Hz	[Auto] (
*	This parameter can be accessed if [Movement type] (b 5 b) page $\underline{194}$ is set to [Hoisting] ($\underline{\textit{u}}$ $\underline{\textit{E}}$ $\underline{\textit{r}}$).				
(1)						
Auti	[Auto] (Auto]: The drive takes a value equal to the rated slip of the motor, calculated using the drive parameters 1 to 10 Hz: Manual control When the reference direction is reversed, this parameter can be used to avoid loss of torque (and consequential release of load)					

Code	Name / Description	Adjustment range	Factory setting
EEr	[Time to restart]	0.00 to 15.00 s	0 s
*	Time between the end of a brake engage sequence and the start of a brake release sequence.		
()			
(1)			

- (1) The parameter can also be accessed in the [SETTINGS] (5 E -) menu.
- (2) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.




These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.




Parameter that can be modified during operation or when stopped.

Brake control logic expert parameters

Following parameters for brake logic sequence are accessible in expert mode only.

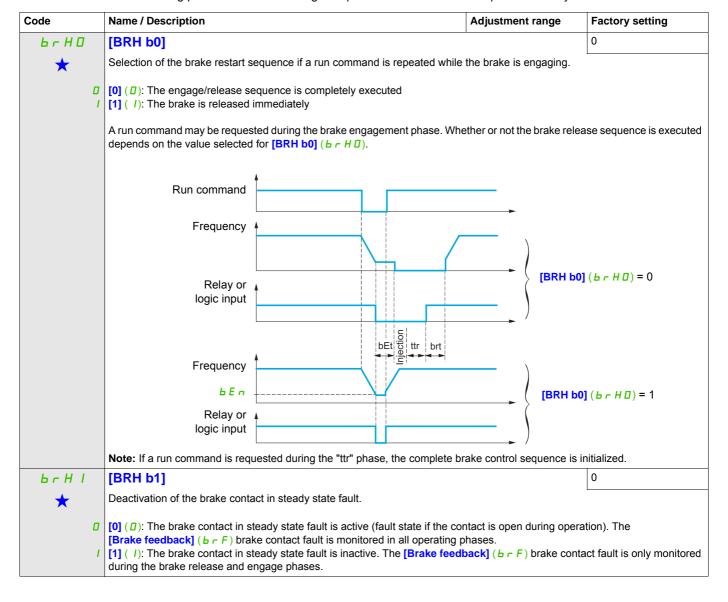

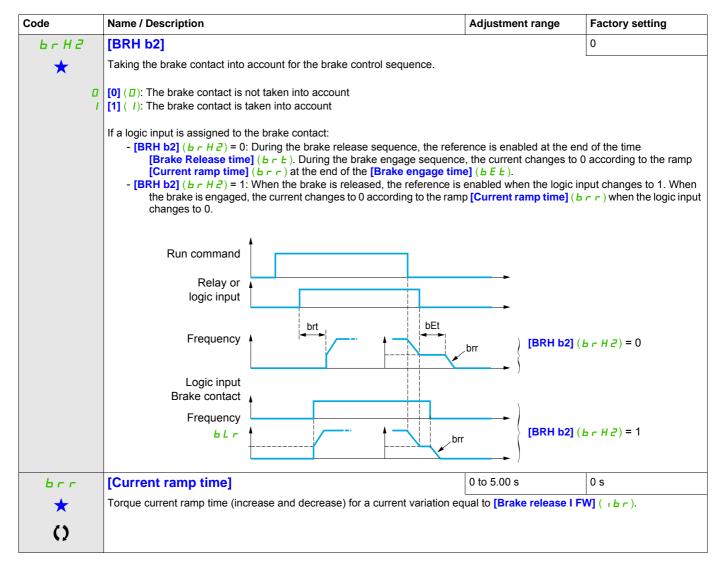



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.


EXTERNAL WEIGHT MEASUREMENT

Load measurement

This function uses the information supplied by a weight sensor to adapt the current [Brake release I FW] ($_{1}$ $_{2}$ $_{3}$) of the [BRAKE LOGIC CONTROL] ($_{2}$ $_{3}$ $_{4}$ $_{5}$ $_{7}$) function. The signal from the weight sensor can be assigned to an analog input (usually a 4 - 20 mA signal) or to the pulse-in input, according to the type of weight sensor.

Example: Measurement of the total weight of a hoisting winch and its load

The current [Brake release | FW] (, b r) is adapted in accordance with the curve below.

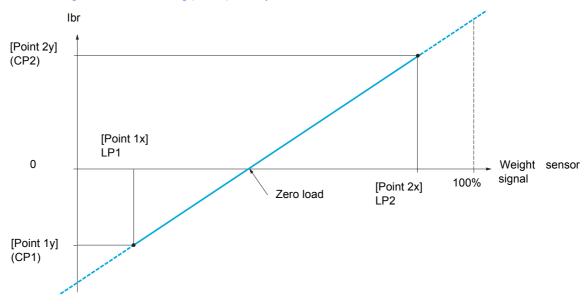

Code	Name / Description	Adjustment range	Factory setting		
Fun-	[APPLICATION FUNCT.] (continued)				
Е L П -	[EXTERNAL WEIGHT MEAS.]				
P E S	[Weight sensor ass.]		[No] (n a)		
	▲ WARI	NING			
	LOSS OF CONTROL				
	• Verify that [Point 1 X] (L P I), [Point 2x] (L P 2), [Point set to avoid loss of control of the load being lifted.	nt 1Y] ([P]) and [Point 2	Y] (<i>□ P ≥</i>) are correctly		
	Perform a comprehensive commissioning test to confir	m the value given to the pa	arameters [Point 1 X]		
	(L P I), [Point 2x] (L P ≥), [Point 1Y] (L P I) and [P	oint 2Y] ([P ≥).			
	Failure to follow these instructions can result in death	n, serious injury, or equip	ment damage.		
	This parameter can be configured if [BRAKE LOGIC CONTROL] (L ∠ -) page <u>194</u> is not set to	[No] (n p).		
0.0	[No] (n p): Not assigned				
AII	R I I [Al1] (R I I): Analog input A1				
A 13	[Al2] (
	[RP] (P 1): Pulse input [Al virtual 1] (R 1 U 1): Virtual analog input 1 with the jog dial				
A .u2	[Al virtual 2] (n bus			
LP I	[OA10] (a R I D): Function blocks: Analog Output 10	0 to LP2-0.01%	0%		
LPI	[Point 1 X] 0 to 99.99% of signal on assigned input.	0 to LF 2-0.0176	0 76		
*	[Point 1x] (L P I) must be less than [Point 2x] (L P 2). This parameter can be accessed if [Weight sensor ass.] (P E 5) is	assigned.			
CP I	[Point 1Y]	-1.36 In to 1.36 In (1)	-In (1)		
*	Current corresponding to load [Point 1 X] (L P I), in A. This parameter can be accessed if [Weight sensor ass.] (PE 5) is	assigned.			
LP2	[Point 2X]	LP1+0.01% to 100%	50%		
*	0.01 to 100% of signal on assigned input. [Point 2x] (L P 2) must be greater than [Point 1x] (L P 1). This parameter can be accessed if [Weight sensor ass.] (P E 5) is	assigned.			
CP2	[Point 2Y]	-1.36 In to 1.36 In (1)	0 A		
*	Current corresponding to load [Point 2x] (L P 2), in A. This parameter can be accessed if [Weight sensor ass.] (P E 5) is	assigned.	1		
ıbrA	[lbr 4-20 mA loss]	0 to 1.36 ln (1)	0		
*	Brake release current in the event of the loss of the weight sensor in This parameter can be accessed if the weight sensor is assigned to a Recommended settings: Rated motor current for a hoisting applicati	an analog current input and the	4-20 mA loss is deactivate		

(1) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

()

Parameter that can be modified during operation or when stopped.


HIGH SPEED HOISTING

This function can be used to optimize the cycle times for hoisting movements for zero or lightweight loads. It authorizes operation at "constant power" in order to reach a speed greater than the rated speed without exceeding the rated motor current.

The speed remains limited by the [High speed] (H 5 P) parameter page 87.

The function acts on the speed reference pedestal and not on the reference itself.


Principle:

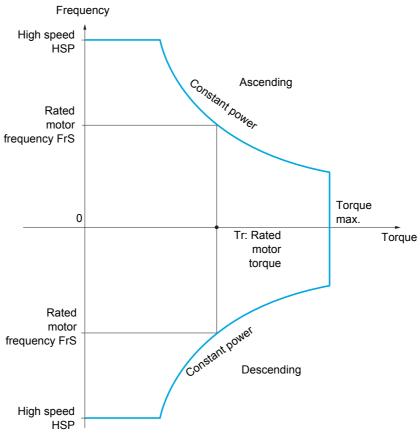

There are 2 possible operating modes:

- Speed reference mode: The maximum permissible speed is calculated by the drive during a speed step that is set so that the drive can measure the load.
- Current limitation mode: The maximum permissible speed is the speed that supports current limitation in motor mode, in the "ascending" direction only. For the "descending" direction, operation is in Speed reference mode.

Speed reference mode

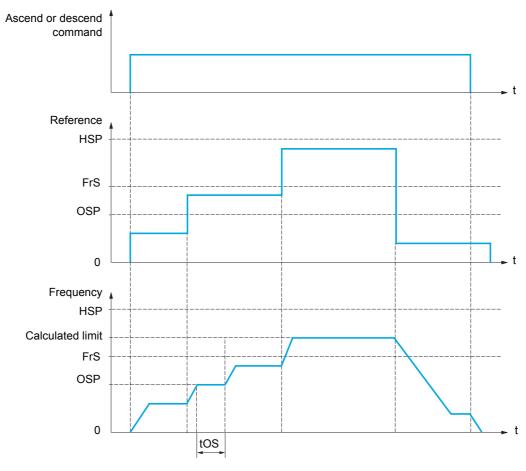


OSP: Adjustable speed step for load measurement

tOS: Load measuring time

Two parameters are used to reduce the speed calculated by the drive, for ascending and descending.

Current limiting mode

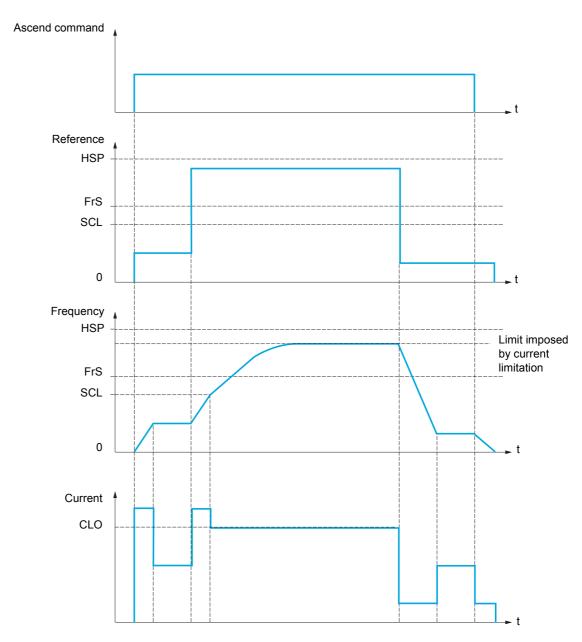


SCL: Adjustable speed threshold, above which current limitation is active

CLO: Current limitation for high-speed function

Note: The speed reached for a specific current will be lower in case of network undervoltage in comparison with nominal network voltage.

Rope slack

The Rope slack function can be used to help to prevent starting up at high speed when a load has been set down ready for lifting but the rope is still slack (as illustrated below).

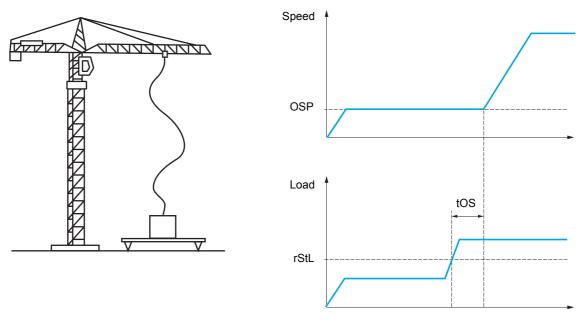

The speed step (OSP parameters) described on page $\underline{202}$ is used to measure the load. The effective measurement cycle will not be triggered until the load reaches the adjustable threshold [Rope slack trq level] (r = 5 L), which corresponds to the weight of the hook.

A logic output or a relay can be assigned to the indication of the rope slack state in the **[INPUTS / OUTPUTS CFG]** ($_{I-B}$ -) menu.

Code	Name / Description	Adjustment range	Factory setting	
Fun-	[APPLICATION FUNCT.] (continued)			
H 5 H -	[HIGH SPEED HOISTING]			
	Note: This function cannot be used with certain other functions. Follow	the instructions on page 163.		
H 5 o	[High speed hoisting]		[No] (n a)	
no	[No] (np): Function inactive			
550	[Speed ref] (55 a): Speed reference mode			
C 5 o	[I Limit] (5 0): Current limitation mode	0.4.4000/	1000/	
[oF	[Motor speed coeff.]	0 to 100%	100%	
*	Speed reduction coefficient calculated by the drive for Ascending direct. This parameter can be accessed if [High speed hoisting] (H 5 a) is s			
()	31()	(
Cor	[Gen. speed coeff]	0 to 100%	50%	
	Speed reduction coefficient calculated by the drive for Descending dire		30 70	
*	This parameter can be accessed if [High speed hoisting] (H 5 a) is r			
()				
L o 5	[Load measuring tm.]	0.1 s to 65 s	0.5 s	
*	Duration of speed step for measurement.			
	This parameter can be accessed if [High speed hoisting] (H 5 a) is r	not set to [No] (n p).		
()				
o 5 P	[Measurement spd]	0 to [Rated motor freq.] (F r 5) 40 Hz	
*	Speed stabilized for measurement.		1	
\circ	This parameter can be accessed if [High speed hoisting] (H 5 a) is r	not set to [No] (n a).		
[Lo	[High speed I Limit]	0 to 1.5 In (1)	In (1)	
*	Current limitation at high speed. This parameter can be accessed if [High speed hoisting] (H 5 a) is s	ent to [[Limit] ([E _)		
()	Note: If the setting is less than 0.25 In, the drive may lock in [Output F	Phase Loss] (PL) fault mode if this	has been enabled	
	(see page <u>256</u>).	0	1.0.1	
5 C L	[I Limit. frequency]	0 to 599 Hz according to rating	40 Hz	
*	Frequency threshold, above which the high-speed limitation current is This parameter can be accessed if [High speed hoisting] (H 5 a) is s			
()				
r 5 d	[Rope slack config.]		[No] (n a)	
1 3 0	Rope slack function.		[ito] (ii b)	
*	This parameter can be accessed if [High speed hoisting] (H 5 a) is r	not set to [No] (n a).		
n o dri	[No] (n a): Function inactive [Drive estim.] (d r): Measurement of the load by estimating the tore	que generated by the drive		
PES	[Ext. sensor] (PE5): Measurement of the load using a weight sensor		nsor ass.] (<i>P E 5</i>)	
r 5 E L	page 200 is not [No] (n a) [Rope slack trq level]	0 to 100%	0%	
, J.C.C.	Adjustment threshold corresponding to a load weighing slightly less that			
\bigstar	This parameter can be accessed if [Rope slack trq level] (- 5 d) has		uic iaicu iuau.	

(1) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.


()

Parameter that can be modified during operation or when stopped.

PID REGULATOR

Block diagram

The function is activated by assigning an analog input to the PID feedback (measurement).

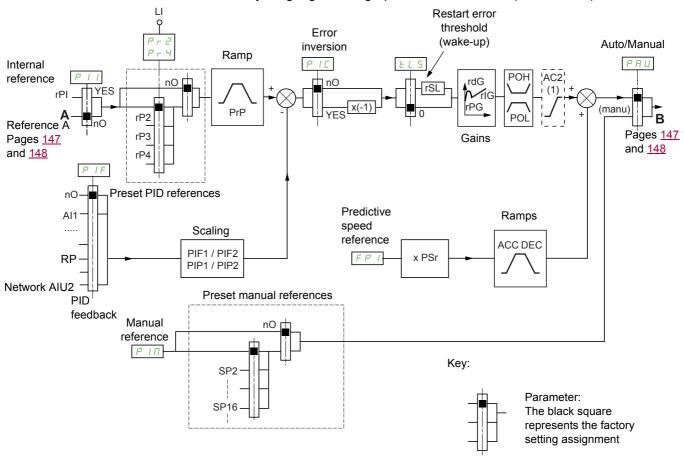

(1) Ramp AC2 is only active when the PID function starts up and during PID "wake-ups".

PID feedback:

The PID feedback must be assigned to one of the analog inputs AI1 to AI3, to the pulse input, according to whether any extension cards have been inserted.

PID reference:

The PID reference must be assigned to the following parameters: Preset references via logic inputs (rP2, rP3, rP4)

In accordance with the configuration of [Act. internal PID ref.] (P , ,) page 210:

Internal reference (P) or

Reference A ([Ref.1 channel] (F r 1) or [Ref.1B channel] (F r 1b), see page 154).

Combination table for preset PID references:

LI (Pr 4)	LI (<i>P r 2</i>)	Pr2=no	Reference
			rPI or A
0	0		rPI or A
0	1		rP2
1	0		rP3
1	1		rP4

A predictive speed reference can be used to initialize the speed on restarting the process.

Scaling of feedback and references:


- [Min PID feedback] (P , F I), [Max PID feedback] (P , F 2) parameters can be used to scale the PID feedback (sensor range). This scale MUST be maintained for all other parameters.
- [Min PID reference] (P , P I), [Max PID reference] (P , P 2) parameters can be used to scale the adjustment range, for example the reference. The adjustment range MUST remain within the sensor range.

The maximum value of the scaling parameters is 32,767. To facilitate installation, we recommend using values as close as possible to this maximum level, while retaining powers of 10 in relation to the actual values.

Example (see graph below): Adjustment of the volume in a tank, between 6 m³ and 15 m³.

- Sensor used 4-20 mA, 4.5 m 3 for 4 mA and 20 m 3 for 20 mA, with the result that $P \cdot F \cdot I = 4,500$ and $P \cdot F \cdot I = 2,500$ and
- Adjustment range 6 to 15 m³, with the result that $P \cdot P I = 6,000$ (min. reference) and $P \cdot P = 15,000$ (max. reference).
- · Example references:
 - rP1 (internal reference) = 9,500
 - rP2 (preset reference) = 6,500
 - rP3 (preset reference) = 8,000
 - rP4 (preset reference) = 11,200

The [3.4 DISPLAY CONFIG.] menu can be used to customize the name of the unit displayed and its format.

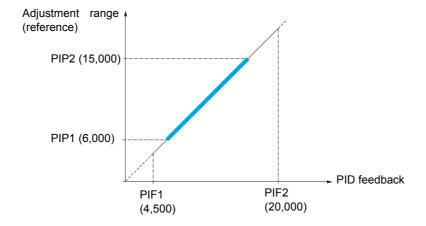

Other parameters:

- [PID wake up thresh.] (r 5 L) parameter: Can be used to set the PID error threshold, above which the PID regulator will be reactivated (wake-up) after a stop due to the max. time threshold being exceeded at low speed [Low speed time out] (£ L 5).
- Reversal of the direction of correction [PID correct. reverse] (P, E): If [PID correct. reverse] (P, E) is set to [No] (n, D), the speed of the motor will increase when the error is positive (for example: pressure control with a compressor). If [PID correct. reverse] (P, E) is set to [Yes] (JE5), the speed of the motor will decrease when the error is positive (for example: temperature control using a cooling fan).
- The integral gain may be short-circuited by a logic input.
- An alarm on the PID feedback may be configured and indicated by a logic output.
- An alarm on the PID error may be configured and indicated by a logic output.

DRI- > CONF > FULL > FUN- > PID-

"Manual - Automatic" Operation with PID

This function combines the PID regulator, the preset speeds and a manual reference. Depending on the state of the logic input, the speed reference is given by the preset speeds or by a manual reference input via the PID function.

Manual reference [Manual reference] (P , □):

- Analog inputs Al1 to Al3
- Pulse input

Predictive speed reference [Speed ref. assign.] (F P 1):

- [Al1] (*A* , *I*): Analog input
- [Al2] (Ħ , Z): Analog input
- [AI3] (F , ∃): Analog input
- [RP] (P 1): Pulse input
- [HMI] (L □ □): Graphic display terminal or remote display terminal
- [Modbus] (☐ d b): Integrated Modbus
- [CANopen] ([F] n): Integrated CANopen®
- [Com. card] (n E L): Communication card (if inserted)

Setting up the PID regulator

1. Configuration in PID mode.


See the diagram on page 206.

2. Perform a test in factory settings mode.

To optimize the drive, adjust [PID prop. gain] (r P D) or [PID integral gain] (r P D) gradually and independently, and observe the effect on the PID feedback in relation to the reference.

3. If the factory settings are unstable or the reference is incorrect.

- Perform a test with a speed reference in Manual mode (without PID regulator) and with the drive on load for the speed range of the system:
 - In steady state, the speed must be stable and comply with the reference, and the PID feedback signal must be stable.
 - In transient state, the speed must follow the ramp and stabilize quickly, and the PID feedback must follow the speed. If this is not the case, see the settings for the drive and/or sensor signal and wiring.
- · Switch to PID mode.
- Set [Dec ramp adapt.] (b r R) to [No] (no auto-adaptation of the ramp).
- Set [PID ramp] (PrP) to the minimum permitted by the mechanism without triggering an [Overbraking] (DF).
- Set the integral gain [PID integral gain] (, , ,) to minimum.
- Leave the derivative gain [PID derivative gain] (r d L) at 0.
- · Observe the PID feedback and the reference.
- Switch the drive ON/OFF a number of times or vary the load or reference rapidly a number of times.
- Set the proportional gain [PID prop. gain] (P L) in order to ascertain the compromise between response time and stability in transient phases (slight overshoot and 1 to 2 oscillations before stabilizing).
- If the reference varies from the preset value in steady state, gradually increase the integral gain [PID integral gain] (, , , ,), reduce the proportional gain [PID prop. gain] (, , , ,) in the event of instability (pump applications), find a compromise between response time and static precision (see diagram).
- Lastly, the derivative gain may permit the overshoot to be reduced and the response time to be improved, although this will be more difficult to obtain a compromise in terms of stability, as it depends on 3 gains.
- Perform in-production tests over the whole reference range.

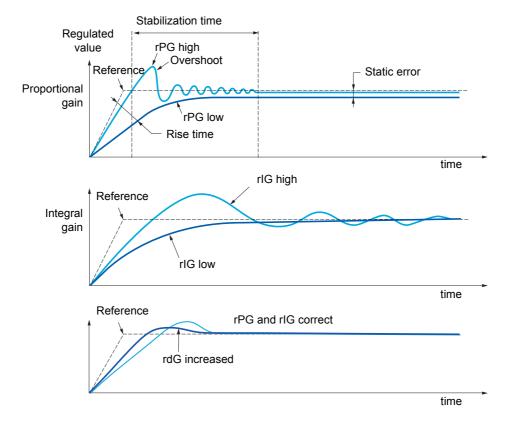

The oscillation frequency depends on the system kinematics.

Parameter	Rise time	Overshoot	Stabilization time	Static error
rPG	**	1	=	`
rlG	`	11	1	**
rdG	=	`	`	=

DRI- > CONF > FULL > FUN- > PID-

Code	Name / Description	Adjustment range	Factory setting
Fun-	[APPLICATION FUNCT.] (continued)		
Pid-	[PID REGULATOR] Note: This function cannot be used with certain other functions. Follow the instructions on page 163.		
PıF	[PID feedback ass.]		[No] (n a)
no	/		
A I I	, J		
H 13			
Р : Я : u I		unication bus	
A .u2	[Al virtual 2] (F , u 2): Virtual analog input 2 by the comm		
- A □ I	[OA01] (P I I): Function blocks: Analog Output 01		
 A 10	[OA10] (P I D): Function blocks: Analog Output 10		
A , C 2	[Al2 net. channel]		[No] (n p)
A	This parameter can be accessed if [PID feedback ass.] (P		meter can also be
×	accessed in the [INPUTS / OUTPUTS CFG] (, _ a -) men	u.	
no	[No] (np): Not assigned		
Паь	[Modbus] (
C A n n E Ł	, , ,		
PiFI	[Min PID feedback]	0 to [Max PID feedback] (P , F 2) (2)	100
*	Value for minimum feedback.		
()			
(1)			1000_
P + F 2	[Max PID feedback]	[Min PID feedback] (P , F I) to 32,767 (2	2) 1,000
*	Value for maximum feedback.		
()			
(1) P	IMin DID reference!	[Min PID feedback] (P , F I) to	150
PIPI	[Min PID reference]	[Max PID reference] (P P 2) (2)	150
*	Minimum process value.		
()			
(1)			000
PIPZ	[Max PID reference]	[Min PID reference] (P, P, I) to [Max PID feedback] (P, F, E) (2)	900
*	Maximum process value.		
()			
(1)			
Pii	[Act. internal PID ref.]		[No] (n a)
*	Internal PID regulator reference.		
no	[No] (np): The PID regulator reference is given by [Ref.1 or	channel] (F r I) or [Ref.1B channel] (F r I b) with
	summing/subtraction/multiplication functions (see the diagra	am on page <u>206</u>).	
9 E S	[Yes] (YES): The PID regulator reference is internal via [In	nternal PID ret.] (r P ı).	

DRI- > CONF > FULL > FUN- > PID-

ode	Name / Description	Adjustment range	Factory settir
rP i	[Internal PID ref.]	[Min PID reference] (P , P 1) to [Max PID reference] (P , P 2)	150
* ()	Internal PID regulator reference. This parameter can also be accessed in the [1.2 MONITO]	RING] (Пап-) menu.	
r P G	[PID prop. gain]	0.01 to 100	1
* ()	Proportional gain.		
r 16	[PID integral gain]	0.01 to 100	1
*	Integral gain.		
() rdG	[PID derivative gain]	0.00 to 100	0
* ()	Derivative gain.		
PrP	[PID ramp]	0 to 99.9 s	0 s
			reneel (
* () (1)	PID acceleration/deceleration ramp, defined to go from [M vice versa.	in PID reference] (P , P I) to [Max PID refer	ence] (P 1P2) an
		in PID reference] (P , P I) to [Max PID refer	[No] (n a)
() (1)	vice versa.	se] (P , ℂ): speed of the motor will increase when the error	[No] (n a)
(1) P , C	[PID correct. reverse] Reversal of the direction of correction [PID correct. reverse] [PID	se] (P , ℂ): speed of the motor will increase when the error	[No] (n a)
(1) P : E	[PID correct. reverse] Reversal of the direction of correction [PID correct. reverse] [PID	se] (P , ℂ): speed of the motor will increase when the error	[No] (n p)
(1) P , [[PID correct. reverse] Reversal of the direction of correction [PID correct. reverse] (P , L) is set to [No] (n a), the spressure control with a compressor) If [PID correct. reverse] (P , L) is set to [Yes] (YES), the temperature control using a cooling fan). [No] (n a): No [Yes] (YES): Yes	se] (P , [): speed of the motor will increase when the error speed of the motor will decrease when the erro	[No] (n a) is positive (examp
(1) P C * * * * * * * * * * * * *	[PID correct. reverse] Reversal of the direction of correction [PID correct. reverse] [PID	se] (P , [): speed of the motor will increase when the error speed of the motor will decrease when the erro	[No] (n a) is positive (example) is positive (example)
(1) P C * * * * * * * * * * * * * * * * * *	[PID correct. reverse] Reversal of the direction of correction [PID correct. reverse] If [PID correct. reverse] (P, L) is set to [No] (n a), the spressure control with a compressor) If [PID correct. reverse] (P, L) is set to [Yes] (YES), the temperature control using a cooling fan). [No] (n a): No [Yes] (YES): Yes [Min PID output] Minimum value of regulator output in Hz.	se] (P, E): speed of the motor will increase when the error speed of the motor will decrease when the error - 599 to 599 Hz	[No] (n p) is positive (example) is positive (example) 0 Hz
(1) P , C * * * (1) P - L * (1) P - H * (1) P - H * (1) P - H	[PID correct. reverse] Reversal of the direction of correction [PID correct. reverse] [P L] is set to [No] (n D), the spressure control with a compressor) If [PID correct. reverse] (P L) is set to [Yes] (YE 5), the temperature control using a cooling fan). [No] (n D): No [Yes] (YE 5): Yes [Min PID output] Minimum value of regulator output in Hz.	se] (P , E): speed of the motor will increase when the error speed of the motor will decrease when the error - 599 to 599 Hz [Min PID feedback] (P , F I) to	[No] (n p) is positive (example) r is positive (example)
(1) P [* "E "E "E "E "E "E "E "E "E	[PID correct. reverse] Reversal of the direction of correction [PID correct. reverse] If [PID correct. reverse] (P , L) is set to [No] (n a), the spressure control with a compressor) If [PID correct. reverse] (P , L) is set to [Yes] (YES), the temperature control using a cooling fan). [No] (n a): No [Yes] (YES): Yes [Min PID output] Minimum value of regulator output in Hz. [Max PID output] Maximum value of regulator output in Hz.	se] (P, E): speed of the motor will increase when the error speed of the motor will decrease when the error - 599 to 599 Hz 0 to 599 Hz	[No] (n a) r is positive (example of the control o

DRI- > CONF > FULL > FUN- > PID-

de	Name / Description	Adjustment range	Factory setting
PAH	[Max fbk alarm]	[Min PID feedback] (P , F 1) to [Max PID feedback] (P , F 2) (2)	1,000
*	Maximum monitoring threshold for regulator feedback.		
()			
(1)			
PEr	[PID error Alarm]	0 to 65,535 (2)	100
*	Regulator error monitoring threshold.	,	
	3, 4, 4, 4, 4, 4, 4, 4, 4, 4, 4, 4, 4, 4,		
()			
(1)			
P 15	[PID integral reset]		[No] (n a)
*	If the assigned input or bit is at 0, the function is inactive If the assigned input or bit is at 1, the function is active (t		
L ,	• ` '		
FP ,	[Speed ref. assign.]		[No] (n a)
*	PID regulator predictive speed input.		
	[Al1] (# I): Analog input A1 [Al2] (# I2): Analog input A2 [Al3] (# I3): Analog input A3 [HMI] (L C C): Graphic display terminal or remote display [Modbus] (# B): Integrated Modbus [CANopen] (C R R): Integrated CANopen® [Com. card] (# E E): Communication option board sour [RP] (P I): Pulse input [Al virtual 1] (# I II): Virtual analog input 1 with the journal content of the property of the	се	
- A II		1	1,000/
P5r	[Speed input %]	1 to 100%	100%
(1)	Multiplying coefficient for predictive speed input. This parameter cannot be accessed if [Speed ref. assignment of the comparison of the	[No] (F P ₁) is set to [No] (n □).	
PAu	[Auto/Manual assign.]		[No] (n a)
*	If the assigned input or bit is at 0, the PID is active. If the assigned input or bit is at 1, manual operation is ac	ctive.	
L	[No] (na): Not assigned [LI1] (L 1): Logical input LI1 [] (): See the assignment conditions on page 153		
AC 2	[Acceleration 2]	0.00 to 6,000 s (3)	5 s
*	Time to accelerate from 0 to the [Rated motor freq.] (F	r 5). To have repeatability in ramps, the value of	f this parameter mu
$\langle \rangle$	be set according to the possibility of the application. Ramp AC2 is only active when the PID function starts up	o and during PID "wake-ups".	

Code	Name / Description	Adjustment range	Factory setting	
РіП	[No]			
*	Manual speed input. This parameter can be accessed if [Auto/Manual assign.] (PRu) is not set to [No] (n a). The preset speeds are active on the manual reference if they have been configured.			
A . 3 P . A . u . I a A O . I	[Al virtual 1] (I , U I): Virtual analog input 1 with the jog dial [OA01] (I II II): Function blocks: Analog Output 01			
E L 5	[Low speed time out]	0 to 999.9 s	0 s	
(1)	Maximum operating time at [Low speed] (<i>L</i> 5 <i>P</i>) (see [Low speed] (<i>L</i> 5 <i>P</i>) page <u>87</u>). Following operation at [Low speed] (<i>L</i> 5 <i>P</i>) for a defined period, a motor stop is requested automatically. The motor will restart if the reference is greater than [Low speed] (<i>L</i> 5 <i>P</i>) and if a run command is still present. Note: A value of 0 indicates an unlimited period of time. If [Low speed time out] (<i>L L</i> 5) is not 0, [Type of stop] (5 <i>L L</i>) page <u>173</u> is forced to [Ramp stop] (¬ П P) (only if a ramp stop can be configured).			
r 5 L	[PID wake up thresh.]	0.0 to 100.0	0	
*	▲ WARNING			
2 s	UNANTICIPATED EQUIPMENT OPERATION Verify that activating this function does not result in unsafe conditions. Failure to follow these instructions can result in death, serious injury, or equipment damage.			
	If the "PID" and "Low speed operating time" [Low speed time of regulator may attempt to set a speed lower than [Low speed] (This results in unsatisfactory operation, which consists of starting Parameter [PID wake up thresh.] (r 5 L) (restart error threshor restarting after a stop at prolonged [Low speed] (L 5 P). [PID widepends on [Min PID feedback] (P r F I) and [Max PID feedl The function is inactive if [Low speed time out] (L L 5) = 0 or	L 5 P). ng, operating at low speed then stoold) can be used to set a minimum vake up thresh.] (r 5 L) is a perceback] (P , F 2), see [Min PID fee	opping, and so on PID error threshold for entage of the PID error (value edback] (P, F, I) page 210).	

- (1) The parameter can also be accessed in the [SETTINGS] (5 E L -) menu.
- (2) If a graphic display terminal is not in use, values greater than 9,999 will be displayed on the 4-digit display with a period mark after the thousand digit, for example, 15.65 for 15,650.
- (3) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1 to 6,000 s according to [Ramp increment] (10 C) page 170.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

DRI- > CONF > FULL > FUN- > PRI-

PID PRESET REFERENCES

Code	Name / Description	Adjustment range	Factory setting
Fun-	[APPLICATION FUNCT.] (continued)		
Pr :-	[PID PRESET REFERENCES]		
	Function can be accessed if [PID feedback ass.] (P , F) page	210 is assigned.	
P r 2	[2 preset PID ref.]		[No] (n a)
	If the assigned input or bit is at 0, the function is inactive. If the assigned input or bit is at 1, the function is active.		
L 1 I	[No] (n a): Not assigned [Ll1] (L , I): Logical input Ll1 [] (): See the assignment conditions on page 153		
Pr4	[4 preset PID ref.]		[No] (n a)
	Check that [2 preset PID ref.] (Pr 2) has been assigned before Identical to [2 preset PID ref.] (Pr 2) page 212. If the assigned input or bit is at 0, the function is inactive. If the assigned input or bit is at 1, the function is active.	e assigning this function.	
r P 2	[Preset ref. PID 2]	[Min PID reference] (P , P I) to [Max PID reference] (P , P 2) (2)	300
*	This parameter can be accessed if [2 preset PID ref.2] (Pr 2)	s assigned.	
()			
(1) r P 3	[Dreset ref. BID 21	[Min PID reference] (P , P I) to	600
773	[Preset ref. PID 3]	[Max PID reference] $(P \mid P \mid P)$ (2)	000
*	This parameter can be accessed if [3 preset PID ref.] (Pr 3) is	assigned.	
\circ			
(1)			
r P 4	[Preset ref. PID 4]	[Min PID reference] (P P I) to [Max PID reference] (P P P 2) (2)	900
*	This parameter can be accessed if [4 preset PID ref.] (Pr 4) is	assigned.	
Ω			
(1)			
(' /			

- (1) The parameter can also be accessed in the [SETTINGS] (5 E L -) menu.
- (2) If a graphic display terminal is not in use, values greater than 9,999 will be displayed on the 4-digit display with a period mark after the thousand digit, for example, 15.65 for 15,650.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

()


Parameter that can be modified during operation or when stopped.

TORQUE LIMITATION

There are two types of torque limitation:

- With a value that is fixed by a parameter
- With a value that is set by an analog input (Al or pulse)

If both types are enabled, the lowest value is taken into account. The two types of limitation can be configured or switched remotely using a logic input or via the communication bus.

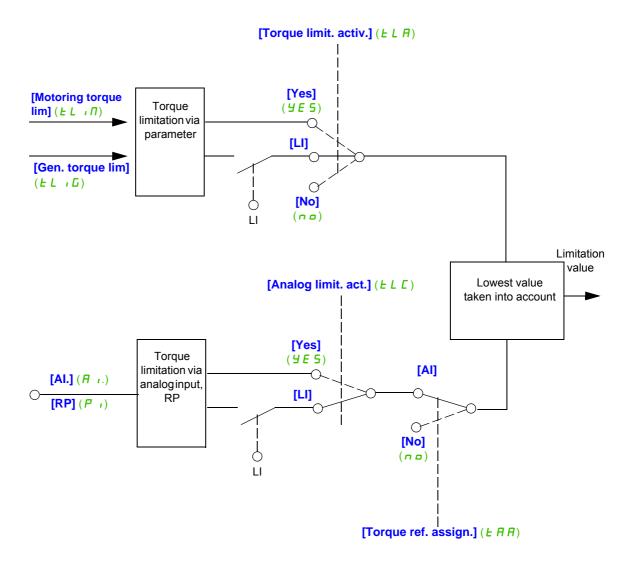

DRI- > CONF > FULL > FUN- > TOL-

Code	Name / Description	Adjustment range	Factory setting	
Fun-	[APPLICATION FUNCT.] (continued)			
toL-	[TORQUE LIMITATION]			
E L A	[Torque limit. activ.]		[No] (n a)	
	If the assigned input or bit is at 0, the function is inactive. If the assigned input or bit is at 1, the function is active.			
9E5 L , 1	[No] (n p): Function inactive [Yes] (YE 5): Function always active [LI1] (L , I): Logical input LI1 [] (): See the assignment conditions on page 153			
intP	[Torque increment]		[1%] (1)	
*	This parameter cannot be accessed if [Torque limit. activ.] ($\vdash L \sqcap$) is set Selection of units for the [Motoring torque lim] ($\vdash L \sqcap \sqcap$) and [Gen. torq		eters.	
0. I	[0,1%] (\$\mathbb{O}\$. 1): Unit 0.1% [1%] (\$\mathbb{I}\$): Unit 1%			
ELiΠ	[Motoring torque lim]	0 to 300%	100%	
() (1)	This parameter cannot be accessed if [Torque limit. activ.] (<i>L. R.</i>) is set Torque limitation in motor mode, as a % or in 0.1% increments of the rated [Torque increment] (<i>I. R. P.</i>) parameter.	,	vith the	
EL IG	[Gen. torque lim]	0 to 300%	100%	
* () (1)	This parameter cannot be accessed if [Torque limit. activ.] (<i>L L F</i>) is set Torque limitation in generator mode, as a % or in 0.1% increments of the [Torque increment] (<i>In L P</i>) parameter.		ce with the	
L A A	[Torque ref. assign.]		[No] (n a)	
	If the function is assigned, the limitation varies between 0% and 300% of the applied to the assigned input. Examples: 12 mA on a 4-20 mA input results in limitation to 150% of the rated torque 2.5 V on a 10 V input results in 75% of the rated torque.		sis of the 0% to 100% signal	
A . 3	[Al2] (# , 2): Analog input [Al3] (# , 3): Analog input [RP] (P ,): Pulse input			
	[Al Virtual 2] (F , u 2): Virtual input via communication bus, to be configu	ured via [Al2 net. chann	ei] (<i>R ₁ ℂ ₂</i>) page <u>135</u> .	
 A I D	[OA10] (P I D): Function blocks: Analog Output 10			

Code	Name / Description	Adjustment range	Factory setting
E L C	[Analog limit. act.]	1	[Yes] (YE 5)
	This parameter cannot be accessed if [Torque limit. activ.] (Ł L 用) is set to [No] (n a).		
	Identical to [Torque limit. activ.] (Ł L R) page 216.		
*	If the assigned input or bit is at 0:		,

(1) The parameter can also be accessed in the [SETTINGS] (5 E L -) menu.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

DRI- > CONF > FULL > FUN- >CLI-

2ND CURRENT LIMITATION

Code	Name / Description	Adjustment range	Factory setting
Fun-	[APPLICATION FUNCT.] (continued)		
EL ,-	[2nd CURRENT LIMIT.]		
L C 2	[Current limit 2]		[No] (n o)
	If the assigned input or bit is at 0, the first current limitation If the assigned input or bit is at 1, the second current limitation		
L : 1	[No] (n a): Function inactive [Ll1] (L , I): Logical input Ll1 [] (): See the assignment conditions on page 153		
C L 2	[I Limit. 2 value]	0 to 1.5 ln (1)	1.5 ln (1)
	N	OTICE	
*	OVERHEATING AND DAMAGE TO THE MOTO	OR .	
O	Verify that the motor is properly rated for the r		
()	Consider the duty cycle of the motor and all fa	ectors of your application incl	uding derating requirements
	in determining the current limit. Failure to follow these instructions can result	t in equipment damage.	
	Second current limitation. This parameter can be accessed if [Current limit 2] (L C The adjustment range is limited to 1.5 ln. Note: If the setting is less than 0.25 ln, the drive may lock in (see [Output Phase Loss] (p PL) page 256). If it is less	n [Output Phase Loss] (p P L)	
EL ,	[Current limitation]	0 to 1.5 In (1)	1.5 ln (1)
	NOTICE		
*	OVERHEATING AND DAMAGE TO THE MOTO		
()	Verify that the motor is properly rated for the maximum current to be applied to the motor.		
	Consider the duty cycle of the motor and all factors of your application including derating requirements in determining the current limit.		
	Failure to follow these instructions can result in equipment damage.		
	First current limitation. This parameter can be accessed if [Current limit 2] (L L The adjustment range is limited to 1.5 In. Note: If the setting is less than 0.25 In, the drive may I enabled (see [Output Phase Loss] (a PL) page 256). If	ock in [Output Phase Loss] (•

(1) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.




These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

DYN CURRENT LIMIT

The DTM ATV320, is available with SoMove to set the **BMP** motors. To install the Altivar 320 DTM (device type manager), you can download and install our FDT (field device tool): SoMove lite on www.schneider-electric.com.

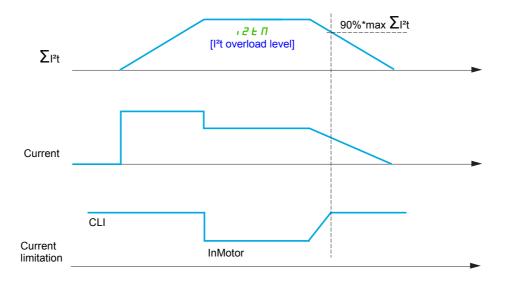

Code	Name / Description	Adjustment range	Factory setting
Fun-	[APPLICATION FUNCT.] (continued)		
12F -	[DYN CURRENT LIMIT]		
, 2 E A	[I²t model activation]		[No] (n p)
*	I²t model activation for current limitation		
9 E S	[No] (n p): [Yes] ($ \exists E $ 5): when $i^2t $ 8 Max		
	This parameter can be accessed if [max time of l²tl] (, 2 L L) is	s not set to [0.00] (<u>, </u>
15F 1	[max current of I²tl]		1.5 ln +1 (1)
	Maximum current of I²t model.		
12 E E	[max time of I²tl]	0.00 to 655.35	0.00
	Maximum time of I ² t model.		

(1) In corresponds to the rated drive current indicated in the Installation manual or on the drive nameplate.




These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

LINE CONTACTOR COMMAND

The line contactor closes every time a run command (forward or reverse) is sent and opens after every stop, as soon as the drive is locked. For example, if the stop mode is stop on ramp, the contactor will open when the motor reaches zero speed.

Note: The drive control power supply must be provided via an external 24 V source.

Example circuit:

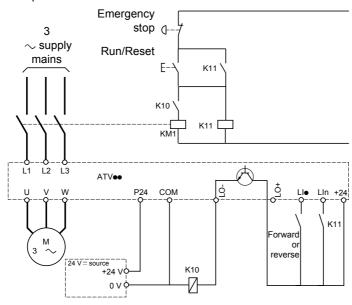

24 V power supply

Note: The "Run/Reset" key must be pressed once the "Emergency stop" key has been released.

```
LIo = Run command [Forward] (Frd) or [Reverse] (rr5)
LO-/LO+ = [Line contactor ass.] (LLC)
LIn = [Drive lock] (LE5)
```

NOTICE

DAMAGE TO THE DRIVE

Do not use this function at intervals of less than 60 s.

Failure to follow these instructions can result in equipment damage.

Code	Name / Description	Adjustment range	Factory setting
Fun-	[APPLICATION FUNCT.] (continued)		
LLE-	[LINE CONTACTOR COMMAND]		
LLC	[Line contactor ass.]		[No] (n a)
	Logic output or control relay.		
L o 1	[No] (na): Function not assigned (in this case, none of the function paral [LO1] (La): Logical output LO1 [R2] (r2): Relay r2 [d01] (da): Analog output AO1 functioning as a logic output. Selection of is set to [No] (na)	,	
L E 5	[Drive lock]		[No] (n a)
*	This parameter can be accessed if [Line contactor ass.] (L L [) is not set to [No] (n p). The drive locks when the assigned input or bit changes to 0.		
	[No] (na): Function inactive [LI1] (L , I): Logical input LI1 [] (): See the assignment conditions on page 153		
LCE	[Mains V. time out]	5 to 999 s	5 s
*	Monitoring time for closing of line contactor. If, once this time has elapsed drive will lock with a [Line contactor] ($L \Gamma$) detected fault.	l, there is no voltage on th	e drive power circuit, the



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

OUTPUT CONTACTOR COMMAND

This allows the drive to control a contactor located between the drive and the motor. The contactor is closed when a run command is applied. The contactor is opened when there is no longer any current in the motor.

Note: If the DC injection braking function is used, the output contactor does not close as long as DC injection braking is active


Output contactor feedback

The corresponding logic input should be at 1 when there is no run command and at 0 during operation.

In the event of an inconsistency, the drive trips in FCF2 if the output contactor fails to close (LIx at 1) and in FCF1 if it is stuck (LIx at 0).

The [Delay to motor run] (d 5) parameter can be used to delay tripping in fault mode when a run command is sent and the [Delay to open cont.] (d R 5) parameter delays the detected fault when a stop command is set.

Note: FCF2 (contactor failing to close) can be reset by the run command changing state from 1 to 0 (0 --> 1 - > 0 in 3-wire control).

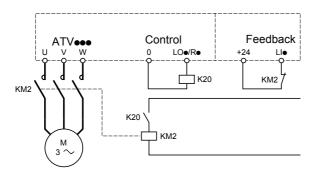

The [Out. contactor ass.] ($\square \ \square \ \square$) and [Output contact. fdbk] ($r \ \square \ H$) functions can be used individually or together.

Code	Name / Description	Adjustment range	Factory setting
Fun-	[APPLICATION FUNCT.] (continued)		
o[[-	[OUTPUT CONTACTOR CMD]		
ے کے د	[Out. contactor ass.]		[No] (n a)
	Logic output or control relay.		
L a 1	[No] (n a): Function not assigned (in this case, none of the function parametrical): Logical output LO1 [R2] (r 2): Relay r2 [dO1] (d a l): Analog output AO1 functioning as a logic output. Selection cases to [No] (n a)	,	nment] (# a 1) page <u>144</u>
r [A	[Output contact. fdbk]		[No] (n a)
	The motor starts up when the assigned input or bit changes to 0. [No] (n p): Function inactive [Li1] (L i I): Logical input LI1 [] (): See the assignment conditions on page 153		
d b 5	[Delay to motor run]	0.05 to 60 s	0.15 s
* ()	Time delay for: Motor control following the sending of a run command Output contactor state monitoring, if the feedback is assigned. If the contact will lock in FCF2 mode. This parameter can be accessed if [Out. contactor ass.] (a []) is assigne The time delay must be greater than the closing time of the output contactor	ed or if [Output contact. f	
∂ A S	[Delay to open cont.]	0 to 5.00 s	0.10 s
* ()	Time delay for output contactor opening command following motor stop. This parameter can be accessed if [Output contact. fdbk] (r [] H) is assign the time delay must be greater than the opening time of the output contactor monitored. If the contactor fails to open at the end of the set time, the drive will lock in F	or. If it is set to 0, the dete	cted fault will not be



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.


DRI- > CONF > FULL > FUN- > LPO-

POSITIONING BY SENSORS

This function is used for managing positioning using position sensors or limit switches linked to logic inputs or using control word bits:

- Slowing down
- Stopping

The action logic for the inputs and bits can be configured on a rising edge (change from 0 to 1) or a falling edge (change from 1 to 0). The example below has been configured on a rising edge:

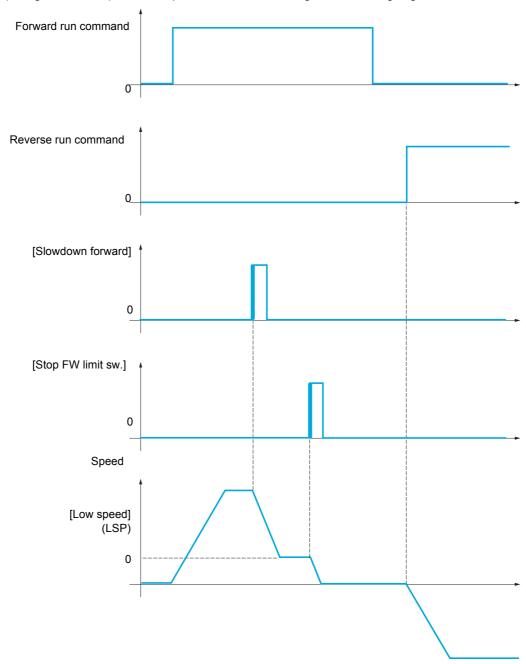


The slowdown mode and stop mode can be configured.

The operation is identical for both directions of operation. Slowdown and stopping operate according to the same logic, described below.

Example: Forward slowdown, on rising edge

- Forward slowdown takes place on a rising edge (change from 0 to 1) of the input or bit assigned to forward slowdown if this rising edge occurs in forward operation. The slowdown command is then stored, even in the event of a power outage. Operation in the opposite direction is authorized at high speed. The slowdown command is deleted on a falling edge (change from 1 to 0) of the input or bit assigned to forward slowdown if this falling edge occurs in reverse operation.
- A bit or a logic input can be assigned to disable this function.
- Although forward slowdown is disabled while the disable input or bit is at 1, sensor changes continue to be monitored and saved.

Example: Positioning on a limit switch, on rising edge

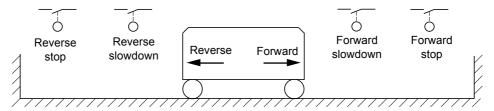

AWARNING

LOSS OF CONTROL

- · Verify correct connection of the limit switches.
- Verify the correct installation of the limit switches. The limit switches must be mounted in a position far enough away from the mechanical stop to allow for an adequate stopping distance.
- You must release the limit switches before you can use them.
- · Verify the correct function of the limit switches

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Operation with short cams:

▲ WARNING

LOSS OF CONTROL

When operating for the first time or after a reset of the configuration to the factory settings, the motor must always be started outside of the Slowdown and Stop ranges.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

▲ WARNING


LOSS OF CONTROL

When the drive is switched off, it stores the range which it is currently in.

If the system is moved manually while the drive is off, you must restore the original position before switching it on again.


Failure to follow these instructions can result in death, serious injury, or equipment damage.

In this instance, when operating for the first time or after restoring the factory settings, the drive must initially be started outside the slowdown and stop zones in order to initialize the function.

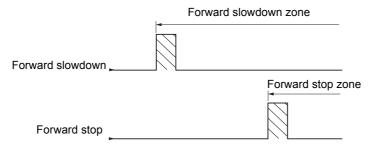

Operation with long cams:

In this instance, there is no restriction, which means that the function is initialized across the whole trajectory.

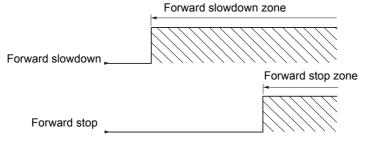


Stop at distance calculated after deceleration limit switch

This function can be used to control the stopping of the moving part automatically once a preset distance has been traveled after the slowdown limit switch.

On the basis of the rated linear speed and the speed estimated by the drive when the slowdown limit switch is tripped, the drive will induce the stop at the configured distance.

This function is useful in applications where one manual-reset overtravel limit switch is common to both directions. It will then only respond to help management if the distance is exceeded. The stop limit switch retains priority in respect of the function.

The [Deceleration type] (d 5 F) parameter can be configured to obtain either of the functions described below:

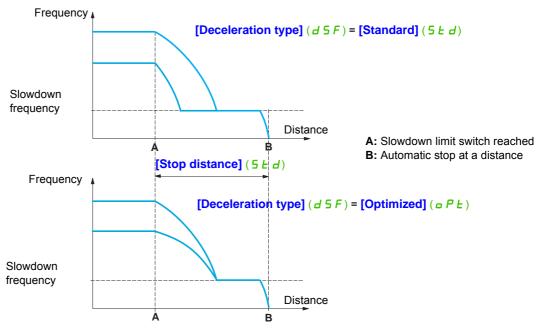

Note:

- If the deceleration ramp is modified while stopping at a distance is in progress, this distance will not be observed.
- If the direction is modified while stopping at a distance is in progress, this distance will not be observed.

▲ WARNING

LOSS OF CONTROL

Verify that the configured distance is actually possible.

This function does not replace the limit switch.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Code	Name / Description	Adjustment range	Factory setting		
Fun-	[APPLICATION FUNCT.] (continued)				
LPo-	[POSITIONING BY SENSORS]				
	Note: This function cannot be used with certain other functions. Follow the instructions on page 163.				
5 A F	[Stop FW limit sw.]		[No] (n a)		
	Stop switch forward.				
no	[No] (na): Not assigned				
L 1 I	[LI1] (L , I): Logical input LI1 [] (): See the assignment conditions on page 153				
5 A r	[Stop RV limit sw.]		[No] (no)		
	Stop switch reverse.				
	Identical to [Stop FW limit sw.] (5 A F) above.				
5 A L	[Stop limit config.]		[Active low] (L a)		
	▲ WAR	RNING			
	LOSS OF CONTROL				
*	If [Stop limit config.] (5 R L) is set to [Active high] (F	The state of the s	I be activated on active		
	signal and the stop command will not be applied if the c				
	Verify that using this setting does not result in unsafe of Failure to follow these instructions can result in dea		ment damage.		
		,			
	Stop switch activation level.				
	This parameter can be accessed if at least one limit switch or one	stop sensor has been assigned	. It defines the positive or		
	negative logic of the bits or inputs assigned to the stop.				
L	[Active low] (L \Box): Stop controlled on a falling edge (change from [Active high] (H , \Box): Stop controlled on a rising edge (change fr				
∂AF	[Slowdown forward]	om o to 1) of the doorgined bits c	[No] (n a)		
	Slowdown attained forward.				
	Identical to [Stop FW limit sw.] (5 R F) above.				
dAr	[Slowdown reverse]		[No] (n a)		
	Slowdown attained reverse.				
101	Identical to [Stop FW limit sw.] (5 # F) above.		[Active low] (L p)		
d A L	[Slowdown limit cfg.]		[Active low] (L B)		
	A 1010 =				
	▲ WARNING				
	LOSS OF CONTROL				
*	If [Slowdown limit cfg.] (d R L) is set to [Active high]				
	active signal and the slowdown command will not be applied if the connection is removed. Verify that using this setting does not result in unsafe conditions.				
	Failure to follow these instructions can result in dea		oment damage.		
		, ,, ,, , , ,			
	This parameter can be accessed if at least one limit switch or one	slowdown sensor has been ass	igned. It defines the positive		
	or negative logic of the bits or inputs assigned to the slowdown.				
L a [Active low] (L a): Slowdown controlled on a falling edge (change from 1 to 0) of the assigned bits or inp			ts or inputs		
Н , Б	[Active high] (H, L): Slowdown controlled on a rising edge (cha	inge from 0 to 1) of the assigned	bits or inputs		

DRI- > CONF > FULL > FUN- > LPO-

Code	Name / Description	Adjustment range	Factory setting
C L 5	[Disable limit sw.]	,	[No] (n a)
*	LOSS OF CONTROL If [Disable limit sw.] ([L 5) is set to an input a Verify that activating this function does not resu	It in unsafe conditions.	
	This parameter can be accessed if at least one limit switches action of the limit switches is disabled when the assistowed down by limit switches, it will restart up to its specific.	ch or one sensor has been assigned. gned bit or input is at 1. If, at this time, the	-
L , I 	[No] (n a): Function inactive [Ll1] (L , I): Logical input Ll1 [] (): See the assignment conditions on page 153		
P A 5	[Stop type]		[Ramp stop] (¬ П Р)
*	This parameter can be accessed if at least one limit switch	ch or one sensor has been assigned.	
r ПР F 5 Ł n 5 Ł	[Ramp stop] (¬ П Р): Follow ramp [Fast stop] (F 5 L): Fast stop (ramp time reduced by [R: [Freewheel] (¬ 5 L): Freewheel stop	amp divider] (d E F), see [Ramp divide	r] (<i>d E F</i>) page <u>93</u>)
d 5 F	[Deceleration type]		[Standard] (5 Ł d)
*	This parameter can be accessed if at least one limit switch	ch or one sensor has been assigned.	
5	[Standard] (5 £ d): Uses the [Deceleration] (d E C) or [Optimized] (d P E): The ramp time is calculated on the b to limit the operating time at low speed (optimization of the speed).	pasis of the actual speed when the slowdo	wn contact switches, in order
5 Ł d	[Stop distance]		[No] (n a)
*	This parameter can be accessed if at least one limit switch Activation and adjustment of the "Stop at distance calculated and the control of the statement of t	•	ion.
n o -	[No] (ill, therefore, be inaccessible)	
n L S	[Rated linear speed]	0.20 to 5.00 m/s	1.00 m/s
*	This parameter can be accessed if at least one limit switch set to [No] (n a). Rated linear speed in meters/second.	n or one sensor has been assigned and [\$	Stop distance] (5 Ł d) is not
5 F d	[Stop corrector]	50 to 200%	100%
*	This parameter can be accessed if at least one limit switch set to [No] (n a). Scaling factor applied to the stop distance to compensate		itop distance] (5 Ł d) is not
ПБЕР	[Memo Stop]		[No] (n a)
*	This parameter can be accessed if at least one limit switch	ch or one sensor has been assigned.	
n o Y E S	[No] (no): No memorisation of limit switch [YES] (4 E 5): Memorisation of limit switch		
Pr5E	[Priority restart]		[No] (n a)
*	This parameter can be accessed if at least one limit switch Priority given to the starting even if switch stop is activated.	•	
л <i>а</i> У Е 5	[No] (na): No priority restart if stop switch is activated [YES] (YES): Priority to restart even if stop switch is act This parameter is forced to [No] (na) if [Memo Stop] (na)		



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

PARAMETER SET SWITCHING

A set of 1 to 15 parameters from the **[SETTINGS]** (5 *E L* -) menu on page <u>89</u> can be selected and 2 or 3 different values assigned. These 2 or 3 sets of values can then be switched using 1 or 2 logic inputs or control word bits. This switching can be performed during operation (motor running).


It can also be controlled on the basis of 1 or 2 frequency thresholds, whereby each threshold acts as a logic input (0 = threshold not reached, 1 = threshold reached).

	Values 1	Values 2	Values 3
Parameter 1	Parameter 1	Parameter 1	Parameter 1
Parameter 2	Parameter 2	Parameter 2	Parameter 2
Parameter 3	Parameter 3	Parameter 3	Parameter 3
Parameter 4	Parameter 4	Parameter 4	Parameter 4
Parameter 5	Parameter 5	Parameter 5	Parameter 5
Parameter 6	Parameter 6	Parameter 6	Parameter 6
Parameter 7	Parameter 7	Parameter 7	Parameter 7
Parameter 8	Parameter 8	Parameter 8	Parameter 8
Parameter 9	Parameter 9	Parameter 9	Parameter 9
Parameter 10	Parameter 10	Parameter 10	Parameter 10
Parameter 11	Parameter 11	Parameter 11	Parameter 11
Parameter 12	Parameter 12	Parameter 12	Parameter 12
Parameter 13	Parameter 13	Parameter 13	Parameter 13
Parameter 14	Parameter 14	Parameter 14	Parameter 14
Parameter 15	Parameter 15	Parameter 15	Parameter 15
		4	0 4
Input LI or bit or frequency threshold 2 values	0	1	0 or 1
Input LI or bit or frequency threshold 3 values	0	0	1

Note: Do not modify the parameters in the [SETTINGS] (5EE) menu, because any modifications made in this menu ([SETTINGS] (5EE)) will be lost on the next power-up. The parameters can be adjusted during operation in the [PARAM. SET SWITCHING] ($\Pi L P$) menu, on the active configuration.

Note: Parameter set switching cannot be configured from the integrated display terminal.

Parameters can only be adjusted on the integrated display terminal if the function has been configured previously via the graphic display terminal, by PC Software or via the bus or communication network. If the function has not been configured, the [PARAM. SET SWITCHING] ($\sqcap L P$ -) menu and the [SET 1] (P S I-), [SET 2] (P S I-), [SET 3] (P S I-) submenus will not appear.

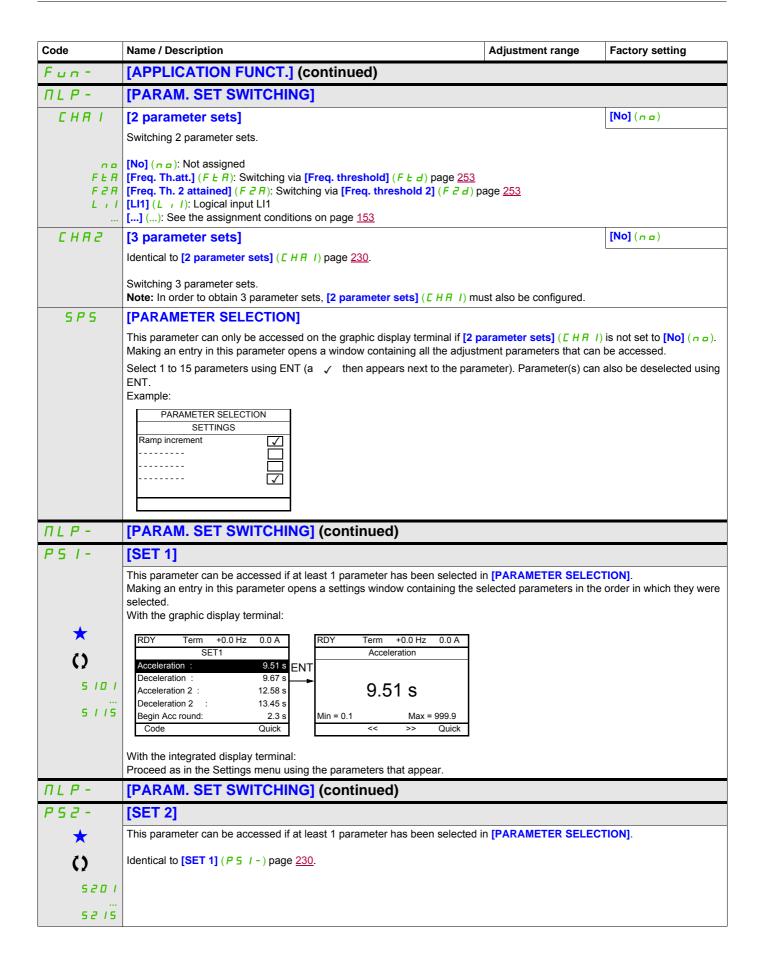

Code	Name / Description	Adjustment range	Factory setting
ΠLP-	[PARAM. SET SWITCHING] (continued)		
P53-	[SET 3]		
*	This parameter can be accessed if [3 parameter sets] ($\mathcal{L} H \mathcal{H} \mathcal{L}$) is not [No] in [PARAMETER SELECTION].	(and if at least 1 par	rameter has been selected
()	Identical to [SET 1] (P 5 / -) page 230.		
5 3 0 I			
5 3 15			



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

Note: We recommend that a parameter set switching test is carried out while stopped and a check is made to verify that it has been performed correctly.

Some parameters are interdependent and in this case may be restricted at the time of switching.

Interdependencies between parameters must be respected, even between different sets.

Example: The highest [Low speed] (L 5 P) must be below the lowest [High speed] (H 5 P).

DRI- > CONF > FULL > FUN- > MMC-

MULTIMOTORS / MULTICONFIGURATIONS

Motor or configuration switching [MULTIMOTORS/CONFIG.] (☐ ☐ [-)

The drive may contain up to 3 configurations, which can be saved using the

[FACTORY SETTINGS] (F [5 -) menu, page 81.

Each of these configurations can be activated remotely, enabling adaptation to:

- 2 or 3 different motors or mechanisms (multimotor mode)
- 2 or 3 different configurations for a single motor (multiconfiguration mode)

The two switching modes cannot be combined.

Note: The following conditions MUST be observed:

- Switching may only take place when stopped (drive locked). If a switching request is sent during operation, it will not be executed until the next stop.
- In the event of motor switching, the following additional conditions apply:
 - When the motors are switched, the power and control terminals concerned must also be switched as appropriate.
 - The maximum power of the drive must not be exceeded by any of the motors.
- All the configurations to be switched must be set and saved in advance in the same hardware configuration, this being the definitive configuration (option and communication cards). Failure to follow this instruction can cause the drive to lock on an [Incorrect config.] ([F F] state.

Menus and parameters switched in multimotor mode

- [SETTINGS] (5 E L -)
- [MOTOR CONTROL] (d r [-)
- [INPUTS / OUTPUTS CFG] (, _ a -)
- [COMMAND] ([L L -)
- [APPLICATION FUNCT.] (Fun-) with the exception of the [MULTIMOTORS/CONFIG.] function (to be configured once only)
- [FAULT MANAGEMENT] (F L E)
- [MY MENU]
- [USER CONFIG.]: The name of the configuration specified by the user in the [FACTORY SETTINGS] (F [5 -) menu

Menus and parameters switched in multiconfiguration mode

As in multimotor mode, except for the motor parameters that are common to the 3 configurations:


- Rated current
- Thermal current
- · Rated voltage
- · Rated frequency
- Rated speed
- · Rated power
- · IR compensation
- Slip compensation
- · Synchronous motor parameters
- Type of thermal protection
- Thermal state
- · The auto-tuning parameters and motor parameters that can be accessed in expert mode
- · Type of motor control

Note: No other menus or parameters can be switched.

Let A be the source drive and B the drive addressed. In this example, switching is controlled by logic input.

- 1. Connect graphic display terminal to the drive A.
- 2. Put logic input LI ([2 Configurations] ([n F I)) and LI ([3 Configurations] ([n F 2)) to 0.
- 3. Download configuration 0 in a file of graphic display terminal (example: file 1 of the graphic display terminal).
- 4. Put logic input LI ([2 Configurations] (∠ ¬ F I)) to 1 and leave logic input LI ([3 Configurations] (∠ ¬ F Z)) to 0
- 5. Download configuration 1 in a file of graphic display terminal (example: file 2 of the graphic display terminal).
- 6. Put logic input LI ([3 Configurations] ([n F])) to 1 and leave logic input LI ([2 Configurations] ([n F])) to 1
- 7. Download configuration 2 in a file of graphic display terminal (example: file 3 of the graphic display terminal).
- 8. Connect graphic display terminal to the drive B.
- 9. Put logic input LI ([2 Configurations] (∠ ¬ F I)) and LI ([3 Configurations] (∠ ¬ F ≥)) to 0.
- 10. Make a factory setting of the drive B.
- 11. Download the configuration file 0 in the drive (file 1 of graphic display terminal in this example).
- 12. Put logic input LI ([2 Configurations] ($[\ \ \ \ \ \ \ \ \ \ \ \ \ \]$) to 1 and leave logic input LI ([3 Configurations] ($[\ \ \ \ \ \ \ \ \ \ \]$) to 0.
- 13. Download the configuration file 1 in the drive (file 2 of graphic display terminal in this example).
- 14. Put logic input LI ([3 Configurations] ($\Gamma \cap F \supseteq$)) to 1 and leave logic input LI ([2 Configurations] ($\Gamma \cap F \supseteq$)) to 1.
- 15. Download the configuration file 2 in the drive (file 3 of graphic display terminal in this example).

Note: Steps 6, 7, 14 et 15 are necessary only if [MULTIMOTORS/CONFIG.] (¬ ¬ с -) function is used with 3 configurations or 3 motors.

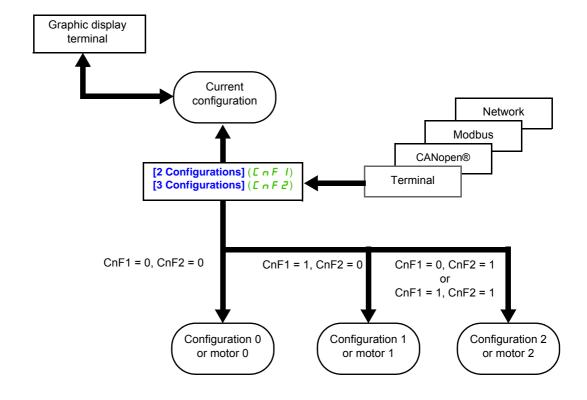

Switching command

Depending on the number of motors or selected configurations (2 or 3), the switching command is sent using one or two logic inputs. The table below lists the possible combinations.

LI 2 motors or configurations	LI 3 motors or configurations	Number of configurations or active motors
0	0	0
1	0	1
0	1	2
1	1	2

Schematic diagram for multimotor mode

NOTICE


MOTOR OVERHEATING

The motor thermal state of each motor is not saved when drive is switched off.

When the drive is switched on, it is not aware of the thermal state of the connected motor or motors.

 To enable correct temperature monitoring of the motors, install an external temperature sensor for each motor.

Failure to follow these instructions can result in equipment damage.

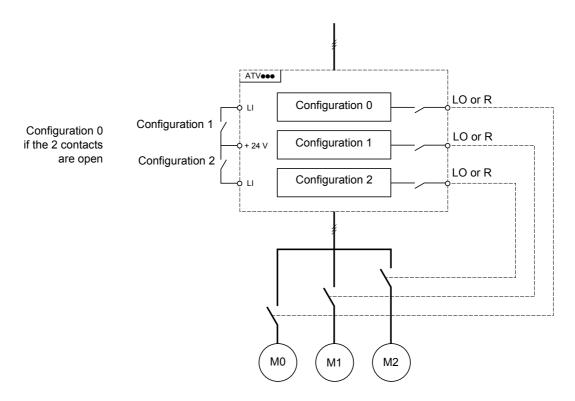

Auto-tuning in multimotor mode

This auto-tuning can be performed:

- Manually using a logic input when the motor changes.
- Automatically each time the motor is activated for the 1st time after switching on the drive, if the [Automatic autotune] (Automatic autotune] (Automatic autotune) (Bub) parameter on page 109 is set to [Yes] (UE).

Motor thermal states in multimotor mode:

The drive helps to protect the three motors individually. Each thermal state takes into account all stop times, if the drive power is not switched off.

Configuration information output

In the [INPUTS / OUTPUTS CFG] (, $_$ $_$ -) menu, a logic output can be assigned to each configuration or motor (2 or 3) for remote information transmission.

Note: As the [INPUTS / OUTPUTS CFG] ($_{1-}$ $_{2}$ -) menu is switched, these outputs must be assigned in all configurations in which information is required.


Code	Name / Description	Adjustment range	Factory setting
Fun-	[APPLICATION FUNCT.] (continued)		
ΠΠΕ-	[MULTIMOTORS/CONFIG.]		
ΕНП	[Multimotors]		[No] (n a)
	NOTICE		
	MOTOR OVERHEATING When the drive is switched off, the thermal states of the connected motors are not saved. When the drive is switched on again, the drive is not aware of the thermal states of the connected motors. • Use separate temperature sensors for each connected motor for thermal monitoring. Failure to follow these instructions can result in equipment damage.		
9 E S			
[nF	[2 Configurations]		[No] (n a)
	Switching of 2 motors or 2 configurations. [No] (np): No switching [Ll1] (L		
[nF2	[3 Configurations]		[No] (n a)
	Switching of 3 motors or 3 configurations.		
	Identical to [2 Configurations] ($\Gamma \cap F = I$) page 235.		
	Note: In order to obtain 3 motors or 3 configurations, [2 Configurations]	([nF]) must also be	configured.

AUTO TUNING BY LOGIC INPUT


Code	Name / Description	Adjustment range	Factory setting
Fun-	[APPLICATION FUNCT.] (continued)		
EnL-	[AUTO TUNING BY LI]		
ŁυL	[Auto-tune assign.]		[No] (n a)
	Auto-tuning is performed when the assigned input or bit changes to 1. Note: Auto-tuning causes the motor to start up.		
	[No] (n a): Not assigned		
	[LI1] (L , I): Logical input L11 [] (): See the assignment conditions on page 153		

TRAVERSE CONTROL

Function for winding reels of yarn (in textile applications):

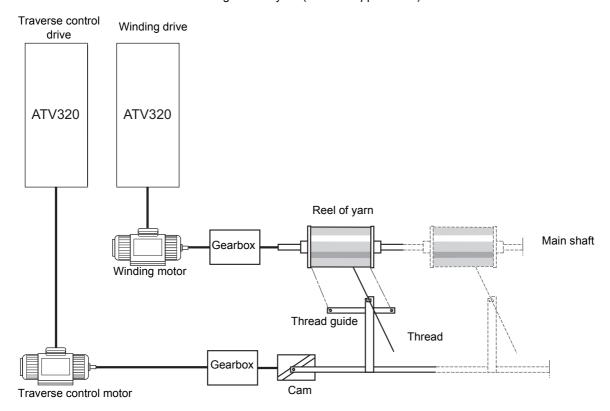

The speed of rotation of the cam must follow a precise profile to ensure that the reel is steady, compact and linear:

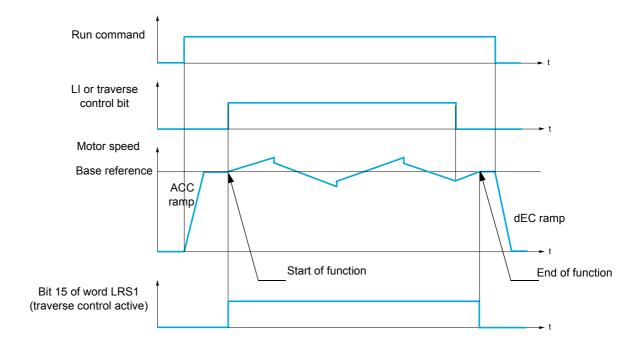


The function starts when the drive has reached its base reference and the traverse control command has been enabled


When the traverse control command is disabled, the drive returns to its base reference, following the ramp determined by the traverse control function. The function then stops, as soon as it has returned to this reference.

Bit 15 of word LRS1 is at 1 while the function is active.


Function parameters


These define the cycle of frequency variations around the base reference, as shown in the diagram below:

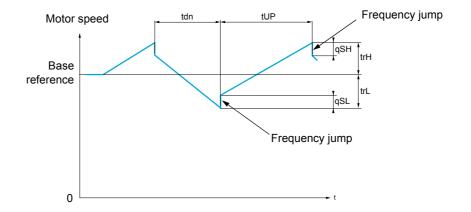

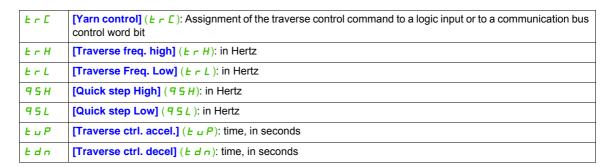


Reel parameters:

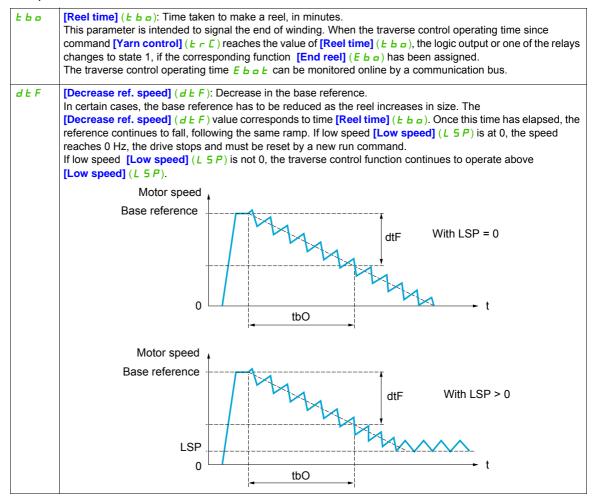

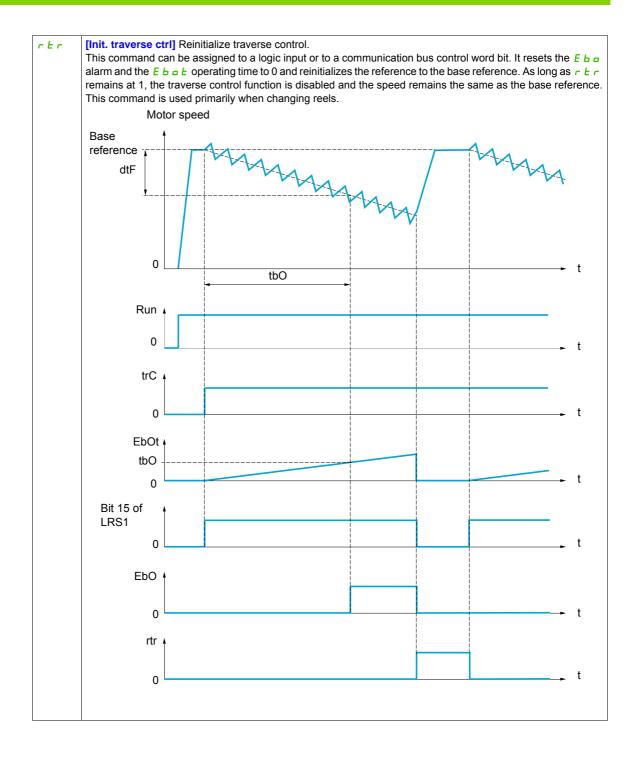

DRI- > CONF > FULL > FUN- > TRO-


Counter wobble

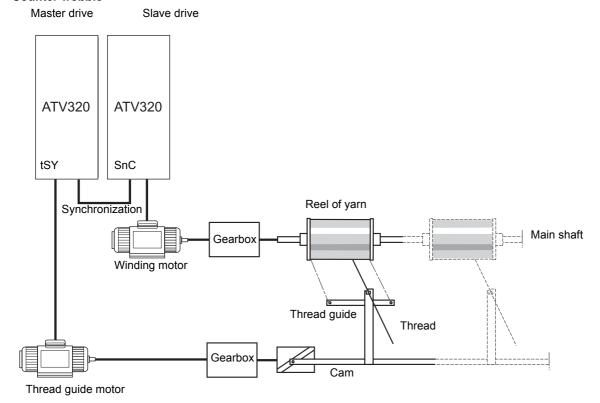


The Counter wobble function is used in certain applications to obtain a constant yarn tension when the Traverse control function is producing considerable variations in speed on the yarn guide motor ([Traverse freq. high] ($E \cap H$) and [Traverse Freq. low] ($E \cap L$), see [Traverse freq. high] ($E \cap H$) page 242).

Two motors must be used (one master and one slave).

The master controls the speed of the yarn guide, the slave controls the winding speed. The function assigns the slave a speed profile, which is in antiphase to that of the master. This means that synchronization is required, using one of the master's logic outputs and one of the slave's logic inputs.

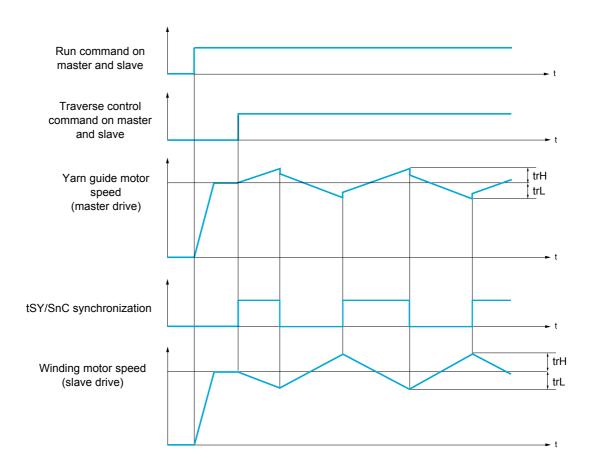

Connection of synchronization I/O

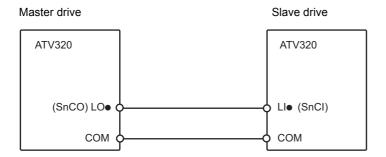

The starting conditions for the function are:

- Base speeds reached on both drives
- [Yarn control] (Ł r □) input activated
- Synchronization signal present

Note: The [Quick step High] (95H) and [Quick step Low] (95L) parameters should generally be kept at 0.

Code	Name / Description	Adjustment range	Factory setting		
- חח	[APPLICATION FUNCT.] (continued)				
<u> 0 - </u>	[TRAVERSE CONTROL]				
	Note: This function cannot be used with certain other fu	inctions. Follow the instructions on page			
FrE	[Yarn control]		[No] (n a)		
	The Traverse control cycle starts when the assigned inp	out or bit changes to 1 and stops wher	n it changes to 0.		
L	, , , , , , , , , , , , , , , , , , , ,	nt access to other parameters			
E r H	[Traverse freq. high]	0 to 10 Hz	4 Hz		
*	Traverse frequency high.				
()					
(1)		1	T		
ErL	[Traverse Freq. Low]	0 to 10 Hz	4 Hz		
*	Traverse frequency low.				
()					
(1)					
95H	[Quick step High]	0 to [Traverse freq. high] (E r H) 0 Hz		
*	Quick step high.				
()					
(1)					
95L	[Quick step Low]	0 to [Traverse Freq. Low] ((<i>E r L</i>) 0 Hz		
*	Quick step low.				
()					
(1)					
E u P	[Traverse ctrl. accel.]	0.1 to 999.9 s	4 s		
*	Acceleration traverse control.				
()					
Edn	[Traverse ctrl. decel]	0.1 to 999.9 s	4 s		
*	Deceleration traverse control.				
()					
E b o	[Reel time]	0 to 9,999 min	0 min		
*	Reel execution time.				
()					
ЕЬо	[End reel]		[No] (n a)		
	The assigned output or relay changes to state 1 when the	he traverse control operating time rea			
*		ne have se control operating time real	ones the <u>intest time</u> (E a a).		
Lo	,				
r.	₽ [R2] (¬ ₽): Relay R2				
d o	[dO1] (do 1): Analog output AO1 functioning as a logic is set to [No] (no).	output. Selection can be made if [AO	1 assignment] (A a I) page 14		

Code	Name / Description	Adjustment range	Factory setting	
5 n C	[No] (n		[No] (n o)	
*	Synchronization input. To be configured on the winding drive (slave) only.			
Lil	[No] (n a): Function inactive, thereby helping to prevent access to other parameters [LI1] (L , I): Logical input LI1 [] (): See the assignment conditions on page 153			
£ 5 Y	[Sync. wobble]		[No] (n o)	
*	Synchronization output. To be configured on the yarn guide drive (master) only.			
L o 1	[No] (na): Function not assigned [LO1] (Lal) [R2] (r2) [dO1] (dal): Analog output AO1 functioning as a logic output. Sis set to [No] (na).	Selection can be made if [AO1	assignment] (# a I) page 144	
d Ł F	[Decrease ref. speed] 0 to 599 Hz 0 Hz			
*	Decrease in the base reference during the traverse control cycle.			
\circ				
rEr	[Init. traverse ctrl] [No] (no)		[No] (n p)	
*	When the state of the assigned input or bit changes to 1, the traverse control operating time is reset to 0, along with [Decrease ref. speed] (d & F).			
Lil	[No] (np): Function not assigned [Ll1] (L , I): Logical input Ll1 [] (): See the assignment conditions on page 153			

(1) The parameter can also be accessed in the [SETTINGS] (5 E L -) menu.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

DRI- > CONF > FULL>DCC-

HIGH SPEED SWITCHING

Code	Name / Description	Adjustment range	Factory setting		
Fun-	[APPLICATION FUNCT.] (continued)				
C H 5 -	[HSP SWITCHING]				
5 H 2	[2 High speed]		[No] (n a)		
	High Speed Switching.				
n o F L A	[No] (ng): Function not assigned				
F 2 R	[Freq. Th. attain.] (F & H): Frequency threshold attained [Freq. Th. 2 attained] (F & H): Frequency threshold 2 attained				
	[LI1] (L , I): Logical input LI1 [] (): See the assignment conditions on page 153				
5 H Y	[No] (n a)				
	High Speed Switching. Note: In order to obtain 4 High speed, [2 High speed] (5 H 2) must also be configured.				
	Identical to [2 High speed] (5 H 2) page 244.				
HSP	[High speed]	0 to 599 Hz	50 Hz		
0	Motor frequency at maximum reference, can be set between [Low speed] The factory setting changes to 60 Hz if [Standard mot. freq] (b F r) is set		ncy] (<i>E F r</i>).		
H 5 P 2	[High speed 2]	0 to 599 Hz	50 Hz		
*	Visible if [2 High speed] (5 H 2) is not set to [No] (n a).				
()	Identical to [High speed] (H 5 P) page 244.				
H S P 3	[High speed 3]	0 to 599 Hz	50 Hz		
*	Visible if [4 High speed] (5 H 4) is not set to [No] (n p).				
()	Identical to [High speed] (H 5 P) page 244.				
H 5 P 4	[High speed 4]	0 to 599 Hz	50 Hz		
*	Visible if [4 High speed] (5 H 4) is not set to [No] (n a).				
0	Identical to [High speed] (H 5 P) page 244.				



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

DRI- > CONF > FULL>DCC-

DC Bus

Code	Name / Description	Adjustment range	Factory setting
Fun-	[APPLICATION FUNCT.]		
d[[-	[DC Bus]		
4 C C U	[DC-Bus chaining] DC Bus chaining configuration		[No] (n a)
ПЯто	[No] (S.	
	A A DANGER		
	GROUND FAULT MONITORING DISABLED, NO ERROR DETECT Setting this parameter to [Bus & Main] (
	 Only use this parameter after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application. Implement alternative ground fault monitoring functions that do not trigger automatic error responses of the 		
	drive, but allow for adequate, equivalent responses by other means in compliance with all applicable regulations and standards as well as the risk assessment.		
	 Commission and test the system with ground fault monitoring enabled. During commissioning, verify that the drive and the system operate as intended by performing tests and simulations in a controlled environment under controlled conditions. Failure to follow these instructions will result in death or serious injury. 		
	Tandre to ronow these matractions will result in death of serious	s injury.	
4 C C C	[DC-Bus compat.] DC Bus chaining compatibility		[Altivar] (FL u)
	Visible if [DC-Bus chaining] (d [[[]] above is not set to [No] (n a).		
	[Altivar] (R E u): Only Altivar 320 drives are on the DC Bus chain. [Lexium] (L H II): At least one Lexium 32 drive is on the DC Bus chain.		
*	- For ATV●●M2, not depending on [DC-Bus compat.] (d [[]) the parame level] (u 5 L), [Braking level] (u b r) are forced to their default value.	eters [Mains voltage] (u r E 5), [Undervoltage
	- For ATVeeeN4, if [DC-Bus compat.] (Δ [[[]) is set to [Altivar] (R μ) the parameters [Mains voltage] (μ [[5]), [Undervoltage level] (μ [5]), [Braking level] (μ [6]) are forced to their default value.		
	For ATVeeeN4, if [DC-Bus compat.] (L [[]) is set to [Lexium] (L H []) the p [Undervoltage level] (L 5 L) are forced to their default value, [Braking level] (trigger in [Overbraking] (L b F) at a DC Bus level of 820 Vdc instead of 880 Vdc	(u b r) is forced to 780	Vdc and the drive will
ı P L	[Input phase loss] Drive behaviour in case of input phase loss detected fault.		According to drive rating.
*	Cannot be accessed if drive rating is ATV•••M2. Visible if [3.1 ACCESS LEVEL] (L R L) is set to [Expert] (E P r) and [DC-Bus chaining] (d L L R) above is set to [No] (n R)		pove is set to [No] (¬ □)
л о У Е 5	[Ignore] (n a): Detected fault ignored [Freewheel] (4 E 5): Detected fault with freewheel stop		
	[Input phase loss] (,PL) is forced to [Ignore] (np) if [DC-Bus chaining] (d[[n]) above is set to [Only Bus] (b u 5). See [Input phase loss] (,PL) in the Programming Manual (DRI-> CONF > FULL > FLT-> IPL-).		

[Freewheel] (4 E 5) 5 C L 3 [Ground short circuit] Direct ground short-circuit fault detection behaviour Can be accessed for drives rating ATV320U55N4● ... D15N4●. Visible if [3.1 ACCESS LEVEL] (L PL) is set to [Expert] (E Pr) and [DC-Bus chaining] (d L L Pl) above is not set to [No] (n a). n o [Ignore] (n a): Detected fault ignored YE 5 [Freewheel] (YE 5): Detected fault with freewheel stop [Ground short circuit] (5 L L 3) is forced to [Ignore] (n p) for ATV320U55N4 ... D15N4 drives if [DC-Bus chaining] (d[∏]) above is set to [Bus & Main] (∏ F , n). Note: If [Ground short circuit] (5 [L]) is set to [Ignore] (n], integrated safety functions (except Safe Torque Off) for ATV320U55N4● ... D15N4● drives cannot be used, otherwise the drive will trigger in [Safe function fault] (5 F F F) state. A A DANGER **GROUND FAULT MONITORING DISABLED, NO ERROR DETECTION** Setting this parameter to [Ignore] (, , ,) deactivates ground fault monitoring. · Only use this parameter after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application. Implement alternative ground fault monitoring functions that do not trigger automatic error responses of the drive, but allow for adequate, equivalent responses by other means in compliance with all applicable regulations and standards as well as the risk assessment. Commission and test the system with ground fault monitoring enabled. During commissioning, verify that the drive and the system operate as intended by performing tests and simulations in a controlled environment under controlled conditions. Failure to follow these instructions will result in death or serious injury. According to drive According to drive urE5 [Mains Voltage] voltage rating voltage rating Rated voltage of the supply mains in Vac. Visible if [3.1 ACCESS LEVEL] (L FL) is set to [Expert] (E Pr) and [DC-Bus chaining] (d L L II) above is set to [No] (nO). For ATV320 2 □ □ [200V ac] (2 □ □): 200 Volts AC 2 2 □ [220V ac] (2 2 □): 220 Volts AC 2 3 □ [230V ac] (2 3 □): 230 Volts AC 240 [240V ac] (240): 240 Volts AC (factory setting) LΗΠ [Lexium] (L H II): [Mains voltage] (L F E 5), [Undervoltage level] (USL), [Braking level] (L B F) are forced to their default For ATV320 ••• N4•: **∃ □ □ [380V ac]** (**∃ □ □**): 380 Volts AC 400V ac] (400): 400 Volts AC 440V ac] (440): 440 Volts AC 4 6 0 [460V ac] (4 6 0): 460 Volts AC [500V ac] (5 0 0): 500 Volts AC (factory setting) 500

246 NVE41295 03/2016

[Lexium] (L H \(\Pi \)): [Mains voltage] (\(\pi \) \(\bar{E} \) 5), [Undervoltage level] (\(\pi \) \(\bar{E} \) \) are forced to their default value, [Braking level] (\(\pi \) \(\bar{E} \) \) is forced to 780 Vdc and the drive will trigger in [Overbraking] (\(\pi \) \(\bar{E} \) \) at a DC Bus level of 820 Vdc instead of 880 Vdc

DRI- > CONF > FULL > FUN- > FLT- > PTC-

υ 5 L	[Undervoltage level]	100 to 276 Vac	According to drive		
	Undervoltage fault level setting in Volts.		rating		
*	Visible if [3.1 ACCESS LEVEL] (L # L) is set to [Expert] (E P r), [DC-Bus chaining] (d [[]) above is set to [No] (nO) and [Mains voltage] (u r E 5) is not set to [Lexium] (L H II).				
	The factory setting is determined by the drive voltage rating : - For ATV320●●M2● : 141 Vac - For ATV320●●N4● : 276 Vac				
	The adjustment range is determined by the [Mains voltage] (u r E 5) value.				
	See [Undervoltage level] ($u \le L$) in the Programming Manual (DF	<> CONF > FULL > FL 1- > USE	3-).		
uЬг	[Braking level]	335 to 820 Vdc	According to drive		
	Braking transistor command level.		rating		
	Visible if [3.1 ACCESS LEVEL] (L R C) is set to [Expert] (E P r) a	and [DC-Bus chaining] (d[[])	above is set to [No] (n a)		
*	The factory setting is determined by the drive voltage rating :				
	- For ATV320●●●M2● : 395 Vdc				
()	- For ATV320•••N4• : 820 Vdc	• • • • • • • • • • • • • • • • • • • •			
\Diamond	- For ATV320●●N4●: 820 Vdc The adjustment range is determined by the [Mains voltage] (u r E See [Braking level] (u b r) in the Programming Manual (DRI- > C	•			



Parameter that can be modified during operation or when stopped.




These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

Fault Management

With integrated display terminal:

Summary of functions:

Code	Name	Page
PEC	[PTC MANAGEMENT]	<u>250</u>
r 5 E	[FAULT RESET]	<u>251</u>
Atr	[AUTOMATIC RESTART]	252
AL S	[ALARMS SETTING]	252
FLr	[CATCH ON THE FLY]	<u>253</u>
E H E	[MOTOR THERMAL PROT.]	<u>255</u>
o P L	[OUTPUT PHASE LOSS]	<u>256</u>
ı P L	[INPUT PHASE LOSS]	<u>256</u>
o H L	[DRIVE OVERHEAT]	<u>257</u>
SAL	[THERMAL ALARM STOP]	<u>258</u>
ELF	[EXTERNAL FAULT]	<u>258</u>
ы 5 <i>Б</i>	[UNDERVOLTAGE MGT]	<u>259</u>
E iE	[IGBT TESTS]	<u>260</u>
LFL	[4-20mA LOSS]	<u>260</u>
ın H	[FAULT INHIBITION]	<u>261</u>
C L L	[COM. FAULT MANAGEMENT]	<u>261</u>
5 d d	[ENCODER FAULT]	<u>263</u>
Eid	[TORQUE OR I LIM. DETECT]	<u>264</u>
F9F	[FREQUENCY METER]	<u>266</u>
dLd	[DYNAMIC LOAD DETECT.]	<u>267</u>
EnF	[AUTO TUNING FAULT]	<u>268</u>
PP ,	[CARDS PAIRING]	<u>269</u>
uLd	[PROCESS UNDERLOAD]	<u>270</u>
o L d	[PROCESS OVERLOAD]	<u>272</u>
LFF	[FALLBACK SPEED]	272
F5E	[RAMP DIVIDER]	<u>272</u>
dC i	[DC INJECTION]	<u>273</u>

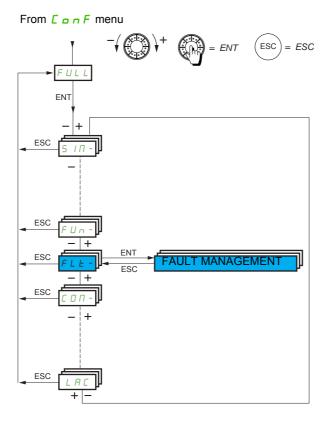

The parameters in the **[FAULT MANAGEMENT]** (*F L L -*) menu can only be modified when the drive is stopped and there is no run command, except for parameters with a () symbol in the code column, which can be modified with the drive running or stopped.

DRI- > CONF > FULL > FLT- > RST-


PTC probe


1 set of PTC probe can be managed by the drive in order to help to protect the motor: on logic input LI6 converted for this use by switch SW2 on the control block.

The PTC probe is monitored for the following detected faults:

- Motor overheating
- · Sensor break
- · Sensor short-circuit

Protection via PTC probe does not disable protection via I²t calculation performed by the drive (the two types of protection can be combined).

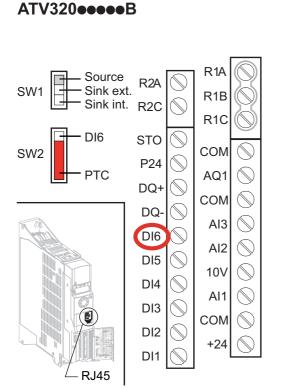

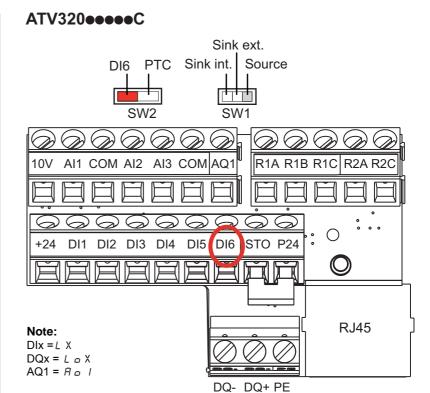

Code	Name / Description	Adjustment range	Factory setting
Full	[FULL] (continued)		
FLE-	[FAULT MANAGEMENT]		
PEC-	[PTC MANAGEMENT]		
PECL	[LI6 = PTC probe]		[No] (n o)
	Check first that the switch SW2 on the control block is set to PTC.		
n o A 5	[No] (na): Not used [Always] (R 5): PTC probe are monitored permanently, even if the power supply is not connected (as long as the control remain connected to the power supply)		s long as the control remains
r d 5 r 5	[Power ON] (r d 5): PTC probe are monitored while the drive power supply is connected [Motor ON] (r 5): PTC probe are monitored while the motor power supply is connected		

DRI- > CONF > FULL > FLT- > THT-

Code	Name / Description	Adjustment range	Factory setting
FLE-	[FAULT MANAGEMENT] (continued)		
r 5 E -	[FAULT RESET]		
r 5 F	[Fault reset]		[No] (n o)
	Detected faults are cleared manually when the assigned input or bit changes to 1, if the cause of the detected fa disappeared. The STOP/RESET key on the graphic display terminal performs the same function. Following detected faults can be cleared manually: #5F, brF, bLF, CnF, CaF, dLF, EPF I, EPF I, EFF I, InFB, InFB, InFB, LCF, LFF I, abF, aHF, aLC, aLF, aPF I, aPF I, aPF I, aPF I, aFF I, 5CF I, 5CF I, 5LF I, 5LF I, 5CF I,		PF 1, EPF2, F6E5, 2, o5F, o6FL, PHF, LF.
L , I 	[No] (no): Function inactive [Yes] (YE 5): Logical input LI1 [] (): See the assignment conditions on page 153		
r P A	[Product reset assig.]		[No] (n p)
	The Restart function performs a Fault Reset and then restarts the the same steps as if it had been switched off and on again. Depen result in immediate and unanticipated operation. The Restart func	ding on the wiring and the configu	uration of the drive, this may
*	▲ WARNING		
	UNANTICIPATED EQUIPMENT OPERATION The Restart function performs a Fault Reset and restar • Verify that activating this function does not result in use a Failure to follow these instructions can result in dead this parameter can only be modified if [3.1 ACCESS LEVEL] (Left Drive reinitialization via logic input. Can be used to reset all detected supply. The drive is reinitialized on a rising edge (change from 0 to the procedure).	unsafe conditions. ath, serious injury, or equip # [] is set to [Expert] (E P r) moded faults without having to disconn	ode. nect the drive from the power
n o L , I	when locked. To assign reinitialization, press and hold down the ENT key for 2 [No] (n a): Function inactive [Ll1] (L I): Logical input Ll1	S.	
L , 6	[LI6] (L , E): Logical input LI6 [LAI1] (L R , I): Logical input AI1 [LAI2] (L R , Z): Logical input AI2 [OL01] (a L B I): Function blocks: Logical Output 01		
o L 10	[OL10] (a L I ::): Function blocks: Logical Output 10		
r P	[Product reset] The Restart function performs a Fault Reset and then restarts the the same steps as if it had been switched off and on again. Depen result in immediate and unanticipated operation.		
*	▲ WAF	RNING	
	UNANTICIPATED EQUIPMENT OPERATION The Restart function performs a Fault Reset and restar • Verify that activating this function does not result in u .Failure to follow these instructions can result in de	unsafe conditions. ath, serious injury, or equip	
	This parameter can only be accessed if [3.1 ACCESS LEVEL] (L. Drive reinitialization. Can be used to reset all detected faults with		
9 E S	[No] (no): Function inactive [Yes] (YE 5): Reinitialization. Press and hold down the ENT key automatically as soon as the operation is complete. The drive car		

DRI- > CONF > FULL > FLT- >THT-

Code	Name / Description	Adjustment range	Factory setting		
HrFC	[Reset restricted fault configuration] [No] (na)				
	This parameter can only be accessed if [3.1 ACCESS LEVE	L] (L R C) is set to [Expert] (EPr) m	ode.		
*	Can be used to select the access level of [Fault reset] (r 5 F) to reset detected faults without having to disconnect to from the power supply. see page 251				
	Note: If [Reset restricted fault configuration] ($H \cap F \cap E$) is set to [Yes] ($G \cap E \cap E$), the additional following det cleared manually: $G \cap E \cap E \cap E$.				
y E S	/				
FLE-	[FAULT MANAGEMENT] (continued)				
Atr-	[AUTOMATIC RESTART]				
ALr	[Automatic restart]		[No] (n a)		
₹ 2 s	This function can be used to automatically perform individual or multiple Fault Resets. If the cause of the error that has triggered the transition to the operating state Fault disappears within while this function is active, the drive resumes normal operation. While the Fault Reset attempts are performed automatically, the output signal "Operating state Fault" is not available. If the attempts to perform the Fault Reset are not successful, the drive remains in the operating state Fault and the output signal "Operating state Fault" becomes active.				
	▲ W	ARNING			
	UNANTICIPATED EQUIPMENT OPERATION				
	Verify that activating this function does not result in unsafe conditions.				
	Verify that the fact that the output signal "Operating state Fault" is not available while this function is active				
	does not result in unsafe conditions. Failure to follow these instructions can result in death, serious injury, or equipment damage				
	The error relay remains activated if this function is active. The speed reference and the operating directic Use 2-wire control ([2/3 wire control] (\(\mathbb{L} \) \(\mathbb{L} \) is set to [2 wire] (\(\mathbb{L} \) \(\mathbb{L} \) and [2 wire type] (\(\mathbb{L} \) \(\mathbb{L} \) is set to [2/3 wire control] (\(\mathbb{L} \) \(\mathbb{L} \) page \(\frac{85}{5} \). If the restart has not taken place once the configurable time \(\mathbb{L} \) \(\mathbb{H} \) r has elapsed, the procedure is aborted locked until it is turned off and then on again. The error codes, which permit this function, are listed on page \(\frac{311}{5} \).				
9 E S	[No] (no): Function inactive [Yes] (YE5): Automatic restart, after locking in fault state, if conditions permit the restart. The restart is performed by a ser periods: 1 s, 5 s, 10 s, then 1 minute for the following attempt	ies of automatic attempts separated by			
L A r	[Max. restart time]		[5 minutes] (5)		
*	This parameter appears if [Automatic restart] (REr) is set to [Yes] (YES). It can be used to limit the number of consecutive restarts on a recurrent detected fault.				
5	[5 min] (5): 5 minutes				
1 D 3 D	[10 minutes] (1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1				
1h	[1 hour] (/ h): 1 hour				
2 h 3 h	[2 hours] (2 h): 2 hours [3 hours] (3 h): 3 hours				
CF	[Unlimited] (LE): Unlimited				
FLE-	[FAULT MANAGEMENT] (continued)				
AL5-	[ALARM SETTING]				
ГЕd	[Current threshold]	0 to 1.5 ln (1)	INV		
()	Motor current threshold.	<u>-</u>			
(1)					
	1				

DRI- > CONF > FULL > FLT-

Code	Name / Description	Adjustment range	Factory setting
FEd	[Freq. threshold]	0 to 599 Hz	50 Hz
()	Motor frequency threshold.		
F2d	[Freq. threshold 2]	0 to 599 Hz	50 Hz
()	Motor frequency threshold.		
E E H	[High torque thd.]	-300 to 300%	100%
()	High torque frequency threshold.		
E E L	[Low torque thd.]	-300 to 300%	50%
()	Low torque frequency threshold.		
F9L	[Pulse warning thd.]	0 to 20,000 Hz	0 Hz
*	Frequency level. Visible if [Frequency meter] (F 9 F) is not [No] (n a).		
FLE-	[FAULT MANAGEMENT] (continued)		
FLr-	[CATCH ON THE FLY]		
	Note: This function cannot be used with certain other functions. Follow the	instructions on page 162	<u>.</u>
FLr	[Catch on the fly]		[No] (n a)
	Used to enable a smooth restart if the run command is maintained after the following events: - Loss of supply mains or disconnection. - Clearance of current detected fault or automatic restart. - Freewheel stop. The speed given by the drive resumes from the estimated speed of the motor at the time of the restart, then follows the ramp to the reference speed. This function requires 2-wire level control. When the function is operational, it activates at each run command, resulting in a slight delay of the current (0.5 s max). [Catch on the fly] (F L r) is forced to [No] (n a) if brake logic control [Brake assignment] (b L E) is assigned (page 194) or if [Auto DC injection] (H d E) is set to [Continuous] (E b) page 176.		
л о У Е 5	/		

(1) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

DRI- > CONF > FULL > FLT- > OHL-

Motor thermal protection

Function


Thermal protection by calculating the I²t.

Note: The motor thermal state is not saved when the drive is switched off.

- · Self-cooled motors: The tripping curves depend on the motor frequency.
- Force-cooled motors: Only the 50 Hz tripping curve needs to be considered, regardless of the motor frequency.

The following curves represent the triggering time in seconds:

Triggering time in seconds

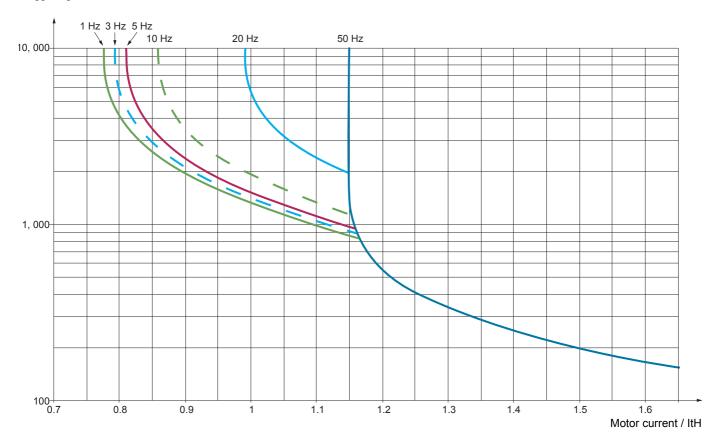

CAUTION

RISK OF DAMAGE TO THE MOTOR

External protection against overloads is required under the following circumstances:

- · When the product is being switched on again, as there is no memory to record the motor thermal state
- When supplying more than one motor
- When supplying motors with ratings less than 0.2 times the nominal drive current
- · When using motor switching

Failure to follow these instructions can result in equipment damage.

Code	Name / Description	Adjustment range	Factory setting	
FLE-	[FAULT MANAGEMENT] (continued)			
FHF-	[MOTOR THERMAL PROT.]			
E H E	[Motor protect. type] [Self cooled] (#			
	Note: .An error will occur when the thermal state reaches 118% of back below 100%.	the rated state and reactivation w	rill occur when the state falls	
ACL FCL	[No] (n p): No protection [Self cooled] (R L L): For self-cooled motors [Force-cool] (F L L): For force-cooled motors			
E E d	[Motor therm. level]	0 to 118%	100%	
(1)	Threshold for motor thermal alarm (logic output or relay).			
FF95	[Motor2 therm. level]	0 to 118%	100%	
O	Threshold for motor 2 thermal alarm (logic output or relay).			
EEd3	[Motor3 therm. level]	0 to 118%	100%	
()	Threshold for motor 3 thermal alarm (logic output or relay).			
o L L	[Overload fault mgt]		[Freewheel] (4 E 5)	
	OVERHEATING AND DAMAGE TO THE MOTOR Depending on the settings of this parameter, the error response to detected errors is disabled or the transition to the operating state Fault is suppressed if an error is detected. • Verify that the settings of this parameter do not result in equipment damage. • Implement alternative monitoring functions for disabled monitoring functions. Failure to follow these instructions can result in equipment damage. Type of stop in the event of a motor thermal error. [Ignore] (n p): Detected fault ignored [Freewheel] (y E 5): Freewheel stop [Per STT] (5 L E): Stop according to configuration of [Type of stop] (5 L E) page 173, without tripping. In this case, the faurelay does not open and the drive is ready to restart as soon as the detected fault disappears, according to the restart condition of the active command channel (for example, according to [2/3 wire control] (L E E) and [2 wire type] (L E E) page 125 if control is via the terminals). Configuring an alarm for this detected fault is recommended (assigned to a logic output, for example)			
LFF rL5 rNP FSE dE;	in order to indicate the cause of the stop. [fallback spd] (L F F): Change to fallback speed, maintained as long as the detected fault persists and the run command has not been removed (2) [Spd maint.] (r L 5): The drive maintains the speed being applied when the detected fault occurred, as long as the detected fault is present and the run command has not been removed (2) [Ramp stop] (r \(\Pri P \)): Stop on ramp [Fast stop] (F 5 L): Fast stop			
ПЕП	[Mot THR memo]		[No] (n p)	
n o 4E 5	Motor thermal state memorization. [No] (no): Motor thermal state is not stored at power off [Yes] (YE 5): Motor thermal state is stored at power off			

DRI- > CONF > FULL > FLT-

Code	Name / Description	Adjustment range	Factory setting		
FLE-	[FAULT MANAGEMENT] (continued)				
oPL-	[OUTPUT PHASE LOSS]				
o P L	[Output Phase Loss] [Yes] (YE 5)				
₹ 2 s	△ △ DANGE	R			
	HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH If output phase monitoring is disabled, phase loss and, by implication, accidental disconnection of cables, are not detected. • Verify that the setting of this parameter does not result in unsafe conditions.				
	Failure to follow these instructions will result in death or se				
9E5 0AC	[Yes] (YE 5): Tripping on [Output phase loss] (PL) with freewheel stop				
	[OutPh time detect] Time delay for taking the [Output Phase Loss] (a P L) detected fault into	0.5 to 10 s	0.5 s		
()	Time delay for taking the [Output Fliase Loss] (BFL) detected fault into	account.			
FLE-	[FAULT MANAGEMENT] (continued)				
IPL -	[INPUT PHASE LOSS]				
ı P L	[Input phase loss]		According to drive rating		
★ 2 s	Cannot be accessed if drive rating is ATV •••• M2. In this case, no factory settings value. Factory setting: [Freewheel] (# E 5) for drive rating ATV320••• N4•. If 1 phase disappears and if this leads to performance decrease, the drive switches to fault mode [Input phase loss] (P H F). If 2 or 3 phases disappear, the drive trips in [Input phase loss] (P H F).				
л а У Е 5	[Ignore] (n p): Detected fault ignored [Freewheel] (9 E 5): Detected fault with freewheel stop				

DRI- > CONF > FULL > FLT-

Code	Name / Description	Adjustment range	Factory setting		
FLE-	[FAULT MANAGEMENT] (continued)				
oHL-	[DRIVE OVERHEAT]				
o H L	[Overtemp fault mgt]		[Freewheel] (4 E 5)		
	NOTICE OVERHEATING AND DAMAGE TO THE MOTOR Depending on the settings of this parameter, the error response to detected errors is disabled or the transition to the operating state Fault is suppressed if an error is detected. • Verify that the settings of this parameter do not result in equipment damage. Failure to follow these instructions can result in equipment damage. Behavior in the event of the drive overheating. Note: An error will occur when the thermal state reaches 118% of the rated state and reactivation will occur when the state falls				
LFF -LS -NP -NP	[Freewheel] (#E 5): Freewheel stop [Per STT] (5 \(\mathbb{E} \) E): Stop according to configuration of [Type of stop] (5 \(\mathbb{E} \) P) page 173, without tripping. In this case, the fault relay does not open and the drive is ready to restart as soon as the detected fault disappears, according to the restart conditions of the active command channel (for example, according to [2/3 wire control] (\(\mathbb{E} \) E) and [2 wire type] (\(\mathbb{E} \) E) page 125 if control is via the terminals). Configuring an alarm for this detected fault is recommended (assigned to a logic output, for example) in order to indicate the cause of the stop. [fallback spd] (\(\mathbb{E} \) F): Change to fallback speed, maintained as long as the detected fault persists and the run command has not been removed (2) [Spd maint.] (\(\mathbb{E} \) E): The drive maintains the speed being applied when the detected fault occurred, as long as the detected fault is present and the run command has not been removed (2) [Ramp stop] (\(\mathbb{E} \) E): Stop on ramp [Fast stop] (\(\mathbb{F} \) E): Fast stop				
E H A	[Drv therm. state al]	0 to 118%	100%		
()	Threshold for drive thermal alarm (logic output or relay).				

- (1) The parameter can also be accessed in the [SETTINGS] (5 E E -) menu.
- (2) Because, in this case, the detected fault does not trigger a stop, it is recommended to assign a relay or logic output to its indication.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

Deferred stop on thermal alarm

This function helps to prevent the drive stopping between two steps of the process if the drive or motor overheats, by authorizing operation until the next stop. At the next stop, the drive is locked until the thermal state falls back to a value, which undershoots the set threshold by 20%. Example: A threshold set at 80% enables reactivation at 60%.

One thermal state threshold must be defined for the drive, and one thermal state threshold for the motor(s), which will trigger the deferred stop.

Code	Name / Description	Adjustment range	Factory setting	
FLE-	[FAULT MANAGEMENT] (continued)			
SAL-	[THERMAL ALARM STOP]			
5 A L	[Thermal alarm stop]		[No] (n a)	
	Thermal alarm stop function allow to set a custom alarm thermal I reached, the drive trips in freewheel stop.	evel for the drive or the mo	otor. When one of these levels is	
л о У Е 5	[No] (n p): Function inactive (in this case, the following paramete [Yes] (4 E 5): Freewheel stop on drive or motor thermal alarm	ers cannot be accessed)		
L H A	[Drv therm. state al]	0 to 118%	100%	
O	Thermal state threshold of the drive tripping the deferred stop.			
E E d	[Motor therm. level]	0 to 118%	100%	
0	Thermal state threshold of the motor tripping the deferred stop.			
F F d 2	[Motor2 therm. level]	0 to 118%	100%	
\Diamond	Thermal state threshold of the motor 2 tripping the deferred stop.			
E E d 3	[Motor3 therm. level]	0 to 118%	100%	
\circ	Thermal state threshold of the motor 3 tripping the deferred stop.			
FLE-	[FAULT MANAGEMENT] (continued)			
ELF-	[EXTERNAL FAULT]			
ELF	[External fault ass.]		[No] (n a)	
	If the assigned bit is at 0, there is no external fault. If the assigned bit is at 1, there is an external fault. Logic can be configured via [External fault config] (L E L) if a logic input has been assigned.			
Lil	[No] (n p): Function inactive [Ll1] (L I): Logical input Ll1 [] (): See the assignment conditions on page 153			
LEE	[External fault config]		[Active high] (H , L)	
*	Parameter can be accessed if the external fault has been assigned to a logic input. It defines the positive or negative logic of the input assigned to the detected fault.			
	[Active low] (L a): Triggering on falling edge (change from 1 to ([Active high] (H , L): Triggering on rising edge (change from 0 t			

Parameters described in this page can be accessed by: DRI- > CONF > FULL > FLT- > CLL-

Code	Name / Description	Adjustment range	Factory setting	
EPL	[External fault mgt]		[Freewheel] (4E5)	
	Type of stop in the event of an external fault.			
9 E S	[Ignore] (ng): External fault ignored [Freewheel] (9E5): Freewheel stop [Per STT] (5EE): Stop according to configuration of [Type of stop] (5EE) page 173, without tripping. In this case, the fault relay does not open and the drive is ready to restart as soon as the detected fault disappears, according to the restart conditions of the active command channel (for example, according to [2/3 wire control] (ECE) and [2 wire type] (ECE) page 125 if control is via the terminals). Configuring an alarm for this detected fault is recommended (assigned to a logic			
LFF	[t-manual op a] (a + +) a standard op a ca, standard ac	ong as the detected fault pers	sists and the run command has	
r L 5	not been removed (1) [Spd maint.] (r L 5): The drive maintains the speed being applie fault is present and the run command has not been removed (1)	d when the detected fault occ	curred, as long as the detected	
- NP	[Ramp stop] (¬ П Р): Stop on ramp			
d C i	[Fast stop] (F 5 L): Fast stop [DC injection] (d [): DC injection stop. This type of stop cannot	t be used with certain other fu	nctions. See table on page 165	
FLE-	[FAULT MANAGEMENT] (continued)		· •	
u 5 b -	[UNDERVOLTAGE MGT]			
u 5 b	[UnderV. fault mgt]		[Std fault] ([])	
	Behavior of the drive in the event of an undervoltage.			
0	[Std fault] ([]): The drive trips and the external fault signal is trigged be opened) [Flt wo relay] (1): The drive trips but the external fault signal is not			
, e	remains closed) [Alarm] (2): Alarm and fault relay remain closed. The alarm can			
ur E 5	[Mains voltage]	According to drive voltage rating	According to drive voltage rating	
	Rated voltage of the supply mains in V.			
220	For ATV32000M20: [200V ac] (
400 440 460	For ATV320•••N4•: [380V ac] (380): 380 Volts AC [400V ac] (400): 400 Volts AC [440V ac] (400): 440 Volts AC [460V ac] (460): 460 Volts AC [500V ac] (500): 500 Volts AC (factory setting)			
ы 5 L	[Undervoltage level]	100 to 276 V	According to drive rating	
	Undervoltage fault level setting in Volts. The factory setting is de			
u S E	[Undervolt. time out]	0.2 s to 999.9 s	0.2 s	
	Time delay for taking undervoltage detected fault into account.			
5 <i>L P</i>	[UnderV. prevention]		[No] (n a)	
	Behavior in the event of the undervoltage prevention level being r	reached.		
ПП5 - ПР	[No] (no): No action [DC Maintain] (nn5): This stop mode uses the inertia to mainta [Ramp stop] (nn7): Stop following an adjustable ramp [Max st [Lock-out] (nn7): Lock (freewheel stop) without error		g as possible	
ĿSΠ	[UnderV. restart tm]	1.0 s to 999.9 s	1.0 s	
* ()	Time delay before authorizing the restart after a complete stop fo the voltage has returned to normal.	r [UnderV. prevention] (5 <i>E</i>	P) = [Ramp stop] (¬ П P), if	

DRI- > CONF > FULL > FLT- > SDD-

Code	Name / Description	Adjustment range	Factory setting	
υPL	[Prevention level]	133 to 261 V	According to drive rating	
*	Undervoltage prevention level setting in Volts, which can be accessed if [UnderV. prevention] (5 £ P) is not [No] (n a). The adjustment range and factory setting are determined by the drive voltage rating and the [Mains voltage] (u r E 5) value.			
5 <i>L</i> П	[Max stop time]	0.01 to 60.00 s	1.00 s	
*	Ramp time if [UnderV. prevention] (5 £ P) is set to [Ramp stop	(r NP).		
O				
<i>E b 5</i>	[DC bus maintain tm]	1 to 9,999 s	9,999 s	
*	DC bus maintain time if [UnderV. prevention] (5 £ P) is set to [D	OC Maintain] (ПП5).		
()				
FLE-	IFALL T MANACEMENTI (continued)			
	[FAULT MANAGEMENT] (continued)			
E IE -	[IGBT TESTS]			
SErE	[IGBT test]		[No] (n a)	
<i>9 E S</i>	[Yes] (YES): The IGBTs are tested on power up and every time a run command is sent. These tests cause a slight delay (a few ms). In the event of a detected fault, the drive will lock. The following faults can be detected: - Drive output short-circuit (terminals U-V-W): SCF display. - IGBT inoperable: xtF, where x indicates the number of the IGBT concerned. - IGBT short-circuited: x2F, where x indicates the number of the IGBT concerned.			
FLE-	[FAULT MANAGEMENT] (continued)			
LFL-	[4-20mA LOSS]			
LFL3	[Al3 4-20mA loss]		[Ignore] (n a)	
4 E S 5 E E L F F				
d C i	[Fast stop] (F 5 b): Fast stop [DC injection] (d [): DC injection stop. This type of stop cannot	be used with certain other	functions. See table on page 163	

(1) Because, in this case, the detected fault does not trigger a stop, it is recommended to assign a relay or logic output to its indication.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

DRI- > CONF > FULL > FLT- > TID-

Parameter can be accessed in [Expert] mode

Code	Name / Description	Adjustment range	Factory setting
FLE-	[FAULT MANAGEMENT] (continued)		
ın H -	[FAULT INHIBITION]		
ın H	[Fault inhibit assign.]		[No] (n p)
	In rare cases, the monitoring functions of the drive may be typical example is a smoke extractor fan operating as a part should operate as long as possible, even if, for example, the applications, damage to or destruction of the device may be a from occurring whose hazard potential is assessed to be m. A parameter is provided to disable certain monitoring function automatic error responses of the device are no longer active monitoring functions that allow operators and/or master conto detected errors. For example, if overtemperature monitoring of the drive is derived in the control of the drive is desired in the drive is desired in the drive in the drive is desired in the drive in the drive is desired in the drive is desired in the drive is desired in the drive in the drive in the drive in the drive is desired in the drive in the drive is desired in the drive in the drive in the drive in the d	of a fire protection system. If a fire ocception is permissible ambient temperature of the acceptable as collateral damage, for example, some severe. Ons in such applications so that automore. You must implement alternative mone trol systems to adequately respond to disabled, the drive of a smoke extractor, for example, signaled in a control roo	urs, the smoke extractor fan e drive is exceeded. In such ample, to keep other damage atic error detection and itoring functions for disabled conditions which correspond fan may itself cause a fire if
*	A D	ANGER	
🚡 2 s	MONITORING FUNCTIONS DISABLED, NO ERI	ROR DETECTION	
	Only use this parameter after a thorough risk as:		ulations and standards
	 that apply to the device and to the application. Implement alternative monitoring functions for disabled monitoring functions that do not trigger automaterror responses of the drive, but allow for adequate, equivalent responses by other means in compliar with all applicable regulations and standards as well as the risk assessment. 		
	Commission and test the system with the moniDuring commissioning, verify that the drive and	_	y performing tests and
	simulations in a controlled environment under o	· · · · · · · · · · · · · · · · · · ·	
	Failure to follow these instructions will result i	n death or serious injury.	
	If the assigned input or bit is at 0, detected fault monitoring is active. If the assigned input or bit is at 1, fault monitoring Active detected faults are cleared on a rising edge (change from 0 to 1) of the assigned input or bit. Note: The Safe Torque Off function and any detected faults that help to prevent any form of operation are not affect function. Following faults can be inhibited: ### PF 1, ### PF 1, ### ### PF 2, ### ### PF 3, ### ### PF 4, ### ##		
n o L , l	[No] (no): Function inactive [Ll1] (L , I): Logical input Ll1 [] (): See the assignment conditions on page 153		
FLE-	[FAULT MANAGEMENT] (continued)		
CLL-	[COM. FAULT MANAGEMENT]		
C L L	[Network fault mgt]		[Freewheel] (4 E 5)
	A W	ARNING	
	LOSS OF CONTROL		
	If this parameter is set to [Ignore] ($\square \square$), fieldbus	module communication monitoring	is disabled.
	Only use this setting after a thorough risk asset	_	
	that apply to the device and to the application.Only use this setting for tests during commission	nina	
	Verify that communication monitoring has been	_	commissionina
	procedure and performing the final commission	ing test.	
	Failure to follow these instructions can result	in death, serious injury, or equip	ment damage.

DRI- > CONF > FULL > FLT- > FQS-

Code	Name / Description	Adjustment range	Factory setting		
	Behavior of the drive in the event of a communication interruption with a communication card.				
л о У Е 5	[Freewheel] (4 E 5): Freewheel stop				
5 <i>E E</i>	[Per STT] (5 £ £): Stop according to configuration of [Type of stop] (5 £ £) page 173, without fault tripping. In this case, the fault relay does not open and the drive is ready to restart as soon as the detected fault disappears, according to the restart conditions of the active command channel (for example, according to [2/3 wire control] (£ £ £) and [2 wire type] (£ £ £) page				
LFF	125 if control is via the terminals). Configuring an alarm for this detected fault is recommended (assigned to a logic output, for example) in order to indicate the cause of the stop [Fallback spd] (L F F): Change to fallback speed, maintained as long as the detected fault persists and the run command has				
r L 5	not been removed (1)				
гПР F5E d[i	[Ramp stop] $($		tions. See table on page 163		
C o L	[CANopen fault mgt]	or stop cannot be used with certain other func-	[Freewheel] (4 E 5)		
		▲ WARNING			
	LOSS OF CONTROL				
	If this parameter is set to [Ignore] (n a), C Only use this setting after a thorough ris	k assessment in compliance with all regul			
	that apply to the device and to the applicOnly use this setting for tests during cor				
	Verify that communication monitoring has	as been re-enabled before completing the	commissioning		
	procedure and performing the final comparison of the f		ment damage.		
	Behavior of the drive in the event of a communication	on interruption with integrated CANopen®.			
n o 4 E S					
5 E E	• • • • • • • • • • • • • • • • • • • •				
LFF	example) in order to indicate the cause of the stop. [fallback spd] (L F F): Change to fallback speed, r not been removed (1)	maintained as long as the detected fault persist	s and the run command has		
r L S r N P	[Spd maint.] (r L 5): The drive maintains the spee fault is present and the run command has not been		ed, as long as the detected		
F5E d[i	[Ramp stop] (¬ ¬ P): Stop on ramp [Fast stop] (¬ S + E): Fast stop [DC injection] (¬ E	of aton connet he used with cortain other funct	iona. Soo table on page 165		
5 L L	[Modbus fault mgt]	or stop carmot be used with certain other funct	[Freewheel] (4 E 5)		
		▲ WARNING			
	LOSS OF CONTROL				
	If this parameter is set to [Ignore] (¬ ¬), N	_			
	Only use this setting after a thorough rist that apply to the device and to the applic	•	ations and standards		
	Only use this setting for tests during cor				
	Verify that communication monitoring hat procedure and performing the final com- Failure to follow these instructions can	as been re-enabled before completing the missioning test.			
	. and to follow these manuchons can	rocan in acam, serious injury, or equip	mont damage.		

DRI- > CONF > FULL > FLT- > FQS-

Code	Name / Description	Adjustment range	Factory setting
	Behavior of the drive in the event of a communication interruption with integration	grated Modbus.	
9E5 5EE	[Freewheel] (4 E 5): Freewheel stop		
LFF	example) in order to indicate the cause of the stop. [fallback spd] (L F F): Change to fallback speed, maintained as long as the not been removed (1)	ne detected fault persists	s and the run command has
r L 5	[Spd maint.] (r L 5): The drive maintains the speed being applied when the fault is present and the run command has not been removed (1) [Ramp stop] (r ПР): Stop on ramp	he detected fault occurre	ed, as long as the detected
F5E dC i	[Fast stop] (F 5 L): Fast stop [DC injection] (d [): DC injection stop. This type of stop cannot be used	l with certain other functi	ons. See table on page <u>165</u> .
FLE-	[FAULT MANAGEMENT] (continued)		
5 d d -	[ENCODER FAULT]		
5 d d	[Load slip detection]		[Yes] (YE 5)
	Load slip detection activation		
n o 4E 5	[No] (no): Detected fault ignored [Yes] (YE 5): Freewheel stop		
	The event is triggered by comparison with the output frequency and the sp configuration <code>FRnF</code> , <code>LRnF</code> , <code>dRnF</code> and <code>LRnF</code> . The event is also triggered as soon as a RUN order is received, if the sign of in opposite way during <code>LRnF</code> . In case of a detected fault, the drive switch to a freewheel stop, and if the b brake command will be set to 0.	of the output frequency a	and the speed feedback are
FAnF	[ANF Frequency Thd.]		-
*	Visible if [Encoder usage] (Enu) is set to [Fdbk monit.] (5 E L). See page 136		
LAnF	[ANF Detection level]		-
*	Visible if [Encoder usage] ($E \cap u$) is set to [Fdbk monit.] ($5 E C$). See page $\underline{136}$		
dAnF	[ANF Direction check]		-
*	Visible if [Encoder usage] ($E \cap u$) is set to [Fdbk monit.] ($5 E C$). See page $\underline{137}$		
Ł A n F	[ANF Time Thd.]		-
*	Visible if [Encoder usage] ($E \cap u$) is set to [Fdbk monit.] ($5 E E$). See page $\underline{137}$		

DRI- > CONF > FULL > FLT- > DLD-

Code	Name / Description	Adjustment range	Factory setting	
E id-	[TORQUE OR I LIM. DETECT]			
5 5 <i>b</i>	[Trq/l limit. stop]		[Ignore] (n a)	
	Behavior in the event of switching to torque or current limitation.			
n a	[Ignore] (¬ ¬): Detected fault ignored			
	[Freewheel] (4 E 5): Freewheel stop			
	[Per STT] (5 L L): Stop according to configuration of [Type of stop] (5 L			
	fault relay does not open and the drive is ready to restart as soon as the d	• • • • • • • • • • • • • • • • • • • •	· ·	
	conditions of the active command channel (for example, according to [2/3 w	- \	. , ,	
	125 if control is via the terminals). Configuring an alarm for this detected fall example) in order to indicate the cause of the stop	auit is recommended (ass	aigned to a logic output, for	
LFF	[fallback spd] (L F F): Change to fallback speed, maintained as long as t	he detected fault persists	and the run command has	
	not been removed (1)	·		
r L 5	[Spd maint.] (r L 5): The drive maintains the speed being applied when t	he detected fault occurre	d, as long as the detected	
	fault is present and the run command has not been removed (1)			
	[Ramp stop] (¬ П Р): Stop on ramp			
	[Fast stop] (F 5 L): Fast stop	d	O table 405	
dL i	[DC injection] (d [1): DC injection stop. This type of stop cannot be used with certain other functions. See table on page 165			
5 Ł o	[Trq/l limit. time out]	0 to 9,999 ms	1,000 ms	
()	(If [Trq/l limit. stop] (5 5 b) has been configured)			
V)	Time delay for taking SSF limitation into account.			

(1) Because, in this case, the detected fault does not trigger a stop, it is recommended to assign a relay or logic output to its indication.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.


DRI- > CONF > FULL > FLT- > TNF-

Use of the "Pulse input" input to measure the speed of rotation of the motor

This function uses the "Pulse input" input and can only be used if the "Pulse input" input is not being used for another function.

Example of use

An indexed disk driven by the motor and connected to a proximity sensor can be used to generate a frequency signal that is proportional to the speed of rotation of the motor.

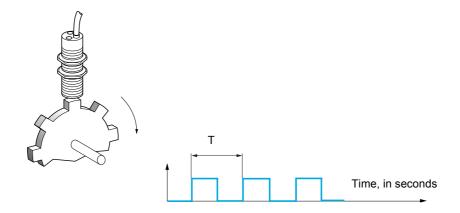

When applied to the "Pulse input" input, this signal supports:

- Measurement and display of the motor speed: signal frequency = 1/T. This frequency is displayed by means
 of the [Pulse in. work. freq.] (F 9 5) parameter, page 50.
- Overspeed detection (if the measured speed exceeds a preset threshold, the drive will trigger an error).
- Brake failure detection, if brake logic control has been configured: If the speed does not drop sufficiently
 quickly following a command to engage the brake, the drive will trigger an error. This function can be used
 to detect worn brake linings.
- Detection of a speed threshold that can be adjusted using [Pulse warning thd.] (F 9 L) page 102 and is assignable to a relay or logic output, see page 138.

DRI- > CONF > FULL > FLT- > PPI-

Code	Name / Description	Adjustment range	Factory setting
FLE-	[FAULT MANAGEMENT] (continued)		
F9F-	[FREQUENCY METER]		
F9F	[Frequency meter]		[No] (n a)
	Activation of the speed measurement function.		
л о У Е S	[No] (na): Function inactive. In this case, none of the function parameters [Yes] (9 E 5): Function active, assignment only possible if no other function		the "Pulse input" input
F 9 C	[Pulse scal. divisor]	1.0 to 100.0	1.0
()	Scaling factor for the "Pulse input" input (divisor). The frequency measured [Pulse in. work. freq.] (F 9 5) parameter, page 50.	is displayed by means of	the
F 9 A	[Overspd. pulse thd.]		[No] (n o)
	Activation and adjustment of overspeed monitoring: [Overspeed] (5 \square F).		
-	[No] (n a): No overspeed monitoring 1 Hz to 20.00 kHz: Adjustment of the frequency tripping threshold on the "Pulse input" input divided by [Pulse scal. divisor] (F 9 C).		
E d 5	[Pulse overspd delay]	0.0 s to 10.0 s	0.0 s
	Time delay for taking overspeed detected fault into account.		
FdL	[Level fr. pulse ctrl]		[No] (n o)
	Activation and adjustment of monitoring for the Pulse input (speed feedback	(): [Speed fdback loss]	(5 <i>P F</i>).
n o -	[No] (ng): No monitoring of speed feedback 0.1 Hz to 599 Hz: Adjustment of the motor frequency threshold for tripping a speed feedback detected fault (difference between the estimated frequency and the measured speed).		
F9E	[Pulse thd. wo Run]		[No] (n o)
	Activation and adjustment of brake monitoring: [Brake feedback] (b r F). If brake logic control [Brake assignment] (b L C) page 194 is not configured, this parameter is forced to [No] (n a).		
n a -	[No] (n a): No brake monitoring 1 Hz to 1,000 Hz: Adjustment of the motor frequency threshold.		
£ 9 b	[Pulse wo Run delay]	0.0 s to 10.0 s	0.0 s
	Time delay for taking brake monitoring into account.		

Load variation detection

This detection is only possible with the High-speed hoisting function. It can be used to detect if an obstacle has been reached, triggering a sudden (upward) increase or (downward) decrease in the load.

Load variation detection triggers a [Dynamic load fault] (d L F). The [Dyn. load Mgt.] (d L b) parameter can be used to configure the response of the drive in the event of this detected fault.

Load variation detection can also be assigned to a relay or a logic output.

There are two possible detection modes, depending on the configuration of high-speed hoisting:

· Speed reference mode

[High speed hoisting] ($H \ 5 \ a$) page $\underline{205}$ is set to [Speed ref] ($5 \ 5 \ a$). Torque variation detection.

During high-speed operation, the load is compared to that measured during the speed step. The permissible load variation and its duration can be configured. If exceeded, the drive switches to fault mode.

Current limitation mode

[High speed hoisting] ($H \subseteq \square$) page 205 is set to [Current Limit] ($E \subseteq \square$).

On ascend, during high-speed operation, an increase in load will result in a drop in speed. Even if high-speed operation has been activated, if the motor frequency drops below the [I Limit Frequency] ($5 \ L$) threshold page 205, the drive will switch to fault mode. The detection is realised only for a positive variation of the load and only in the high speed area (area upper to [I Limit Frequency] ($5 \ L$)).

On descend, operation takes the form of Speed reference mode.

Code	Name / Description	Adjustment range	Factory setting	
FLE-	[FAULT MANAGEMENT] (continued)			
dLd-	[DYNAMIC LOAD DETECT.]			
	Load variation detection. This can be accessed if [High speed hoisting]	(<i>H</i> 5 a) page <u>205</u> is not	[No] (n a).	
ELd	[Dynamic load time] [No] (n a)			
	Activation of load variation detection and adjustment of time delay for taking load variation detected fault [Dynamic load fault] (d L F) into account.			
n a -	[No] (no): No load variation detection 0.00 s to 10.00 s: Adjustment of the time delay for taking detected fault into account.			
dLd	[Dynamic load threshold]	1 to 100%	100%	
	Adjustment of the threshold for load variation detection, as a % of the load	measured during the s	peed step.	
dLЬ	[Dyn. load Mgt.]		[Freewheel] (4E 5)	
	Behavior of the drive in the event of a load variation detected fault.			
	[Ignore] (n a): Detected fault ignored [Freewheel] (YE5): Freewheel stop [Per STT] (5 L L): Stop according to configuration of [Type of stop] (5 L L) page 173, without tripping. In this case, the fault relay does not open and the drive is ready to restart as soon as the detected fault disappears, according to the restart conditions of the active command channel, (for example, according to [2/3 wire control] (L L L) and [2 wire type] (L L L) page 125 if control is via the terminals). Configuring an alarm for this detected fault is recommended (assigned to a logic output, for example in order to indicate the cause of the stop			
LFF	[Fallback spd.] (L F F): Change to fallback speed, maintained as long as not been removed (1)	the detected fault persis	its and the run command has	
r L 5	[Spd maint.] (r L 5): The drive maintains the speed at the time the detecte and the run command has not been removed (1)	[Spd maint.] (r L S): The drive maintains the speed at the time the detected fault occurred, as long as the detected fault persists		
г П Р	Franch cools (, , , ,), cools consume			
F 5 Ł	[Fast stop] (F 5 L): Fast stop			

DRI- > CONF > FULL > FLT- > ULD-

Code	Name / Description	Adjustment range	Factory setting
FLE-	[FAULT MANAGEMENT] (continued)		
EnF-	[AUTO TUNING FAULT]		
EnL	[Autotune fault mgt]		[Freewheel] (4 E 5)
	[Ignore] (n p): Detected fault ignored [Freewheel] (YE5): Freewheel stop		

(1) Because, in this case, the detected fault does not trigger a stop, it is recommended to assign a relay or logic output to its indication.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

Card pairing

Function can only be accessed in [Expert] (EPr) mode.

This function is used to detect whenever a card has been replaced or the software has been modified in any way.

When a pairing password is entered, the parameters of the card currently inserted are stored. On every subsequent power-up, these parameters are verified and, in the event of a discrepancy, the drive locks in HCF fault mode. Before the drive can be restarted, you must revert to the original situation or re-enter the pairing password.

The following parameters are verified:

- The type of card for: all cards.
- The software version for: the control block, the communication cards.
- The serial number for: the control block.

Code	Name / Description	Adjustment range	Factory setting
FLE-	[FAULT MANAGEMENT] (continued)		
PP	[CARDS PAIRING]		
PP ,	[Pairing password]	[OFF] (• F F) to 9,999	[OFF] (o F F)
*			
a F F -	The [OFF] (or F) value signifies that the card pairing function is inactive The [ON] (or n) value signifies that card pairing is active and that an access the event of a card pairing detected fault As soon as the code has been entered, the drive is unlocked and the code of The PPI code is an unlock code known only to Schneider Electric Product S	changes to [ON] (a n).	order to start the drive in



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

Torque as a % of

Process underload detected fault

A process underload is detected when the next event occurs and remains pending for a minimum time **[Unid T. Del. Detect]** (u L E), which is configurable:

- The motor is in steady state when the offset between the frequency reference and motor frequency falls below the configurable threshold [Hysteresis Freq. Att.] (5 r b).

Underload zone

LUL F 5 Frequency

Between zero frequency and the rated frequency, the curve reflects the following equation:

torque =
$$L \sqcup L + \frac{(L \sqcup n - L \sqcup L) \times (frequency)^2}{(rated frequency)^2}$$

The underload function is not active for frequencies below [Unid. Freq. Thr. Det.] (¬ П ч d).

A relay or a logic output can be assigned to the signaling of this detected fault in the **[INPUTS / OUTPUTS CFG]** (, _ p -) menu.

Code	Name / Description	Adjustment range	Factory setting
FLE-	[FAULT MANAGEMENT] (continued)		
uLd-	[PROCESS UNDERLOAD]		
υLE	[Unld T. Del. Detect.]	0 to 100 s	0 s
	Underload detection time delay. A value of 0 deactivates the function and makes the other parameters in	accessible.	
Lun	[Unid. Thr. Nom. Speed.]	20 to 100%	60%
*	Underload threshold at rated motor frequency ([Rated motor freq.] (F	5) page <u>86</u>), as a % of the rate	d motor torque
()			
LuL	[Unld. Thr. 0. Speed.]	0 to [Unid.Thr.Nom.Speed]	0%
*	Underload threshold at zero frequency, as a % of the rated motor torque		
()			
гПид	[Unld. Freq. Thr. Det.]	0 to 599 Hz	0 Hz
*	Minimum frequency underload detection threshold.		+
()			
5 r b	[Hysteresis Freq. Att.]	0.3 to 599 Hz	0.3 Hz
*	Maximum deviation between the frequency reference and the motor free	uency, which defines steady sta	te operation.
()			

DRI- > CONF > FULL > FLT - > DCI-

Code	Name / Description	Adjustment range	Factory setting
u d L	[Underload Managmt.]		[Freewheel] (4E5)
*	Behavior on switching to underload detection.		
	[Ignore] (n p): Detected fault ignored [Freewheel] (YE5): Freewheel stop		
	[Ramp stop] (¬ПР): Stop on ramp		
	[Fast stop] (F 5 L): Fast stop		
FEu	[Underload T.B. Rest.]	0 to 6 min	0 min
*	This parameter cannot be accessed if [Underload Mangmt.] ($u d L$) is se Minimum time permitted between an underload being detected and any au In order to allow an automatic restart, the value of [Max. restart time] ($E R$) one minute.	tomatic restart.	parameter by at least



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

Process overload detected fault

A process overload is detected when the next event occurs and remains pending for a minimum time [Ovld Time Detect.] ($E \square L$), which is configurable:

- The drive is in current limitation mode.
- The motor is in steady state and the current is above the set overload threshold [Ovld Detection Thr.] (L a [).

The motor is in steady state when the offset between the frequency reference and motor frequency falls below the configurable threshold [Hysteresis Freq. Att.] (5 cb).

A relay or a logic output can be assigned to the signaling of this detected fault in the

[INPUTS / OUTPUTS CFG] (, _ a-) menu.

Code	Name / Description	Adjustment range	Factory setting
FLE-	[FAULT MANAGEMENT] (continued)		
oLd-	[PROCESS OVERLOAD]		
F o L	[Ovld Time Detect.]	0 to 100 s	0 s
	Overload detection time delay. A value of 0 deactivates the function and makes the other parameters inaccessible.		
LoC	[Ovld Detection Thr.]	70 to 150%	110%
*	Overload detection threshold, as a % of the rated motor current [than the limit current in order for the function to work.	[Rated mot. current] (¬ [¬) page 86. The	his value must be less
()	than the limit current in order for the function to work.		
(1)			
5 r b	[Hysteresis Freq.Att.]	0 to 599 Hz	0.3 Hz
*	Maximum deviation between the frequency reference and the m	notor frequency, which defines steady sta	te operation.
O			
(1)	[Ovld.Proces.Mngmt]		[Freewheel] (4 E 5)
*	Behavior on switching to overload detection.		[i recurred] (32 3)
×			
9 E S	[Ignore] (n a): Detected fault ignored [Freewheel] (4 E 5): Freewheel stop		
rПР F5E			
FEO	[Overload T.B.Rest.]	0 to 6 min	0 min
*	This parameter cannot be accessed if [Ovld.Proces.Mngmt] (a	□ d L) is set to [Ignore] (□ □).	
	Minimum time permitted between an overload being detected ar In order to allow an automatic restart, the value of [Max. restart]	•	narameter by at least
()	one minute.	time (2 117) page 232 must exceed this	parameter by at least
(1)			
FLE-	[FAULT MANAGEMENT] (continued)		
LFF-	[FALLBACK SPEED]	To	
LFF	[Fallback speed]	0 to 599 Hz	0 Hz
E 1 1	Selection of the fallback speed.		
FLE-	[FAULT MANAGEMENT] (continued)		
F 5 E -	[RAMP DIVIDER]	I	1.
d∈F	[Ramp divider]	0 to 10	4
*	The ramp that is enabled ([Deceleration] (d E C) or [Deceleration] requests are sent.	tion 2] (d E 2)) is then divided by this co	efficient when stop
()	Value 0 corresponds to a minimum ramp time.		
(1)			

Code	Name / Description	Adjustment range	Factory setting
FLE-	[FAULT MANAGEMENT] (continue	d)	
d[,-	[DC INJECTION]		
ı d C	[DC inject. level 1]	0.1 to 1.41 In (2)	0.64 ln (2)
(1) (3)	OVERHEATING AND DAMAGE TO THE Verify that the connected motor is properly and time in order to avoid overheating and Failure to follow these instructions can	rated for the DC injection current to be a damage to the motor.	applied in terms of amount
	Level of DC injection braking current activated via	logic input or selected as stop mode.	
Ed i	[DC injection time 1]	0.1 to 30 s	0.5 s
(1) (3)	OVERHEATING AND DAMAGE TO THE Verify that the connected motor is properly and time in order to avoid overheating and Failure to follow these instructions can Maximum current injection time [DC inject. level 1 [DC inject. level 2] (rd C 2).	rated for the DC injection current to be a damage to the motor. result in equipment damage.	
1 d C 2	[DC inject. level 2]	0.1 In (2) to [DC inject. level 1](, d E) 0.5 ln (2)
* () (1) (3)	OVERHEATING AND DAMAGE TO THE Verify that the connected motor is properly and time in order to avoid overheating and Failure to follow these instructions can	rated for the DC injection current to be a damage to the motor.	applied in terms of amount
	Injection current activated by logic input or selected elapsed.	d as stop mode, once period of time [DC inje	ection time 1] (E d) has

Code	Name / Description	Adjustment range	Factory setting
ΕdC	[DC injection time 2]	0.1 to 30 s	0.5 s
		NOTICE	
(1) (3)	OVERHEATING AND DAMAGE TO THE N Verify that the connected motor is properly n and time in order to avoid overheating and of Failure to follow these instructions can re	ated for the DC injection current to be a lamage to the motor.	applied in terms of amount
	Maximum injection time [DC inject. level 2] (, d [a This parameter can be accessed if [Type of stop] (, , ,	

- (1) The parameter can also be accessed in the [SETTINGS] (5 E L -) and [APPLICATION FUNCT.] (F u n -) menus.
- (2) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.
- (3) These settings are independent of the [AUTO DC INJECTION] (# d [-) function.




These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

Communication

With integrated display terminal:

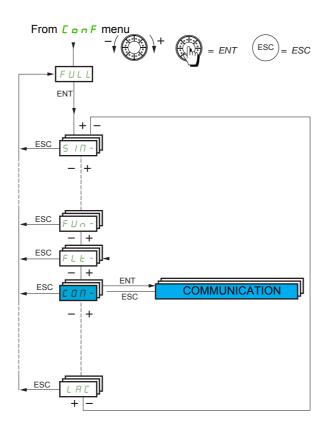

Code	Name / Description	Adjustment range	Factory setting
Full	[FULL] (continued)		
[- П -	[COMMUNICATION]		
ı C 5 -	[COM. SCANNER INPUT]		
	[Scan. IN1 address] (used for Fast Task of t	he communication scanner
пПЯ∣	[Scan. IN1 address]		3,201
	Address of the 1st input word.		
n N A 2	[Scan. IN2 address]		8,604
	Address of the 2nd input word.		
n ∏ A 3	[Scan. IN3 address]		0
	Address of the 3rd input word.		
пПЯЧ	[Scan. IN4 address]		0
	Address of the 4th input word.		
n N A S	[Scan. IN5 address]		0
	Address of the 5th input word.		
n Π A 6	[Scan. IN6 address]		0
	Address of the 6th input word.		
пПЯЛ	[Scan. IN7 address]		0
	Address of the 7th input word.		
n П Я В	[Scan. IN8 address]		0
	Address of the 8th input word.		

Code	Name / Description	Adjustment range	Factory setting
[- П -	[COMMUNICATION] (continued)		
o [5 -	[COM. SCANNER OUTPUT]		
	[Scan. Out1 address] (n [H I) to [Scan. Out4 address] (n [H I) could (see Modbus & CANopen® communication manual).	d be used for Fast Task of	the communication scanner
n C A I	[Scan.Out1 address]		8,501
	Address of the 1st output word.		
n C A 2	[Scan.Out2 address]		8,602
	Address of the 2nd output word.		L
n [Я Э	[Scan.Out3 address]		0
	Address of the 3rd output word.		
n С Я Ч	[Scan.Out4 address]		0
	Address of the 4th output word.		
n C A S	[Scan.Out5 address]		0
	Address of the 5th output word.		
n C A B	[Scan.Out6 address]		0
	Address of the 6th output word.		
n E A 7	[Scan.Out7 address]		0
	Address of the 7th output word.		
n C A B	[Scan.Out8 address]		0
	Address of the 8th output word.		
[₀ П -	[COMMUNICATION] (continued)		
Па I-	[MODBUS NETWORK]		
A d d	[Modbus Address]	[OFF] (a F F) to 247	[OFF] (p F F)
o F F -	[OFF] (o F F) 1 to 247		
ЯП□С	[Modbus add Com. C.]	[OFF] (• F F) to 247	[OFF] (a F F)
*			
a F F	[OFF] (o F F) 1 to 247		
E b r	[Modbus baud rate]		[19.2 Kbps] (/ 9 2)
	4 8 - 9 6 - 19 2 - 38 4 kbps on the integrated display terminal. 4800, 9600, 19200 or 38400 bauds on the graphic display terminal.		
Ł F o	[Modbus format]		[8-E-1] (<i>B E I</i>)
	8O1 - 8E1 - 8n1, 8n2		
E E o	[Modbus time out]	0.1 to 30 s	10.0 s
	0.1 to 30 s		
C ο Π Ι	[Mdb com stat]		
	[r0t0] (r D L D): Modbus no reception, no transmission = communication [r0t1] (r D L I): Modbus no reception, transmission [r1t0] (r I L D): Modbus reception, no transmission [r1t1] (r I L I): Modbus reception and transmission	idle	



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

Code	Name / Description	Adjustment range	Factory setting
[- П -	[COMMUNICATION] (continued)		
[no-	[CANopen]		
AdCo	[CANopen address]	[OFF] (• F F) to 127	[OFF] (o F F)
o F F -	[OFF] (o F F): OFF 1 to 127		
ЬДСо	[CANopen bit rate]		[250 kbps] (2 5 🛭)
125 250 500	[50 kbps] (5 0): 50,000 Bauds [125 kbps] (12 5): 125,000 Bauds [250 kbps] (2 5 0): 250,000 Bauds [500 kbps] (5 0 0): 500,000 Bauds [1 Mbps] (10): 1 MBauds		
Erlo	[Error code]	0 to 5	-
	Read-only parameter, cannot be modified.		
[₀ П -	[COMMUNICATION] (continued)		
[b d -	[COMMUNICATION CARD] See the specific documentation for the card used.		
LEF-	[FORCED LOCAL]		
FLo	[Forced local assign.]		[No] (n a)
L , I L , 6 L A , I L A , 2	Forced local mode is active when the input is at state 1. [Forced local assign.] (F L a) is forced to [No] (n a) if [Profile] (L H L [No] (n a): Function inactive [Li1] (L I): Logical input LI1 [Li6] (L 5): Logical input LI6 [LAI1] (L R I): Logical input AI1 [LAI2] (L R I 2): Logical input AI2 [OL01] (a L D I): Function blocks: Logical Output 01	「F) is set to [I/O profile]	(, a) page <u>154</u> .
	[OL10] (a L III): Function blocks: Logical Output 10 [Forced local Ref.]		[No] (np)
	Forced local reference source assignment.		[NO] (HB)
A . 3 A . 3 L C C	[No] (n p): Not assigned (control via the terminals with zero reference) [Al1] (H , I): Analog input [Al2] (H , 2): Analog input [Al3] (H , 3): Analog input [HMI] (L C C): Assignment of the reference and command to the graphi Reference: [HMI Frequency ref.] (L F r) page 50. Command: RUN/STOP/FWD/REV keys. [RP] (P ,): Pulse input	c display terminal or remo	te display terminal.
□ A O I 	[OA01] (a R D I): Function blocks: Analog Output 01		
	[OA10] (a F / D): Function blocks: Analog Output 10	0.1 to 20.5	10.0 s
FL⊕E ★	[Time-out forc. local] 0.1 to 30 s. This parameter can be accessed if [Forced local assign.] (F L a) is not Time delay before communication monitoring is resumed on leaving force.		10.0 \$



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

Access Level

See [Access Level] ($L \ \mbox{\it H} \ \mbox{\it L}$) page $\underline{280}$.

Interface (ItF)

What's in this Chapter?


This chapter contains the following topics:

Торіс	Page
Access Level (LAC)	280
Language (LnG)	282
Monitoring Configuration (MCF)	<u>283</u>
Display configuration (dCF)	<u>287</u>

ITF-

Access Level (LAC)

With integrated display terminal:

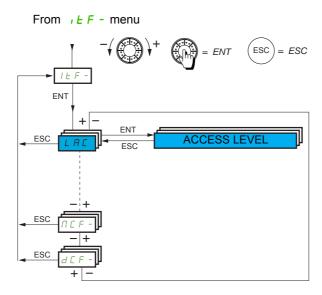

Code	Name / Description	Factory setting
ı E F -	[3 INTERFACE]	
LAC	[3.1 ACCESS LEVEL]	[Standard] (5 <i>E d</i>)
()		
<i>ь</i> я s	[Basic] (b # 5): Limited access to [SIMPLY START] (5 , IT -), [1.2 MONITORING] (IT a p -), [SETTINGS] (5 E b -), [FACTORY SETTINGS] (F L 5 -), [5 PASSWORD] (L a d) and [3.1 ACCESS LEVEL] (L H L -) menus. Only one function can be assigned to each input.	
Adu	[Standard] (5 ½ d): Access to all menus on the integrated display terminal. Only one function can be assigned to each input. [Advanced] (# d u): Access to all menus on the integrated display terminal. Several functions can be assigned to each input. [Expert] (E P r): Access to all menus on the integrated display terminal and access to additional parameters. Several functions can be assigned to each input.	

()

Parameter that can be modified during operation or when stopped.


Comparison of the menus that can be accessed on the graphic display terminal/integrated display terminal

				Ac	ces	s le	ve
[1 DRIVE MENU] (dr ,-)							
	1.1 SPEED REFERENCE] (r E F-)						
<u>l</u> '	1.2 MONITORING] (Пап-)						
		ПП□ - (Monitoring motor)					
		I = Π - (I/O MAP) 5 F F - (Monitoring Safety)					
		, , ,	lea)				
	∏ F b - (Monitoring Function Blocks)		4				
		[[[Communication Map)					
		PEL - (Monitoring Power time)					
		FLr - (Alarms) (1)					
		5 5 <i>E</i> - (Other state) (1)					
		Lod - (Password)					
r.	1.3 CONFIGURATION] ([a n F)	L D D (I assword)		5			
L	John John Hold (L Bir F)	ПЧПп - (My Menu)		. b A			
		F E 5 - (Factory Settings)		Basic			
		Full (Full)		- 60			
		()	5 , Π - (Simply Start)				
			5 E L - (Settings)				
			F b Π - (Function Blocks)		P 7 5	2	
[2 IDENTIFICATION] (a , d -)	(1)		Biodici		ard (ВΑ	
[3 INTERFACE] (, Ł F -) (1)	((')				Standard 5	ced	
	3.1 ACCESS LEVEL] (L FI [St	Advanced	0
	3.2 LANGUAGE] (L n [])					Ao	t out
[4 OPEN / SAVE AS] (+ r A -)							نَا
[5 PASSWORD] ([a d -) (1)	<u> </u>						
A	single function can be assigned to	each input.					
[1 DRIVE MENU] (dr 1-) [1	1.2 MONITORING] (Поп-)	d L - (Diagnostics)			<u>'</u>		
[1	1.3 CONFIGURATION] ([a n F)	FuLL (Full)					
			d r □ - (Motor Control)				
			Outputs Configuration)				
			[L L - (Command)				
			Fun - (Application function)				
			F L E - (Fault Management)				
			Communication)				
[3 INTERFACE] (, Ł F -) [3 (1)	3.3 MONITORING CONFIG.] (ПС	F -)	,				
	single function can be assigned to	each input.					
	3.4 DISPLAY CONFIG.] (d [F-) (1					J	
	Several functions can be assigned to	o each input.					
Expert parameters							
S	Several functions can be assigned to	o each input.					

⁽¹⁾ Can be accessed only with graphic display terminal.

ITF-

Language (LnG)

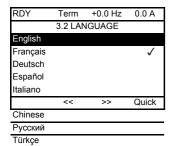

When only one selection is possible, the selection made is indicated by \checkmark Example: Only one language can be chosen.


Code	Name / Description	Factory setting		
LnG	[3.2 LANGUAGE]	[Language 0] (L n [] [])		
()	Current language index.			
L n G D	[Language 0] (L n [D)			
L n G 9	 [Language 9] (<i>L</i> n G 9)			

()

Parameter that can be modified during operation or when stopped.

Monitoring Configuration (MCF)

This menu can only be accessed with the graphic display terminal.

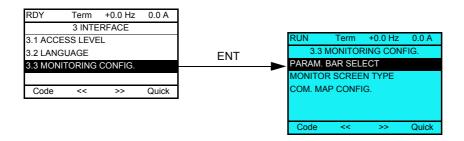

This can be used to configure the information displayed on the graphic display screen during operation.



[PARAM. BAR SELECT]: Selection of 1 to 2 parameters displayed on the top line (the first 2 cannot be modified).

[MONITOR SCREEN TYPE]: Selection of parameters displayed in the centre of the screen and the display mode (digital values or bar graph format).


[COM. MAP CONFIG.]: Selection of the words displayed and their format.

ITF- > MCF-

Code	Name / Description
ПС F -	[3.3 MONITORING CONFIG]

Name / Description			
[PARAM. BAR SELECT]			
[PARAM. BAR SELE [AI1] [AI2] [AI3] [AO1] [ETA state world] [Alarm groups] [Frequency ref.] [Output frequency] [Motor current] [Motor speed] [Motor voltage] [Motor torque] [Mains voltage] [Motor thermal state] [Consumption] [Run time] [Power on time] [IGBT alarm counter] [Min. freq time] [PID reference] [PID feedback] [PID error] [PID Output] [Config. active] [Utilised param. set]	in V in V in Ma in V in Hz: parameter displayed in factory configuration in Hz in A: parameter displayed in factory configuration in rpm in V in W as a % in V as a % in W as a % in whor kWh depending on drive rating in hours (length of time the motor has been switched on) in hours (length of time the drive has been switched on) in seconds (total time of IGBT overheating alarms) in seconds as a % as		
	[AI1] [AI2] [AI3] [AO1] [ETA state world] [Alarm groups] [Frequency ref.] [Output frequency] [Motor current] [Motor speed] [Motor voltage] [Motor torque] [Mains voltage] [Motor thermal state] [Drv. thermal state] [Consumption] [Run time] [Power on time] [IGBT alarm counter] [Min. freq time] [PID reference] [PID reference] [PID error] [PID Output] [Config. active] [Utilised param. set] Select the parame deselected using 1 or 2 parameters Example:		

Monitor screen type

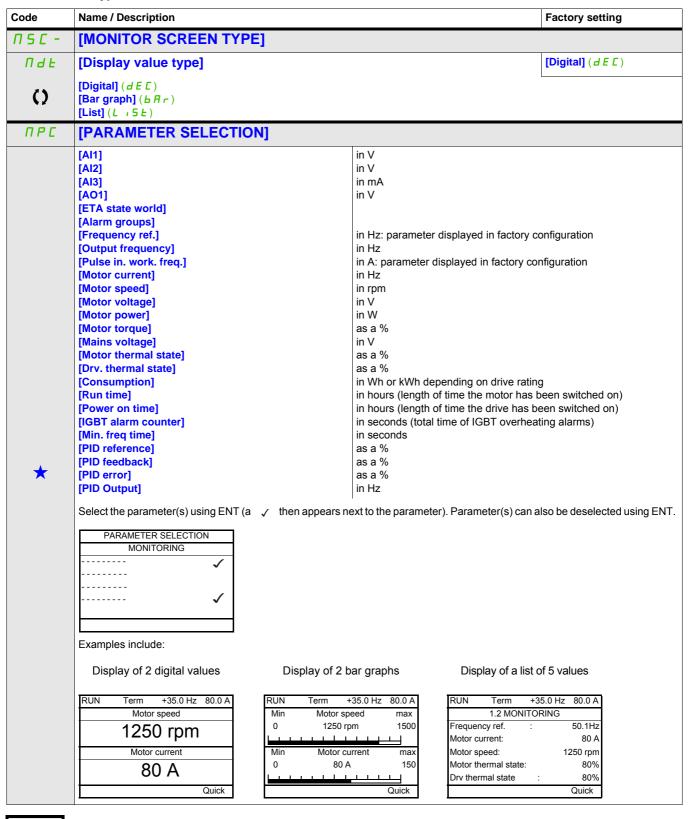



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

()

Parameter that can be modified during operation or when stopped.

ITF- > MCF- > ADL-

Communication map configuration


Code	Name / Description	Factory setting
AdL-	[COM. MAP CONFIG.]	
ı A d I	[Word 1 add. select.]	0
()	Select the address of the word to be displayed by pressing the << and >> (F2 and F3) keys and rotating the	jog dial.
FAdl	[Format word 1]	[Hex] (<i>H E</i>)
()	Format of word 1.	
	[Hex] (HE) [Signed] (5 , G) [Unsigned] (n 5 G)	
1842	[Word 2 add. select.]	0
()	Select the address of the word to be displayed by pressing the << and >> (F2 and F3) keys and rotating the	jog dial.
FR42	[Format word 2]	[Hex] (<i>H E</i>)
()	Format of word 2.	
	[Hex] (HE) [Signed] (5 , G) [Unsigned] (a 5 G)	
ı A d 3	[Word 3 add. select.]	0
()	Select the address of the word to be displayed by pressing the << and >> (F2 and F3) keys and rotating the	jog dial.
FRd3	[Format word 3]	[Hex] (<i>H E</i>)
()	Format of word 3.	
	[Hex] (HE) [Signed] (5 , G) [Unsigned] (a 5 G)	
1 A A 4	[Word 4 add. select.]	0
()	Select the address of the word to be displayed by pressing the << and >> (F2 and F3) keys and rotating the	jog dial.
FAd4	[Format word 4]	[Hex] (HE)
O	Format of word 4.	
	[Hex] (HE) [Signed] (5 , G) [Unsigned] (a 5 G)	
	Then, it will be possible to view the selected words in the [COMMUNICATION MAP] submenu of the [1.2 M Example:	ONITORING] menu.
	RUN Term +35.0 Hz 80.0 A COMMUNICATION MAP W3141: F230 Hex <> >> Quick	

()

Parameter that can be modified during operation or when stopped.

Display configuration (dCF)

This menu can only be accessed with the graphic display terminal. It can be used to customize parameters or a menu and to access parameters.

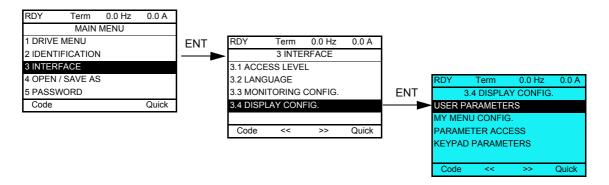


- USER PARAMETERS: Customization of 1 to 15 parameters.
- MY MENU: Creation of a customized menu.
- PARAMETER ACCESS: Customization of the visibility and protection mechanisms of menus and parameters.
- KEYPAD PARAMETERS: Adjustment of the contrast and stand-by mode of the graphic display terminal (parameters stored in the terminal rather than in the drive).

Code	Name / Description
dCF-	[3.4 DISPLAY CONFIG]

User parameters

If [Return std name] is set to [Yes], the display reverts to standard but the custom settings remain stored.

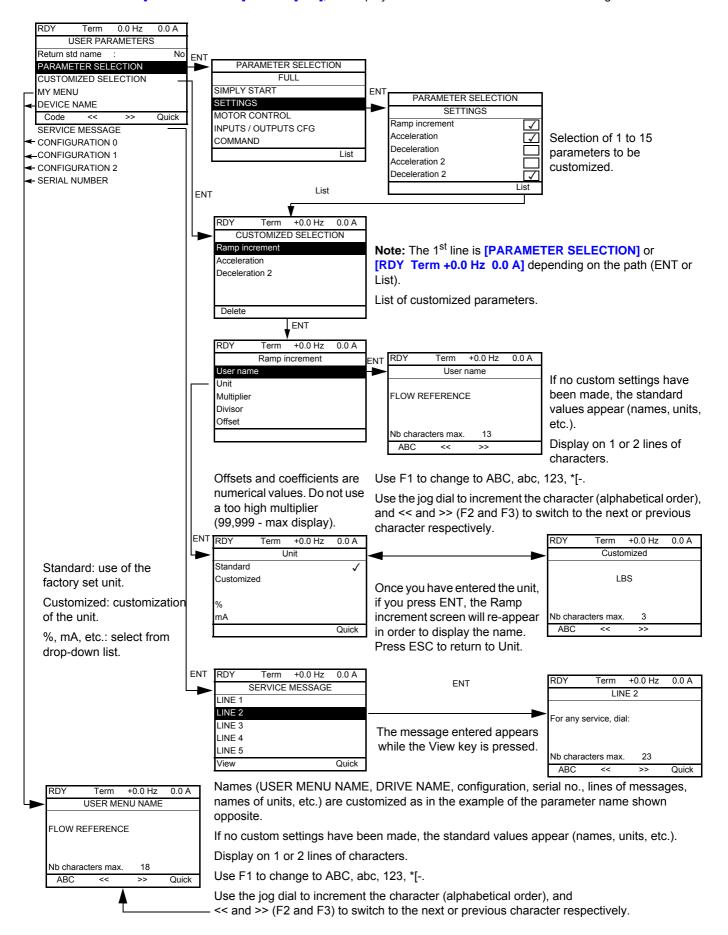

Parameters described in this page can be accessed by:


ITF- > DCF- > CUP-

Code	Name / Description Factory setting			
[u P -	[USER PARAMETERS]			
G 5 P	[Return std name]	[No] (n o)		
()	Display standard parameters instead of customised ones.			
л о У Е 5	[No] (n a) [Yes] (4 E 5)			
ПУПп	[MY MENU]			
PAn	[DEVICE NAME]			
5Er-	[SERVICE MESSAGE]			
SNLOI	[LINE 1]			
5 N L D 2	LINE 2]			
5 N L D 3	[LINE 3]			
5 N L D 4	[LINE 4]			
5 N L D S	[LINE 5]			
[Fn[]]	[CONFIGURATION 0]			
CFn02	[CONFIGURATION 1]			
C F n D 3	[CONFIGURATION 2]			
P 5 n	[SERIAL NUMBER]			

()


Parameter that can be modified during operation or when stopped.

My Menu config.

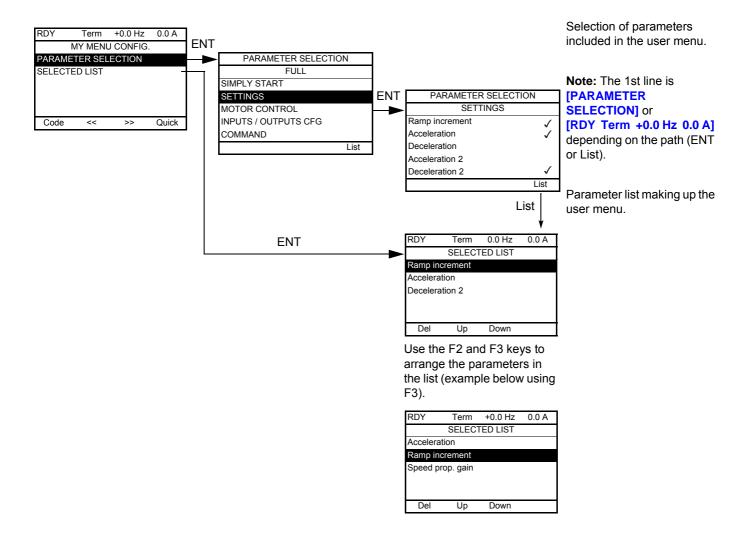

Code	Name / Description
ПУС-	[MY MENU CONFIG.]

Parameter access

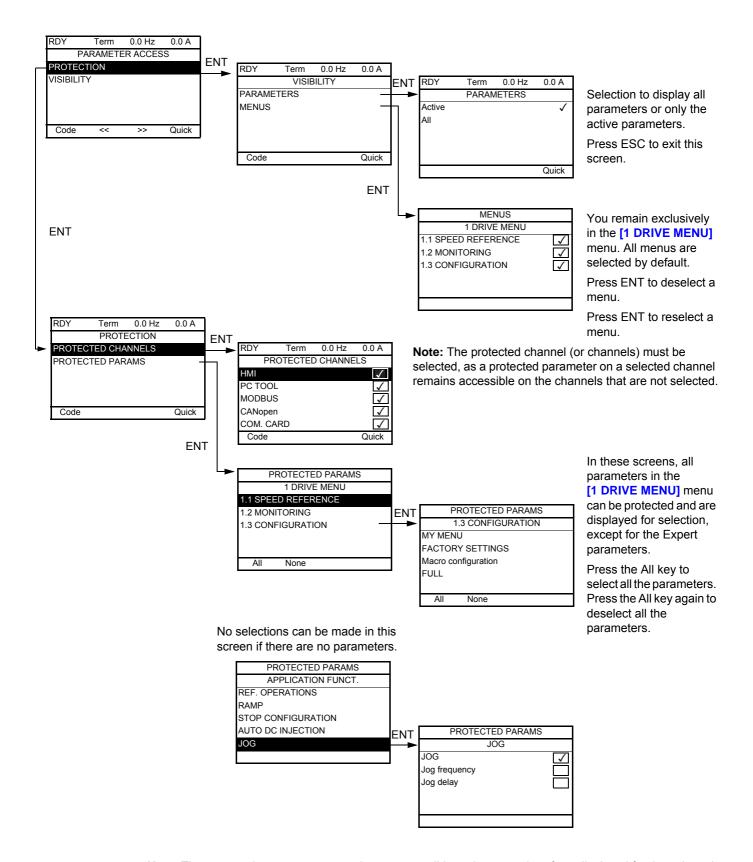

Note: The protected parameters are no longer accessible and are not, therefore, displayed for the selected channels.

ITF- > DCF- > PAC- > PRO- > PCD-

Code	Name / Description Factory setting			
PAC-	[PARAMETER ACCESS]			
Pro-	[PROTECTION]			
PCd-	[PROTECTED CHANNELS]			
P 5 N d b C A n	[HMI] (C p n): Graphic display terminal or remote display terminal [PC Tool] (P 5): PC Software [Modbus] (N d b): Integrated Modbus [CANopen] (C R n): Integrated CANopen® [Com. card] (n E b): Communication card (if inserted)			
u 15-	[VISIBILITY]			
Pu 15	[PARAMETERS] [Active] (# [L)			
()	Parameter visibility: only active ones, or all parameters.			
	[Active] (ACE) [AII] (ALL)			


()

Parameter that can be modified during operation or when stopped.

Parameters described in this page can be accessed by:

ITF- > DCF- > CNL-

Keypad parameters

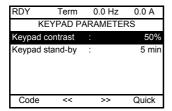


Code	Name / Description Adjustment range Factory setting		Factory setting
[nL-	[KEYPAD PARAMETERS]		
Cr5Ł	[Keypad contrast] 0 to 100% 50%		
()	Contrast of the keypad.		
СБЬУ	[Keypad stand-by]	[No] (n a) to 10 min	5 min
()	Graphic keypad standby delay.		
no	[No] (¬ ¬): No		


Parameter that can be modified during operation or when stopped.

Open / Save as (trA)

This menu can only be accessed with the graphic display terminal.

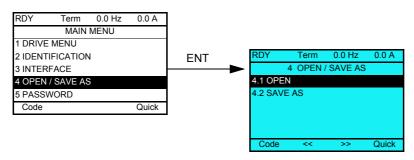

[4.1 OPEN]: To download one of the 4 files from the graphic display terminal to the drive.

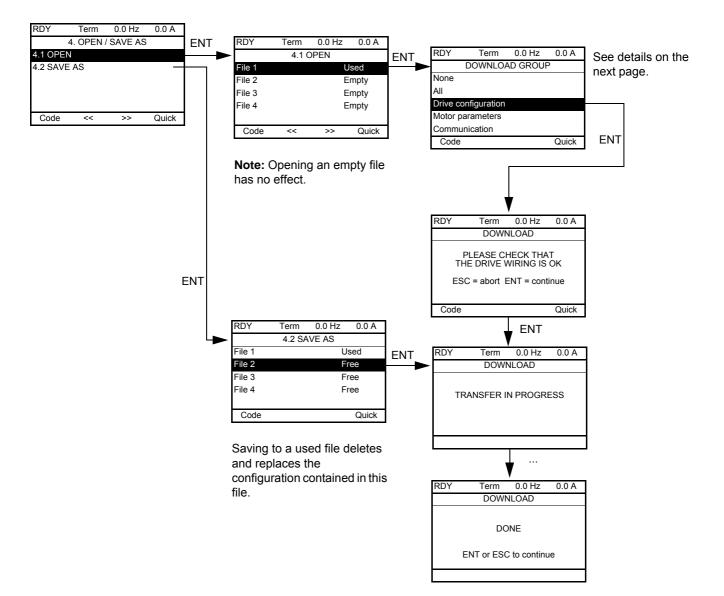

[4.2 SAVE AS]: To download the current drive configuration to the graphic display terminal.

Various messages may appear when the download is requested:


- [TRANSFER IN PROGRESS]
- [DONE]
- · Error messages if download not possible
- [Motor parameters are NOT COMPATIBLE. Do you want to continue?]: In this case, the download is possible, but the parameters will be restricted.

DOWNLOAD GROUP


[None]:		No parameters	
[AII]:		All parameters in all menus The entire [1 DRIVE MENU] without [COMMUNICATION]	
[Drive configuration]:			
[Motor parameters]:	[Rated motor volt.] (u n 5)	In the [MOTOR CONTROL] (dr [-) menu	
	[Rated motor freq.] (F r 5)		
	[PSI align curr. max] (n [r)		
	[Rated motor speed] (n 5 P)		
	[Motor 1 Cosinus phi] ([a 5)		
	[Rated motor power] (¬ P ¬)		
	[Motor param choice] (ПРС)		
	[Tune selection] (5 Ł u n)		
	[Mot. therm. current] (, Ł H)		
	[IR compensation] (u F r)		
	[Slip compensation] (5 L P)		
	[Cust stator resist.] (r 5 A)		
	[Lfw] (<i>L F F</i> I)		
	[Cust. rotor t const.] (E r A)		
	[Nominal I sync.] (n [r 5)		
	[Nom motor spdsync] (a 5 P 5)		
	[Pole pairs] (PPn5)		
	[Syn. EMF constant] (PH5)		
	[Autotune L d-axis] (L d 5)		
	[Autotune L q-axis] (L 95)		
	[Nominal freq sync.] (F r 5 5)		
	[Cust. stator R syn] (r 5 # 5)		
	[Motor torque] (£ 95)		
	[U1] (u I)		
	[F1] (F I)		
	[U2] (u 2)		
	[F2] (F 2)		
	[U3] (u 3)		
	[F3] (F 3)		
	[U4] (<u>u</u> 4)		
	[F4] (F Y)		
	[U5] (u 5)		
	[F5] (F 5)		
	The motor parameters that can be accessed in [Expert] (<i>EPr</i>) mode, page <u>261</u> .		
	[Mot. therm. current] (, E H)	In the [SETTINGS] (5 E L -) menu	
[Communication]:		All the parameters in the [COMMUNICATION] menu	

Password (COd)

With graphic display terminal

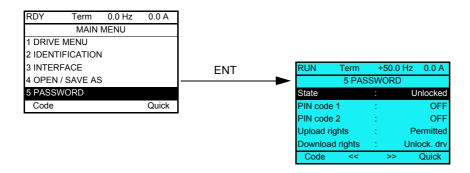


With integrated display terminal

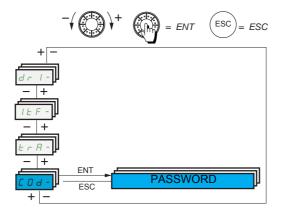

Enables the configuration to be protected with an access code or a password to be entered in order to access a protected configuration.

Example with graphic display terminal:

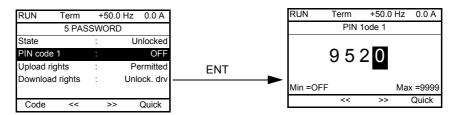

- The drive is unlocked when the PIN codes are set to [Unlocked] (F F) (no password) or when the correct code has been entered. All menus are visible.
- Before protecting the configuration with an access code, you must:
 - Define the [Upload rights] (uLr) and [Download rights] (dLr).
 - Make a careful note of the code and keep it in a place where you will be able to find it.

- The drive has 2 access codes, enabling 2 access levels to be set up:
 - PIN code 1 is a public unlock code: 6969.
 - PIN code 2 is an unlock code known only to Schneider Electric Product Support. It can only be accessed in [Expert] (EPr) mode.
 - Only one PIN1 or PIN2 code can be used, the other must remain set to [OFF] (F F).

Note: When the unlock code is entered, the user access code appears.

The following items are access-protected:

- Return to factory settings ([FACTORY SETTINGS] (F [5) menu.
- The channels and parameters protected by the [MY MENU] (" ש ח ח) as well as the menu itself.
- The custom display settings ([3.4 DISPLAY CONFIG.] (d [F) menu).


Code	Name / Description Adjustment range		Factory setting
Cod-	[5 PASSWORD]		
C 5 Ł	[State]	[Unlocked] (u L [
	Information parameter, cannot be modified.		
LC	[Locked] (L C): The drive is locked by a password [Unlocked] (L C): The drive is not locked by a password		
[o d	[PIN code 1]	[OFF] (• F F) to 9,999	[OFF] (a F F)
	1st access code. The value [OFF] (or F) indicates that no password has been set [Unlocked] (or L L). The value [ON] (or n) indicates that the drive is protected and an access code must be entered in order to unlock it. Once the correct code has been entered, it remains on the display and the drive is unlocked until the next time the power supply is disconnected. PIN code 1 is a public unlock code: 6969.		
C o d 2	[PIN code 2]	[OFF] (<i>a F F</i>) to 9,999	[OFF] (o F F)
	indicates that the drive is protected and an access code must be entered in entered, it remains on the display and the drive is unlocked until the next tim PIN code 2 is an unlock code known only to Schneider Electric Product Sup When [PIN code 2] (ne the power supply is disc port. ING] (connected. e only one visible. Then if
uLr	[Upload rights]		[Permitted] (uLrD)
	Reads or copies the current configuration to the drive.		
uLr I			
dLr	[Download rights]		[Unlock. drv] (dLr I)
	Writes the current configuration to the drive or downloads a configuration to	the drive.	
dLr0 dLr1	which is the same as the access code for the configuration to be downloaded. [Unlock. drv] (d L r I): A configuration file can be downloaded to the drive or a configuration in the drive can be modified if the drive is unlocked (access code entered) or is not protected by an access code.		

Multipoint Screen

Multipoint Screen

Communication is possible between a graphic display terminal and a number of drives connected on the same bus. The addresses of the drives must be configured in advance in the **[COMMUNICATION]** ($\[\ \ \ \ \] \]$ menu using the **[Modbus Address]** ($\[\ \ \] \]$ parameter, page $\[\ \]$ parameter, page $\[\ \]$

When a number of drives are connected to the same graphic display terminal, it automatically displays the following screens:

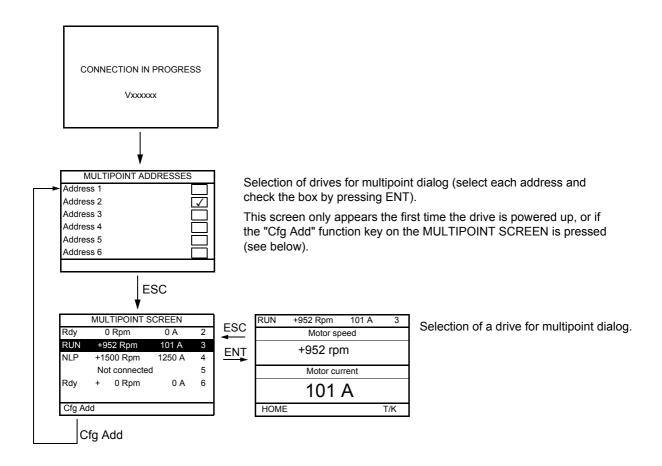

In multipoint mode, the command channel is not displayed. From left to right, the state, then the 2 selected parameters, and finally the drive address appear.

All menus can be accessed in multipoint mode. Only drive control via the graphic display terminal is not authorized, apart from the Stop key, which locks all the drives.

If there is an error on a drive, this drive is displayed.

Maintenance and Diagnostics



What's in this Part?

This part contains the following chapters:

Chapter	Chapter Name		
11	Maintenance	<u>305</u>	
12	Diagnostics and Troubleshooting		

Maintenance



Limitation of Warranty

The warranty does not apply if the product has been opened, except by Schneider Electric services.

Servicing

CAUTION

RISK OF DAMAGE TO THE DRIVE

Adapt the following recommendations according to the environment conditions: temperature, chemical, dust. Failure to follow these instructions can result in equipment damage.

It is recommended to do the following in order to optimize continuity of operation.

Environment	Part concerned	Action	Periodicity
Knock on the product Housing - control block (led - display)		Check the drive visual aspect At least each year	
Corrosion	Terminals - connector - screws - EMC plate	Inspect and clean if required	
Dust	Terminals - fans - blowholes		
Temperature	Around the product	Check and correct if required	
Cooling	Fan	Check the fan operation	
		Replace the fan	After 3 to 5 years, depending on the operating conditions
Vibration	Terminal connections	Check tightening at recommended torque	At least each year

Note: The fan operation depends on the drive thermal state. The drive may be running and the fan not.

Spares and repairs

Serviceable product. Please refer to your Customer Care Centre.

Long time storage

If the drive was not connected to mains for an extended period of time, the capacitors must be restored to their full performance before the motor is started. See page 39.

Fan replacement

It is possible to order a new fan for the ATV320 maintenance, see the commercial references on www.schneider-electric.com.

Fans may continue to run for a certain period of time even after power to the product has been disconnected.

CAUTION

RUNNING FANS

Verify that fans have come to a complete standstill before handling them.

Failure to follow these instructions can result in equipment damage.

Diagnostics and Troubleshooting

What's in this Chapter?

This chapter contains the following topics:

Торіс	Page
Error code	<u>308</u>
Clearing the detected fault	<u>308</u>
Fault detection codes which require a power reset after the detected fault is cleared	<u>309</u>
Fault detection codes that can be cleared with the automatic restart function after the cause has disappeared	<u>311</u>
Fault detection codes that are cleared as soon as their cause disappears	<u>314</u>
Option card changed or removed	<u>314</u>
Control block changed	<u>314</u>
Fault detection codes displayed on the remote display terminal	<u>315</u>

A A DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

Read and understand the instructions in "Safety Information" chapter before performing any procedure in this chapter.

Failure to follow these instructions will result in death or serious injury.

Error code

- If the display does not light up, check the power supply to the drive.
- The assignment of the Fast stop or Freewheel functions will help to prevent the drive starting if the corresponding logic inputs are not powered up. The ATV320 then displays [Freewheel] (n 5 L) in freewheel stop and [Fast stop] (F 5 L) in fast stop. This is normal since these functions are active at zero so that the drive will be stopped if there is a wire break.
- If an input is assigned to the limit switch function and this input is at zero, the drive can only be started up by sending a command for the opposite direction (see page <u>224</u>).
- If the reference channel or command channel is assigned to a communication bus, when the power supply is connected, the drive will display [Freewheel] (n 5 £) and remain in stop mode until the communication bus sends a command.

Code	Name / Description	
4 G E -	[DIAGNOSTICS]	
	This menu can only be accessed with the graphic display terminal. It displays detected faults and their cause in plain text and can be used to carry out tests, see page <u>64</u> .	

Clearing the detected fault

In the event of a non resettable detected fault:

- Disconnect all power, including external control power that may be present.
- · Lock all power disconnects in the open position.
- Wait 15 minutes to allow the DC bus capacitors to discharge (the drive LEDs are not indicators of the absence of DC bus voltage).
- Measure the voltage of the DC bus between the PA/+ and PC/– terminals to ensure that the voltage is less than 42 Vdc.
- If the DC bus capacitors do not discharge completely, contact your local Schneider Electric representative. Do not repair or operate the drive.
- Find and correct the detected fault.
- Restore power to the drive to confirm the detected fault has been rectified.

In the event of a resettable detected fault, the drive can be reset after the cause is cleared:

- By switching off the drive until the display disappears completely, then switching on again.
- Automatically in the scenarios described for the [AUTOMATIC RESTART] (# £ r -) function, page 252.
- By means of a logic input or control bit assigned to the **[FAULT RESET]** (r 5 £ -) function, page <u>251</u>.
- By pressing the STOP/RESET key on the graphic display keypad if the active channel command is the HMI (see [Cmd channel 1] (L d I) page 155).

Fault detection codes which require a power reset after the detected fault is cleared

The cause of the detected fault must be removed before resetting by turning off and then back on.

H S F, b r F, S p F and b r F detected faults can also be cleared remotely by means of a logic input or control bit ([Fault reset] (r S F) parameter, page 251).

Detected Fault	Name	Probable cause	Remedy
AnF	[Load slipping]	The difference between the output frequency and the speed feedback is not correct.	 Check the motor, gain and stabillity parameters. Add a braking resistor. Check the size of the motor/drive/load. Check the encoder's mechanical coupling and its wiring. Check the setting of parameters
A 5 F	[Angle Error]	This occurs during the phase-shift angle measurement, if the motor phase is disconnected or if the motor inductance is too high.	Check the motor phases and the maximum current allowed by the drive.
br F	[Brake feedback]	The brake feedback contact does not match the brake logic control. The brake does not stop the motor quickly enough (detected by measuring the speed on the "Pulse input" input).	Check the feedback circuit and the brake logic control circuit. Check the mechanical state of the brake. Check the brake linings.
[rFI	[Precharge]	Charging relay control detected fault or charging resistor damaged.	 Turn the drive off and then turn on again. Check the internal connections. Contact Schneider Electric Product Support.
EEFI	[Control Eeprom]	Internal memory detected fault, control block.	Check the environment (electromagnetic compatibility). Turn off, reset, return to factory settings.
EEF2	[Power Eeprom]	Internal memory detected fault, power card.	Contact Schneider Electric Product Support.
FCFI	[Out. contact. stuck]	The output contactor remains closed although the opening conditions have been met.	Check the contactor and its wiring. Check the feedback circuit.
HdF	[IGBT desaturation]	Short-circuit or grounding at the drive output.	Check the cables connecting the drive to the motor, and the motor insulation.
ıLF	[internal com. link]	Communication interruption between option card and drive.	Check the environment (electromagnetic compatibility). Check the connections. Replace the option card. Contact Schneider Electric Product Support.
in F. I	[Rating error]	The power card is different from the card stored.	Check the reference of the power card.
inF2	[Incompatible PB]	The power card is incompatible with the control block.	Check the reference of the power card and its compatibility.
ınF3	[Internal serial link]	Communication interruption between the internal cards.	Check the internal connections. Contact Schneider Electric Product Support.
10 F 4	[Internal-mftg zone]	Internal data inconsistent.	Recalibrate the drive (performed by Schneider Electric Product Support).
10 F B	[Internal - fault option]	The option installed in the drive is not recognized.	Check the reference and compatibility of the option. Check that the option is well inserted into the ATV320.
ınF9	[Internal- I measure]	The current measurements are incorrect.	Replace the current sensors or the power card. Contact Schneider Electric Product Support.
ın F A	[Internal-mains circuit]	The input stage is not operating correctly.	Contact Schneider Electric Product Support.
infb	[Internal- th. sensor]	The drive temperature sensor is not operating correctly.	Replace the drive temperature sensor. Contact Schneider Electric Product Support.
INFE	[internal- CPU]	Internal microprocessor detected fault.	Turn off and reset. Contact Schneider Electric Product Support.
SAFF	[Safety fault]	Debounce time exceeded.SS1 threshold exceeded.Wrong configuration.SLS type overspeed detected.	Check the safety functions configuration. Check the ATV320 Integrated safety Functions manual Contact Schneider Electric Product Support.

Detected Fault	Name	Probable cause	Remedy
5 a F	[Overspeed]	Instability or driving load too high.	 Check the motor, gain and stability parameters. Add a braking resistor. Check the size of the motor/drive/load. Check the parameters settings for the [FREQUENCY METER] (F 9 F -) function page 266, if it is configured.
5 P F	[Speed fdback loss]	Signal on "Pulse input" missing, if the input is used for speed measurement. Encoder feedback signal missing	 Check the wiring of the input cable and the detector used. Check the configuration parameters of the encoder. Check the wiring between the encoder and the drive. Check the encoder.

Fault detection codes that can be cleared with the automatic restart function after the cause has disappeared

These detected faults can also be cleared by turning on and off or by means of a logic input or control bit ([Fault reset] (r = 5F) parameter page 251).

Detected Fault	Name	Probable cause	Remedy						
blf	[Brake control]	 Brake release current not reached. Brake engage frequency threshold [Brake engage freq] (b E n) only regulated when brake logic control is assigned. 	 Check the drive/motor connection. Check the motor windings. Check the [Brake release I FW] ('b') and [Brake release I Rev] ('r' d) settings page 194. Apply the recommended settings for [Brake engage freq] (b E n). 						
[nF	[Com. network]	Communication interruption on communication card.	Check the environment (electromagnetic compatibility). Check the wiring. Check the time-out. Replace the option card. Contact Schneider Electric Product Support.						
CoF	[CANopen com.]	Communication interruption on the CANopen® bus.	Check the communication bus. Check the time-out. Refer to the CANopen® User's manual.						
EPF I	[External flt-Ll/Bit]	 Event triggered by an external device, depending on user. 	Check the device which caused the triggering and reset.						
EPF2	[External fault com.]	 Event triggered by a communication network. 	Check for the cause of the triggering and reset.						
FBES	[FB stop flt.]	• Function blocks have been stopped while motor was running.	• Check [Stop FB Stop motor] (F b 5 П) configuration.						
FCF2	[Out. contact. open.]	The output contactor remains open although the closing conditions have been met.	Check the contactor and its wiring.Check the feedback circuit.						
LCF	[input contactor]	• The drive is not turned on even though [Mains V. time out] (L [L) has elapsed.	Check the contactor and its wiring.Check the time-out.Check the supply mains/contactor/drive connection.						
LFF3	[Al3 4-20mA loss]	Loss of the 4-20 mA reference on analog input Al3.	Check the connection on the analog inputs.						
o b F	[Overbraking]	Braking too sudden or driving load.Supply voltage too high.	 Increase the deceleration time. Install a braking resistor if necessary. Activate the [Dec ramp adapt.] (br R) function page 172, if it is compatible with the application. Check the supply voltage. 						
o C F	[Overcurrent]	 Parameters in the [SETTINGS] (5 E L -) and [MOTOR CONTROL] (dr [-) menus are not correct. Inertia or load too high. Mechanical locking. 	 Check the parameters. Check the size of the motor/drive/load. Check the state of the mechanism. Decrease [Current limitation] (L). Increase the switching frequency. 						
o H F	[Drive overheat]	Drive temperature too high.	Check the motor load, the drive ventilation and the ambient temperature. Wait for the drive to cool down before restarting.						
οLC	[Proc. overload fit]	Process overload.	Check and remove the cause of the overload. Check the parameters of the [PROCESS OVERLOAD] (a L d -) function, page 272.						
o L F	[Motor overload]	Triggered by excessive motor current.	Check the setting of the motor thermal protection, check the motor load. Wait for the motor to cool down before restarting.						
oPF I	[1 output phase loss]	Loss of one phase at drive output.	Check the connections from the drive to the motor.						

Detected Fault	Name	Probable cause	Remedy						
oPF2	[3 motor phase loss]	Motor not connected or motor power too low. Output contactor open. Instantaneous instability in the motor current.	• If an output contactor is being used, set [Output Phase Loss] (P L) to [Output cut] (P E), page						
o 5 F	[Mains overvoltage]	Supply voltage too high. Disturbed mains supply.	Check the supply voltage.						
o E F L	[LI6=PTC overheat]	Overheating of PTC probes detected on input LI6.	 Check the motor load and motor size. Check the motor ventilation. Wait for the motor to cool before restarting. Check the type and state of the PTC probes. 						
PEFL	[LI6=PTC probe]	PTC probe on input LI6 open or short-circuited.	Check the PTC probe and the wiring between it and the motor/drive.						
SCF I	[Motor short circuit]	Short-circuit or grounding at the drive output.	 Check the cables connecting the drive to the motor, and the motor insulation. Reduce the switching frequency. Connect chokes in series with the motor. Check the adjustment of speed loop and brake. Increase the [Time to restart] (£ £ r), page 101. Increase the switching frequency. 						
5 <i>CF3</i>	[Ground short circuit]	Significant earth leakage current at the drive output if several motors are connected in parallel.	 Check the cables connecting the drive to the motor, and the motor insulation. Reduce the switching frequency. Connect chokes in series with the motor. Check the adjustment of speed loop and brake. Increase the [Time to restart] (E E r), page 101. Reduce the switching frequency. 						
5 C F 4	[IGBT short circuit]	Power component detected fault.	Contact Schneider Electric Product Support.						
5 C F S	[Motor short circuit]	Short-circuit at drive output.	Check the cables connecting the drive to the motor, and the motor's insulation. Contact Schneider Electric Product Support.						
SLF I	[Modbus com.]	Communication interruption on the Modbus bus.	Check the communication bus. Check the time-out. Refer to the Modbus User's manual.						
5 L F 2	[PC com.]	Communication interruption with PC Software.	Check the PC Software connecting cable. Check the time-out.						
5 L F 3	[HMI com.]	Communication interruption with the graphic display terminal or remote display terminal.	Check the terminal connection Check the time-out.						
5 5 F	[Torque/current lim]	Switch to torque or current limitation.	Check if there are any mechanical problems. Check the parameters of [TORQUE LIMITATION] (L a L -) page 216 and the parameters of the [TORQUE OR I LIM. DETECT.] (L ı d -), page 264.						
Ł JF	[IGBT overheat]	Drive overheated.	Check the size of the load/motor/drive. Reduce the switching frequency. Wait for the motor to cool before restarting.						

Detected Fault	Name	Probable cause	Remedy
EnF	[Auto-tuning]	 Special motor or motor whose power is not suitable for the drive. Motor not connected to the drive. Motor not stopped 	 Check that the motor/drive are compatible. Check that the motor is present during auto-tuning. If an output contactor is being used, close it during auto-tuning. Check that the motor is stopped during tune operation.
uLF	[Proc. underload Flt]	Process underload.	 Check and remove the cause of the underload. Check the parameters of the [PROCESS UNDERLOAD] (u L d -) function, page 270.

Fault detection codes that are cleared as soon as their cause disappears

Detected Fault	Name	Probable cause	Remedy						
C F F	[Incorrect config.]	Option card changed or removed.	Check that there are no card errors. In the event of the option card being changed/removed deliberately, see the remarks below.						
		Control block replaced by a control block configured on a drive with a different rating.	Check that there are no card errors. In the event of the control block being changed deliberately, see the remarks below.						
		The current configuration is inconsistent.	• Return to factory settings or retrieve the backup configuration, if it is valid (see page <u>81</u>).						
CF 12	[Invalid config.]	Invalid configuration. The configuration loaded in the drive via the bus or communication network is inconsistent.	Check the configuration loaded previously. Load a compatible configuration.						
C S F	[Ch. Sw. fault]	Switch to not valid channels.	Check the function parameters.						
dLF	[Dynamic load fault]	Abnormal load variation.	Check that the load is not blocked by an obstacle. Removal of a run command causes a reset.						
FBE	[FB fault]	Function blocks error.	• See [FB Fault] (F b F L) for more details.						
HEF	[Cards pairing]	• The [CARDS PAIRING] (PP , -) function page 269 has been configured and a drive card has been changed.	 In the event of a card error, reinsert the original card. Confirm the configuration by entering the [Pairing password] (PP i) if the card was changed deliberately. 						
PHF	[Input phase loss]	Drive incorrectly supplied or a fuse blown. One phase missing. ATM220 ward on a single phase.	Check the power connection and the fuses. Use a 3-phase supply mains.						
		 3-phase ATV320 used on a single-phase supply mains. Unbalanced load. This protection only operates with the drive on load. 	• Disable the detected fault by [Input phase loss] (, PL) =						
ы 5 F	[Undervoltage]	Supply mains too low. Transient voltage dip.	• Check the voltage and the parameters of [UNDERVOLTAGE MGT] (u 5 b -), page 259.						

Option card changed or removed

When an option card is removed or replaced by another, the drive locks in [Incorrect config.] (ΓF) fault mode on power-up. If the card has been deliberately changed or removed, the detected fault can be cleared by pressing the ENT key twice, which causes the factory settings to be restored (see page 81) for the parameter groups affected by the card. These are as follows:

Card replaced by a card of the same type

• Communication cards: only the parameters that are specific to communication cards

Control block changed

When a control block is replaced by a control block configured on a drive with a different rating, the drive locks in [Incorrect config.] ($\Gamma F F$) fault mode on power-up. If the control block has been deliberately changed, the detected fault can be cleared by pressing the ENT key twice, which causes all the factory settings to be restored.

Fault detection codes displayed on the remote display terminal

Code	Name	Description
init	[Initialization in progress]	The microcontroller is initializing. Search underway for communication configuration.
Γ □ Π.Ε (1)	[Communication error]	Time out detected fault (50 ms). This message is displayed after 20 attempts at communication.
A - 17 (1)	[Alarm button]	A key has been held down for more than 10 seconds. The keypad is disconnected. The keypad wakes up when a key is pressed.
[L r (1)	[Confirmation of detected fault reset]	This is displayed when the STOP key is pressed once if the active command channel is the remote display terminal.
d E □.E (1)	[Drive disparity]	The drive brand does not match that of the remote display terminal.
r ο Π.Ε (1)	[ROM anomaly]	The remote display terminal detects a ROM anomaly on the basis of checksum calculation.
г ЯП.Е (1)	[RAM anomaly]	The remote display terminal detects a RAM anomaly.
[P u . E (1)	[Other detected faults]	Other detected faults.

(1) Flashing

Annex



What's in this Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
13	Index of Functions	<u>319</u>
14	Index of Parameter Codes	<u>321</u>

Index of Functions

The following table represents the parameter codes:

Function	Page
[2 wire] (2C)	<u>85</u>
[2nd CURRENT LIMIT.]	218
[3 wire] (3C)	<u>85</u>
[+/- SPEED]	<u>185</u>
[+/-SPEED AROUND REF.]	<u>187</u>
[AUTO DC INJECTION]	<u>176</u>
[AUTOMATIC RESTART]	<u>252</u>
[Auto tuning]	<u>87</u>
[AUTO TUNING BY LI]	<u>236</u>
DC Bus	<u>245</u>
[BRAKE LOGIC CONTROL]	<u>194</u>
[CATCH ON THE FLY]	<u>253</u>
Command and reference channels	146
Deferred stop on thermal alarm	<u>258</u>
[DRIVE OVERHEAT]	<u>257</u>
[ENCODER FAULT]	<u>263</u>
[ENCODER CONFIGURATION]	<u>135</u>
[FACTORY SETTINGS]	<u>81</u>
[Fault reset]	<u>251</u>
[FLUXING BY LI]	<u>189</u>
[HIGH SPEED HOISTING]	205
[DYN CURRENT LIMIT]	<u>219</u>
[JOG]	<u>178</u>
LINE CONTACTOR COMMAND	220
Load measurement	<u>199</u>
[Load sharing]	122
Load variation detection	<u>267</u>
Motor or configuration switching [MULTIMOTORS/CONFIG.] (☐ ☐ ☐ -)	<u>232</u>
Motor thermal protection	<u>254</u>
[Noise reduction]	120
[OUTPUT CONTACTOR CMD]	223
[Ovld.Proces.Mngmt]	<u>272</u>
[PARAM. SET SWITCHING]	230
[5 PASSWORD]	300
[PID REGULATOR]	210
POSITIONING BY SENSORS	224
PRESET SPEEDS	180
PTC probe	<u>250</u>
[RAMP]	<u>170</u>
[REFERENCE SWITCH.]	<u>167</u>
Rope slack	<u>204</u>

Function	Page
[RP assignment]	128
REFERENCE MEMORIZING	<u>188</u>
[STOP CONFIGURATION]	<u>173</u>
Stop at distance calculated after deceleration limit switch	226
Summing input / Subtracting input / Multiplier	<u>168</u>
Synchronous motor parameters	<u>112</u>
TORQUE LIMITATION	<u>215</u>
TRAVERSE CONTROL	237
[Underload Managmt.]	<u>271</u>
Use of the "Pulse input" input to measure the speed of rotation of the motor	<u>265</u>

Index of Parameter Codes

13

The following table represents the parameter codes:

														CUSTOMER SETTING
[1.1 SPEED REFERENCE] (r E F -)	[1.2 MONITORING] ($\Pi_{D,n}$ -)	[FACTORY SETTINGS] (F [5 -)	[Macro configuration]	[SIMPLY START] (5, 17-)	[SETTINGS] (5 E L -)	[MOTOR CONTROL] (dr [-)	[INPUTS / OUTPUTS CFG]	[COMMAND] ([L L -)	[FUNCTION BLOCKS] (Fbfl-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FL L -)	[COMMUNICATION]	[3 INTERFACE] (, EF-)	
					<u>89</u>					171 187 212				
				<u>87</u>	89					<u>170</u>				
										<u>176</u>				
												<u>277</u>		
												<u>276</u>		
	<u>52</u>						<u>133</u>							
	<u>52</u>													
							<u>134</u>							
	<u>52</u>						<u>134</u>							
							<u>133</u>							
							<u>133</u>							
	<u>52</u>						<u>133</u>							
	<u>52</u>													
							<u>134</u>							
	<u>52</u>						<u>134</u>							
							<u>134</u>							
	<u>53</u>													
	<u>53</u>													
					<u> </u>					<u> </u>				
										040				
40	F0						<u>135</u>			210				
<u>46</u>														
	03											276		
	52						144					210		
							144							
							144							
	B	52 52 52 52 52 52 52 52 53 53	52 52 52 52 52 52 53 53 53 53 53 53 53 53	52 52 52 52 52 52 52 52	52 1 52 1 52 1 52 1 52 1 52 1 52 1 52 1 52 1 52 1 52 1 52 1 53 1 53 1 46 50 53 1 53 1 46 50 53 1 53 1 53 1 53 1 53 1 53 1 53 1 53 1 53 1 53 1 53 1 53 1 53 1 53 1 53 1 53 1 53 1 53 1 53 1 53 <	89 1 1 87 89 1 1 87 89 2 1 1 1 52 1 1 1 52 1 1 1 52 1 1 1 52 1 1 1 52 1 1 1 52 1 1 1 52 1 1 1 52 1 1 1 52 1 1 1 53 1 1 1 53 1 1 1 46 50 1 1 1 46 50 1 1 1 53 1 1 1 1 46 50 1 1 1 53 1 1 1 1 46 50 1 1 1 53 1 1 1 1 53 <td>89 89 87 89 87 89 88 87 89 88 89 88 89 89 80 89</td> <td>89 89 89 10 10 87 89 10 10 10 10 10 10</td> <td>89 <td< td=""><td>89 89<</td><td> Second Process Seco</td><td>89 89 171 187 171 187 171 187 212 170</td><td> Second S</td><td> Section Sect</td></td<></td>	89 89 87 89 87 89 88 87 89 88 89 88 89 89 80 89	89 89 89 10 10 87 89 10 10 10 10 10 10	89 89 <td< td=""><td>89 89<</td><td> Second Process Seco</td><td>89 89 171 187 171 187 171 187 212 170</td><td> Second S</td><td> Section Sect</td></td<>	89 89<	Second Process Seco	89 89 171 187 171 187 171 187 212 170	Second S	Section Sect

Code															CUSTOMER SETTING
	<u>M</u>							<u>[</u>			-	_			JETTING
	[1.1 SPEED REFERENCE]	-	[FACTORY SETTINGS] (F [5 -)	[uoi			7.	[INPUTS/OUTPUTS CFG]		:KS]	[APPLICATION FUNCT.]	[FAULT MANAGEMENT] (F L L -)	Z		
		[1.2 MONITORING] ($\Pi_{\alpha\alpha}$ -)	Ē	[Macro configuration]	RT		[MOTOR CONTROL] (dr [-)	TP.		[FUNCTION BLOCKS] (Fbn-)	N F	AGE	[COMMUNICATION]	₩.	
	ED R	Ō	3	onfig	[SIMPLY START] (5 , n -)	GSI	S) O	[COMMAND] ([E L -)	ON (ATIC	MAN	NIC	[3 INTERFACE]	
	[1.1 SPEE (r E F -)	[1.2 MONI (Поп -)	3 - 5	o c C	РLY П -)	[SETTINGS]	TOR	(INPUTS/	MMA (-)	CTI	LIC,	JLT ([COMMUI	[3 INTERF (, E F -)	
	[1.1 (r E	[1.2 (По	[FAC (F [[Mac (E F	(5 ,	[SE] (5 <i>E</i>	[MO]	E .	COI ([F	(F b	[APF	[FAU (FL		[3 IN	
Ao I E								<u>144</u>							
A o H I		<u>53</u>						<u>144</u>							
A o L I		<u>53</u>						<u>144</u>							
ЯРН		<u>62</u>													
ASH I		<u>53</u>						144							
ASL I		<u>53</u>					<u>114</u>	144			<u>190</u>				
Atr							114				190	<u>252</u>			
Aut							<u>109</u>								
							<u>114</u>								
Я и ІЯ								<u>135</u>							
R ⊔ 2 R								<u>135</u>							
<i>ЬЕ 1</i>											<u>194</u>		077		
6 d C o											<u>195</u>		<u>277</u>		
b E n						<u>101</u>					<u>195</u>				
b E E						101					195				
bFr					<u>86</u>		<u>105</u>								
Ь іР											<u>194</u>				
Біг						<u>101</u>					<u>195</u>				
6 L C											<u>194</u>				
ЬПР									<u>157</u>						
b n 5		<u>55</u>								<u>158</u>					
b n u		<u>56</u>					120			<u>158</u>					
6 o A							120 120								
6 r A							<u></u>				<u>172</u>				
ЬгНО											197				
br H I											<u>197</u>				
brH2											<u>198</u>				
Ьгг											<u>198</u>				
brt						<u>101</u>					<u>194</u>				
65P								<u>131</u>			401				
65E		5.E								150	194				
6 u E r		<u>55</u>			<u>86</u>					<u>158</u>					
C C 5					<u>50</u>				<u>155</u>						
									155						
C 4 2									155						
C F G				<u>82</u>	<u>85</u>										
CFP5		<u>62</u>													
C H A I											<u>230</u>				
CHR2											<u>230</u>				

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (r E F -)	[1.2 MONITORING] (Παη-)	[FACTORY SETTINGS] (F [5 -)	[Macro configuration] (E F L)	[SIMPLY START] (5 , fl -)	[SETTINGS] (5 E L -)	[MOTOR CONTROL] (dr [-)	[INPUTS / OUTPUTS CFG]	[COMMAND] (E L -)	[FUNCTION BLOCKS] (F b fl -)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (F L L -)	[COMMUNICATION]	[3 INTERFACE] (, E F -)	
CHCF									<u>154</u>						
ЕНП											<u>235</u>				
C L 2						<u>95</u>					218				
EL 1						94	<u>119</u>				<u>218</u>				
C L L											005	<u>261</u>			
C L o								1	1		<u>205</u>			1	
C L 5						<u> </u>		1			228			1	
СПАС		<u>56</u>									225				
Enfl Enf2											235				
Enf5		60									<u>235</u>				
Lnrs		<u>62</u> <u>75</u>													
C o d 2		<u>75</u>													
CoF		10									205				
C o L											200	262			
C o P									<u>156</u>			202			
Cor									100		205				
C a 5							107								
CP I											200				
CP2											200				
C r H 3		<u>53</u>						134							
[rL3		<u>53</u>						134							
Cr5E														293	
C r E F							<u>118</u>								
C 5 b Y														<u>293</u>	
C 5 E		<u>75</u>												300	
ГЕВ						<u>102</u>						<u>252</u>			
CFF							<u>105</u>								
ГŁи		<u>56</u>								<u>158</u>					
d R 2											<u>168</u>				
∂ R 3											<u>169</u>				
d A F											<u>227</u>				
d A L											<u>227</u>				
dAnF								<u>137</u>				<u>263</u>			
dAr											<u>227</u>				
∂ R S											<u>223</u>				
d b 5											223				
4 C C C											<u>245</u>				
4000											<u>245</u>				
4 C C 1		<u>66</u>													
4 C C 2		<u>67</u>													
4 C C 3		<u>67</u>													

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (r E F -)	[1.2 MONITORING] (\$\int_0 \nldots - \)	[FACTORY SETTINGS] (F [5 -)	[Macro configuration]	[SIMPLY START] (5, 17-)	[SETTINGS] (5 E L -)	[MOTOR CONTROL] (dr [-)	[INPUTS / OUTPUTS CFG]	[COMMAND] ([E L -)	[FUNCTION BLOCKS] (Fbn-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (F L E -)	[COMMUNICATION]	[3 INTERFACE]	
<i>d</i> C C 4		<u>67</u>													
<i>ACC</i> 5		<u>67</u>													
4006		<u>67</u>													
4007		<u>67</u>													
4CC8		<u>67</u>				93					<u>173</u>	<u>272</u>			
dC ,						93					<u>173</u>	212			
4 E 2						<u>89</u>					<u>174</u> <u>171</u>				
						<u> </u>					187				
d E C					<u>87</u>	<u>89</u>					<u>170</u>				
dLЬ												<u>267</u>			
dLd												<u>267</u>			
dLr		<u>75</u>												300	
dol								141							
do Id do IH								141							
do 15								141 141							
dP I		64						141							
dP2		<u>67</u>													
d P 3		67													
∂ РЧ		<u>67</u>													
d P 5		<u>67</u>													
d P 6		<u>67</u>													
dP7		<u>67</u>													
d P 8		<u>67</u>													
dr []		<u>66</u>													
dr[2		<u>66</u>													
dr [3		66 66													
dr [5		66													
dr C 6		66													
dr []		66									+				
dr [B		66													
d 5 F											228				
d 5 i											<u>187</u>				
d 5 P											<u>187</u>				
dEF											<u>243</u>				
ЕЬо											<u>242</u>				
EPL												<u>259</u>			
Enu								<u>135</u>			1				
E n 5								<u>135</u>					077		
Er Co E E F												259	<u>277</u>		
EEF												<u>258</u>			

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE]	[1.2 MONITORING] (\$\int_0 \nu -)\$	[FACTORY SETTINGS] (F [5 -)	[Macro configuration]	[SIMPLY START] (5, // -)	[SETTINGS] (5 E L -)	[MOTOR CONTROL] (dr [-)	[INPUTS / OUTPUTS CFG]	[COMMAND] ([E L -)	[FUNCTION BLOCKS] (Fbfl-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (F L E -)	[COMMUNICATION]	[3 INTERFACE]	
FI							<u>118</u>								
F 2							<u>118</u>								
F2d							<u>102</u>								
F 3							<u>119</u>								
F 4							<u>119</u>								
F 5							<u>119</u>								
FAL							<u>120</u>							000	
FAdi											-			286	
F A d 3									1		1			286 286	
FAd4											1			286 286	
FAnF								<u>136</u>	1		1	<u>263</u>		200	+
FbCd								100		<u>158</u>		200			
FbdF										<u>159</u>					
FbFE		<u>55</u>								158					
FЬгП										159					
F b 5 n										159					
FBSE		<u>55</u>								<u>158</u>					
F C S I			<u>81</u>												
FdE												<u>266</u>			
FFH							<u>118</u>								
FFΠ						<u>104</u>									
FFE						<u>102</u>					<u>173</u>				
FLi											<u>189</u>				
FLo													<u>277</u>		
FLoC													<u>277</u>		
FLot													<u>277</u>		
FLr												<u>253</u>			
FLu						<u>95</u>	<u>109</u>				<u>189</u>				
Fnl									<u>157</u>						
F n 2									<u>157</u>						
F n 3									<u>157</u>						
F n 4									<u>157</u>		212			1	
F9A									1		<u> </u>	<u>266</u>		1	+
F 9 C											1	<u>266</u>		1	
F 9 F												<u>266</u>			
F9L						102						<u>253</u>			
F 9 5		<u>50</u>													
F9E												<u>266</u>			
FrI									<u>154</u>						
FrIb											<u>167</u>				

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (r E F -)	[1.2 MONITORING] (Παη-)	[FACTORY SETTINGS] (F [5 -)	[Macro configuration] ([F L)	[SIMPLY START] (5 , fl -)	[SETTINGS] (5 E L -)	[MOTOR CONTROL] (dr[-)	[INPUTS / OUTPUTS CFG]	[COMMAND] ([L L -)	[FUNCTION BLOCKS] (F b fl -)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (F L L -)	[COMMUNICATION] ([all -)	[3 INTERFACE] (, E F -)	
Fre	50	50							<u>155</u>						
FrH	<u>50</u>	<u>50</u> <u>56</u>													
Fri							<u>116</u>								
F r 5					<u>86</u>		<u>107</u>								
Fr55							<u>116</u>								
FrE											<u>171</u>				
F 5 Ł											<u>173</u>				
FŁd						<u>102</u>						<u>253</u>			
FŁo						<u>103</u>						<u>272</u>			
FEu						<u>103</u>						<u>271</u>			
FEY			<u>81</u>												
G F 5			<u>81</u>												
G 5 P														<u>289</u>	
HF I							<u>116</u>								
Hir							<u>116</u>								
HrFC												<u>252</u>			
H 5 o											<u>205</u>				
H 5 P					<u>87</u>	<u>89</u>					244				
H 5 P 2						90					244				
H 5 P 3						90					244				
H 5 P 4						90					244				
12 E A		E4									219				
, 2 E П		<u>51</u>									219				
12E 1											219				
, A D T										<u>160</u>	219				
, A D 2										<u>160</u>					
, A D 3										160					
, A D 4										160					
, A D S										160					
, A D 6										160					
, A D T										160					
, A O B										160					
, A O 9										160					
, A 10										160					
ı A d I														286	
, A d 2														<u>286</u>	
, A d 3														<u>286</u>	
, A d 4														<u>286</u>	
ıbr						<u>101</u>					<u>194</u>				
ı Б г Я											<u>200</u>				
ı d A							<u>111</u>								

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (r E F -)	[1.2 MONITORING] (\$\int_0 \nlimes -)	[FACTORY SETTINGS] (F [5 -)	[Macro configuration]	[SIMPLY START] (5, // -)	[SETTINGS] (5Et-)	[MOTOR CONTROL] (dr [-)	[INPUTS / OUTPUTS CFG]	[COMMAND] ([L L -)	[FUNCTION BLOCKS] (Fbf)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (F L E -)	[COMMUNICATION] ([all -)	[3 INTERFACE] (, E F -)	
1 d C						<u>93</u>					<u>174</u>	<u>273</u>			
, d C 2						<u>93</u>					<u>175</u>	<u>273</u>			
, L D 1										<u>159</u>					
1L02										<u>159</u>					
, L O 3										<u>159</u>					
, L 0 4										<u>159</u>					
, L 0 5										<u>159</u>					
, L 0 6										<u>159</u>					
, L D 7										<u>159</u>					
, L 0 8										<u>159</u>					
, L 0 9										<u>159</u>					
1L 10										<u>159</u>					
ıLr							<u>116</u>					004			
ın H						00					170	<u>261</u>			
100						<u>89</u>					<u>170</u>				
1 n E P					<u>86</u>						216 245	<u>256</u>			
ird					00	101					<u>194</u>	200			
1 E H					<u>87</u>	90					134				
J d C					<u>07</u>	<u>101</u>					<u>195</u>				
JF2						102					183				
JF 3						103					183				
JFH						103					183				
JGF						95					178				
JGE						96					179				
JoG											178				
JPF						<u>102</u>					183				
LIA		<u>51</u>						<u>127</u>							
LId								<u>128</u>							
L 2 A		<u>51</u>						<u>128</u>							
L 2 d								<u>128</u>							
L 3 A		<u>51</u>						<u>127</u>							
L 3 d								<u>128</u>							
LYA		<u>51</u>						<u>128</u>							
L4d								<u>128</u>							
L 5 A		<u>51</u>						<u>127</u>							
L 5 d								<u>128</u>							
L 6 A		<u>51</u>						<u>128</u>							
L 6 d								<u>128</u>							
LAOI										<u>160</u>					
LAOS				<u> </u>		<u> </u>				<u>160</u>					
L A D 3										<u>160</u>					

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (r E F -)	[1.2 MONITORING] (\$\Pi_0_n\$)	[FACTORY SETTINGS] (F [5 -)	[Macro configuration] ([F L)	[SIMPLY START] (5, n-)	[SETTINGS] (5Et-)	[MOTOR CONTROL] (dr[-)	[INPUTS / OUTPUTS CFG]	[COMMAND] ([E L -)	[FUNCTION BLOCKS] (Fbf)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (F L E -)	[COMMUNICATION] ([all-)	[3 INTERFACE] (,	
L A O 4										<u>160</u>					
L A O S										<u>160</u>					
L A O 6										<u>160</u>					
LAOT										<u>160</u>					
LADB								400		<u>160</u>					
LAIA		<u>51</u>						<u>128</u>							
LAId		F4						128							
LASA		<u>51</u>						128							
LA2d LAnf								<u>128</u>				262			
LHOF								<u>136</u>				<u>263</u>		<u>280</u>	
LBA							122							200	
LbC						103	122								
LBCI						100	124								
L 6 C 2							124								
L b C 3							124								
LЬF							124								
L C 2											218				
LEr		<u>50</u>													
LCE											<u>221</u>				
L d 5							<u>116</u>								
L E 5											<u>221</u>				
LEE												<u>258</u>			
LFA							<u>111</u>								
LFF												<u>272</u>			
LFL3												<u>260</u>			
LFr	<u>46</u>	<u>50</u>													
LFr I		<u>59</u>													
LF r ≥		<u>59</u>													
LFr3		<u>59</u>													
L 15 1		<u>51</u>													
L 152		<u>51</u>									001				
LLC											<u>221</u>			000	
L n G									120					<u>282</u>	
Lol									139 139						
Lo Id									139 140						
Lo 15									140						
LoC						103			170			272			
LPI						100					200	<u> </u>			
LPZ											200				
L 95							<u>116</u>				200				

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE]	[1.2 MONITORING] (\$\int_{0.0} - \)	[FACTORY SETTINGS] (F [5 -)	[Macro configuration] (£ F 5)	[SIMPLY START] (5 , fl -)	[SETTINGS] (5 E L -)	[MOTOR CONTROL]	[INPUTS / OUTPUTS CFG]	[COMMAND] ([E L -)	[FUNCTION BLOCKS] (Fbfl-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FL L -)	[COMMUNICATION]	[3 INTERFACE] (,	
L 5 P					<u>87</u>	<u>89</u>									
LuL						<u>103</u>						<u>270</u>			
Lun						<u>103</u>						<u>270</u>			
поот										<u>161</u>					
0002										<u>161</u>					
пооз										<u>161</u>					
ПООЧ										<u>161</u>					
ПООБ										<u>161</u>					
ПООБ								1		<u>161</u>	<u> </u>				
поот								1		<u>161</u>	<u> </u>				
поов		EO						1		<u>161</u>					
ПІСЕ		<u>58</u>													
ПІЕС		<u>58</u>									228				
П5 E P П Я 2											220	<u>169</u>			
пна												169 169			
ПСг							<u>116</u>					109			
Пан							110							285	
ПЕг	<u>46</u>	<u>50</u>				98								200	
ппғ	40	<u>50</u>				30									
ПРС		<u>50</u>					110								
ПЕП							110					<u>255</u>			
nbrP		<u>61</u>										200			
nbtP		61													
nE I		<u>58</u>													
n C 2		<u>58</u>													
n C 3		<u>58</u>													
n E 4		<u>58</u>													
n E 5		<u>58</u>													
n C 6		<u>59</u>													
n E 7		<u>59</u>													
n [B		<u>59</u>													
n E A I													<u>276</u>		
n C A 2													<u>276</u>		
п С Я З													<u>276</u>		
n E A 4													<u>276</u>		
n C A S													<u>276</u>		
n C A 6													<u>276</u>		
n E A 7													<u>276</u>		
n C A B													<u>276</u>		
n E r					<u>86</u>		<u>107</u>								
nEr5							<u>113</u>								

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (r E F -)	[1.2 MONITORING] ($\Pi_{\alpha\alpha}$ -)	[FACTORY SETTINGS] (F [5 -)	[Macro configuration] ([F [])	[SIMPLY START] (5, n-)	[SETTINGS] (5 E L -)	[MOTOR CONTROL] (dr [-)	[INPUTS/OUTPUTS CFG] (, _ a -)	[COMMAND] ([E L -)	[FUNCTION BLOCKS] (Fbf)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (F L E -)	[COMMUNICATION]	[3 INTERFACE] (, L F -)	
n L 5											<u>228</u>				
пΠΙ		<u>58</u>													
- Π 2		<u>58</u>													
пП∃		<u>58</u>													
л П Ч		<u>58</u>													
n Π 5		<u>58</u>													
л П Б		<u>58</u>													
пΠЛ		<u>58</u>													
пПВ		<u>58</u>													
пПЯ І													<u>275</u>		
n∏A2													<u>275</u>		
пПЯ Э													<u>275</u>		
пПЯЧ													<u>275</u>		
nΠAS													<u>275</u>		
пПЯБ													<u>275</u>		
пПЯЛ													<u>275</u>		
пПЯВ													<u>275</u>		
n N E S		<u>61</u>													
nPr					<u>86</u>		<u>107</u>								
nrd							<u>120</u>								
n 5 P					<u>86</u>		<u>107</u>								
n 5 P 5							<u>113</u>				4=0				
n 5 E											<u>173</u>				
n E J		<u>74</u>									000				
ع ع ه											<u>223</u>	070			
odL												272			
od E												<u>256</u>			
- H L												257 255			
o P L												<u>255</u>			
oPr		<u>50</u>										200			
_ 5P		<u>50</u>									205				
otr		<u>50</u>									200				
PAH		50				99					212				
PAL						99					211				
PAS						<u> </u>					228				
PAu											212				
PCd														292	
PEr						99					212				
PES						<u> </u>					200				
PF I		<u>54</u>						128							
PFr		<u>54</u>						128							
		<u></u>						<u></u>							

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (r E F -)	[1.2 MONITORING] ($\Pi_{\alpha\alpha}$ -)	[FACTORY SETTINGS] (F E 5 -)	[Macro configuration] (£ F E)	[SIMPLY START] (5 , 17 -)	[SETTINGS] (5Et-)	[MOTOR CONTROL] (dr [-)	[INPUTS / OUTPUTS CFG]	[COMMAND] ([EL-)	[FUNCTION BLOCKS] (Fbn-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (F L E -)	[COMMUNICATION]	[3 INTERFACE] (,	
PG I								<u>135</u>							
P H 5							<u>116</u>								
PiA		<u>54</u>						<u>128</u>							
PiC											<u>211</u>				
PiF											<u>210</u>				
PiFI											210				
P IF 2											210				
Pii		F.4						400			<u>210</u>			1	
PiL		<u>54</u>						<u>128</u>			040				
P , N											213 210				
P IP 2											210				
P 15											212				
PoH						99					211				
PoL						99					211				
PP i						50						<u>269</u>			
PPn5							113								
Pr2											214				
Pr4											214				
PrSE											228				
PrP						99					<u>211</u>				
P5 16											<u>181</u>				
P 5 2											<u>181</u>				
P 5 4											<u>181</u>				
P 5 B											<u>181</u>				
PSr						<u>99</u>					212				
PSE									<u>154</u>						
PECL												<u>250</u>			
PEH		<u>62</u>													
Pu 15														<u>292</u>	
9 5 H						<u>102</u>					<u>242</u>				
95L						<u>102</u>					<u>242</u>				
r I								<u>138</u>							
r Id						<u> </u>		<u>138</u>	<u> </u>					1	
r IF								<u>139</u>							
r 2 F								139							
r IH								139						1	
r 15								138						1	
r 2								139 130							
r 2 d								139							
r 2 H								<u>139</u> <u>139</u>							1

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (r E F -)	[1.2 MONITORING] ($\Pi_{\alpha \alpha}$ -)	[FACTORY SETTINGS] (F [5 -)	[Macro configuration] ([F L)	[SIMPLY START] (5, n-)	[SETTINGS] (5 E L -)	[MOTOR CONTROL] (dr[-)	[INPUTS / OUTPUTS CFG]	[COMMAND] ([L L -)	[FUNCTION BLOCKS] (F b fl -)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (F L E -)	[COMMUNICATION] ([all-)	[3 INTERFACE]	
r E A											<u>223</u>				
гΣЬ											<u>167</u>				
rdAE							<u>117</u>								
r d G						<u>99</u>					<u>211</u>				
r E C I		<u>61</u>							455						
r F C		50							<u>155</u>						
r F C C		<u>56</u>													
rFLE		<u>74</u> <u>50</u>													
r 10		<u>50</u>				99					211				
r 10						99			<u>154</u>		211				
rNud						103			104			<u>270</u>			
r P						100						<u>251</u>			
rPII		<u>59</u>													
r P 12		<u>59</u>													
rP 13		<u>59</u>													
rP 14		<u>59</u>													
r P 2						99					214				
r P 2 1		<u>60</u>													
r P 2 2		<u>60</u>													
r P 2 3		<u>60</u>													
r P 2 4		<u>60</u>													
r P 3						<u>100</u>					<u>214</u>				
rP31		<u>60</u>													
r P 3 2		<u>60</u>													
r P 3 3		<u>60</u>													
r P 3 4		<u>60</u>									64.				
- P 4						<u>100</u>					214	054			
r P A	16	60										<u>251</u>			
r P C r P E	<u>46</u>	<u>62</u>													
rPF		<u>62</u>													
- P G		<u> </u>				99					211				
rPi	<u>46</u>	<u>62</u>				<u>55</u>					211				
rPo		<u>62</u>													
rPr		62													
r P 5		<u> </u>									<u>171</u>				
rPE											170				
rr5								<u>126</u>							
r 5 A							<u>111</u>								
r 5 A 5							<u>116</u>								
r 5 d											<u>205</u>				

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (r E F -)	[1.2 MONITORING] (Παη-)	[FACTORY SETTINGS] (F [5 -)	[Macro configuration]	[SIMPLY START] (5, n-)	[SETTINGS] (5 E L -)	[MOTOR CONTROL]	[INPUTS/OUTPUTS CFG]	[COMMAND] ([L L -)	[FUNCTION BLOCKS] (F b fl -)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (F L L -)	[COMMUNICATION]	[3 INTERFACE] (,	
r 5 F												<u>251</u>			
r 5 L											<u>213</u>				
r 5 E L											<u>205</u>				
r E H		<u>62</u>									0.40				
rtr								<u>126</u>			<u>243</u>				
5 10 I								120			230				
5 10 2											<u>230</u>				
5 103											230				
5 104											230				
5 105											230				
5 106											230				
5 10 7											230				
5 108											230				
5 109											230				
5 1 10											<u>230</u>				
5 1 1 1											<u>230</u>				
5 1 12											230				
5 1 13											<u>230</u>				
5 1 14											<u>230</u>				
5 1 15											<u>230</u>				
520 I											<u>230</u>				
5202											<u>230</u>				
5203											<u>230</u>				
5204											<u>230</u>				
5205											<u>230</u>				
5206											<u>230</u>				
5207											<u>230</u>				
5208											230				
5209											230				
5210											230				
5211											230			1	
5212											230				
52 13 52 14											230				
52 15											230 230			1	
5301											<u>230</u>				
5302											231				
5303											231				
5304											231				
5305											231				
5306											231				

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (r E F -)	[1.2 MONITORING] (\$\int_{\oldsymbol{O}} \cdot \oldsymbol{O}\)	[FACTORY SETTINGS] (F [5 -)	[Macro configuration] ([F]	[SIMPLY START] (5 , n-)	[SETTINGS] (5Et-)	[MOTOR CONTROL] (dr [-)	[INPUTS / OUTPUTS CFG]	[COMMAND] ([E L -)	[FUNCTION BLOCKS] (F b fl -)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (F L E -)	[COMMUNICATION] ([all-)	[3 INTERFACE] (,	
5 3 0 7											<u>231</u>				
5 3 0 8											<u>231</u>				
5 3 0 9											<u>231</u>				
5 3 10											<u>231</u>				
5311											<u>231</u>				
5312											<u>231</u>				
5 3 1 3											231				
5314											231				
5 3 1 5											231				
5 A 2 5 A 3											168 168				
SAF I		<u>69</u>									100				
5 A F 2		<u>70</u>													
SAL		10									227				
5 A r											227				
SAL												<u>258</u>			
5 C L											205				
5 C L 3											246				
505 /			<u>81</u>												
5 d C 1						<u>93</u>					176 195				
5 d C 2						<u>94</u>					<u>177</u>				
5 d d												<u>263</u>			
5 d 5						<u>104</u>									
5 F O O		<u>70</u>													
5 F O I		<u>70</u>													
5 F O 2		<u>71</u>													
5 F O 3		<u>71</u> <u>71</u>													
5F 0 5		<u>71</u> <u>72</u>													
5 F O 6		<u>72</u>													
5 F D 7		<u>72</u>													
5 F D B		<u>73</u>													
5 F D 9		<u>73</u>													
5. 0.5 5.F. 1.D		<u>73</u>													
5 F 1 I		74													
5 F C		<u> </u>				90	<u>118</u>								
5 F d											228				
SFFE		<u>55</u> <u>69</u>													
5 F r						<u>94</u>	<u>119</u>								
5 F Ł							<u>119</u>								
5 H 2											<u>244</u>				

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE]	[1.2 MONITORING] (\$\int_{\alpha\alpha} -)\$	[FACTORY SETTINGS] (F [5 -)	[Macro configuration]	[SIMPLY START] (5, 17-)	[SETTINGS] (5 E L -)	[MOTOR CONTROL]	[INPUTS / OUTPUTS CFG]	[COMMAND] ([E L -)	[FUNCTION BLOCKS]	[APPLICATION FUNCT.]	[FAULT MANAGEMENT] (F L L -)	[COMMUNICATION]	[3 INTERFACE]	
5 H Y											244				
5 10							<u>117</u>								
5 , E						<u>90</u>	<u>118</u>								
5 L L												<u>262</u>			
5 L P						<u>90</u>	<u>118</u>								
5 L 5 S		<u>54</u>													
5 N o E							<u>114</u>								
5 n C											<u>243</u>				
5 o P							<u>120</u>								
5 P 1 D						<u>97</u>					<u>182</u>				
5 <i>P</i> I I						<u>97</u>					<u>182</u>				
5 <i>P 12</i>						<u>97</u>					<u>182</u>				
5 <i>P</i> 13						<u>98</u>					<u>182</u>				
5 <i>P</i> 14						<u>98</u>					<u>182</u>				
5 <i>P</i> 15						<u>98</u>					<u>182</u>				
5 P 1 6						<u>98</u>					<u>182</u>				
5 P 2						<u>97</u>					<u>181</u>				
5 P 3						97					<u>181</u>				
5 P 4						<u>97</u>					<u>181</u>				
5 P S 5 P 6						<u>97</u>					181 181				
5 P T						97 97					181				
5 P B						97 97					182				
5 P 9						97					182				
5 <i>P</i> b						<u>31</u>	<u>116</u>				102				
SPal		<u>63</u>					110								
5Pd2		<u>63</u>													
5Pd3		63													
5 P F							<u>116</u>								
5 P G						90	118								
5 P G u						90	118								
SPN											<u>188</u>				
5-11		<u>64</u>													
5r 12		67													
to 5 r 1 B															
5 r 2 1		<u>64</u>													
5 r 2 2 to 5 r 2 8		<u>67</u>													
5 r A I		<u>64</u>													
5 r A 2 to 5 r A B		67													

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (r E F -)	[1.2 MONITORING] ($\Pi_{\alpha\alpha}$ -)	[FACTORY SETTINGS] (F [5 -)	[Macro configuration] (£ F E)	[SIMPLY START] (5 , 17 -)	[SETTINGS] (5 E L -)	[MOTOR CONTROL] (dr [-)	[INPUTS / OUTPUTS CFG]	[COMMAND] ([E L -)	[FUNCTION BLOCKS]	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (F L E -)	[COMMUNICATION]	[3 INTERFACE]	
5 r b 1		<u>64</u>													
5 r b 2 to 5 r b 8		<u>67</u>													
5 - 5 - 7		64													
5 r [2 to 5 r [8		<u>67</u>													
5rd l		<u>64</u>													
5 r d 2 to 5 r d B		<u>67</u>													
5 r E 1		<u>64</u>													
5 r E 2 to 5 r E 8		<u>67</u>													
5 r F 1		<u>64</u>													
5 r F 2 to 5 r F 8		<u>67</u>													
5 r G I		<u>64</u>													
5 r G 2 to 5 r G 8		<u>67</u>													
5 r H I		<u>64</u>													
5 r H 2 to 5 r H B		<u>67</u>													
5-11		<u>64</u>													
5 r ı 2 to 5 r ı 8		<u>67</u>													
5 r J I		<u>64</u>													
5 r J ∂ to		<u>67</u>													
5 r J 8 5 r J		<u>64</u>													
5 r K ≥ to		<u>67</u>													
5 r K 8		<u>64</u>													
5 r L 2 to 5 r L 8		67													
5 r b						103						270 272			
5 r P						<u>98</u>					<u>187</u>				
55 / 5		<u>54</u>										06:			
556												<u>264</u>			

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (r E F -)	[1.2 MONITORING] (Παη-)	[FACTORY SETTINGS] (F [5 -)	[Macro configuration] (C F L)	[SIMPLY START] (5 , fl -)	[SETTINGS] (5 E L -)	[MOTOR CONTROL] (dr [-)	[INPUTS/OUTPUTS CFG]	[COMMAND] (£ £ L -)	[FUNCTION BLOCKS] (F b fl -)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (F L L -)	[COMMUNICATION] ([all -)	[3 INTERFACE] (, E F -)	
5 E d											<u>228</u>				
SEFr		<u>50</u>													
5 <i>E</i> П												<u>260</u>			
560												<u>264</u>			
5 <i>t o</i> 5		<u>54</u>													
SEP												<u>259</u>			
5 E r											<u>185</u>				
5ErE											470	<u>260</u>			
5 E E					07		400				<u>173</u>				
5 E u n					<u>87</u>		<u>108</u> <u>114</u>								
5 u L							120								
E A I						89					<u>170</u>				
Ŀ A 2						89					<u>171</u>				
E A 3						89					171				
E A Y						89					<u>171</u>				
LAA											<u>216</u>				
L A C		<u>74</u>													
£ R C ≥		<u>74</u>													
<i>E A n F</i>								<u>136</u>				<u>263</u>			
Ł A r												<u>252</u>			
ŁЬЕ						<u>101</u>					<u>195</u>				
t b o											<u>242</u>				
Ebr													<u>276</u>		
<i>E </i>												<u>260</u>			
FCC					<u>85</u>			<u>125</u>							
FCF								<u>125</u>							
FGC						<u>93</u>					<u>175</u>	<u>274</u>			
FACI						<u>93</u>					<u>176</u>				
F d C 2						94		<u> </u>			<u>177</u>				
Edi						93					<u>174</u>	<u>273</u>			
Edn											242	00-			
E d 5												<u>266</u>			
EEC I		<u>61</u>											070		
EF o					07			405					<u>276</u>		
EF r					<u>87</u>			<u>105</u>				057			
LHA												257 258			
ЕНd		<u>50</u>													
EHr		<u>50</u>													
EHE												<u>255</u>			
ELA											<u>216</u>				
FLC											217				

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (r E F -)	[1.2 MONITORING] (\$\int_{\alpha\alpha} - \)	[FACTORY SETTINGS] (F [5 -)	[Macro configuration] ([F L)	[SIMPLY START] (5, 17-)	[SETTINGS] (5Et-)	[MOTOR CONTROL] (dr [-)	[INPUTS/OUTPUTS CFG]	[COMMAND] ([E L -)	[FUNCTION BLOCKS] (F b fl -)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (F L E -)	[COMMUNICATION] ([all-)	[3 INTERFACE]	
FLd												<u>267</u>			
EL IG						<u>101</u>					<u>216</u>				
EL IT						<u>101</u>					<u>216</u>				
EL5						<u>95</u>					<u>213</u>				
EnL												<u>268</u>			
FoL												<u>272</u>			
£ o 5											<u>205</u>				
EP I I		<u>59</u>													
EP 12		<u>60</u>													
EP 13		<u>60</u>													
EP 14		<u>60</u>													
EP21		<u>60</u>													
LP23		60													
EP24		60													
EP31		61													
EP32		61													
LP33		<u>61</u>													
EP34		61													
Ł 9 Ь		_										<u>266</u>			
£ 9 5							<u>113</u>								
E r A							<u>111</u>								
ErE											242				
ErH						<u>102</u>					242				
ErL						<u>102</u>					242				
£ 5 ∏												<u>259</u>			
£ 5 9											243				
FFd						<u>102</u>						255 258			
FF42												255 258			
FF43												255 258			
E E H						<u>102</u>						<u>253</u>			
EEL						102						<u>253</u>			
E E o												276			
EEr						<u>101</u>				<u>196</u>					
EuL										<u>236</u>					
Eun					<u>87</u>		108 113								
Funu							108 114								
ŁυP										242					

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE]	[1.2 MONITORING] (\$\int_0 a^-\$)	[FACTORY SETTINGS] (F [5 -)	[Macro configuration] (£ F E)	[SIMPLY START] (5, 17-)	[SETTINGS] (5 E L -)	[MOTOR CONTROL] (dr [-)	[INPUTS / OUTPUTS CFG]	[COMMAND] ([L L -)	[FUNCTION BLOCKS] (Fbfl-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FL L -)	[COMMUNICATION]	[3 INTERFACE] (,	
Ł u 5					<u>87</u>		<u>108</u> <u>113</u>								
اں							<u>118</u>								
u 2							<u>118</u>								
J 3							<u>119</u>								
<u>и</u> 4							<u>119</u>								
5 ں							<u>119</u>								
ubr											247		122		
udL												<u>271</u>			
υFr						90	<u>118</u>								
ו או ט ו		<u>52</u>						<u>133</u>							
u .H2		<u>52</u>						134							
u iL i		<u>52</u>						<u>133</u>							
u ıL∂		<u>52</u>						<u>133</u>							
uLn		<u>50</u>													
uLr		<u>75</u>													
υLE												<u>270</u>			
u n 5					<u>86</u>		<u>107</u>								
u o H I		<u>53</u>						<u>144</u>							
uoL I		<u>53</u>						<u>144</u>							
u o P		<u>50</u>													
υPL												<u>260</u>			
ur E S											<u>246</u>	<u>259</u>			
υ 5 b												<u>259</u>			
u 5 ı											<u>187</u>				
ے 5 L											<u>247</u>	<u>259</u>			
ы 5 <i>Р</i>											<u>185</u>				
u 5 Ł												<u>259</u>			

Glossary

14

D

Display terminal

The display terminal menus are shown in square brackets.

For example: [Communication]

The codes are shown in round brackets.

For example: [a [] -

Parameter names are displayed on the display terminal in square brackets.

For example: [Fallback Speed]

Parameter codes are displayed in round brackets.

For example: L F F

Ε

Error

Discrepancy between a detected (computed, measured, or signaled) value or condition and the specified or theoretically correct value or condition.

F

Factory setting

Factory settings when the product is shipped

Fault

Fault is an operating state. If the monitoring functions detect an error, a transition to this operating state is triggered, depending on the error class. A "Fault reset" is required to exit this operating state after the cause of the detected error has been removed. Further information can be found in the pertinent standards such as IEC 61800-7, ODVA Common Industrial Protocol (CIP).

Fault Reset

A function used to restore the drive to an operational state after a detected error is cleared by removing the cause of the error so that the error is no longer active.

M

Monitoring function

Monitoring functions acquire a value continuously or cyclically (for example, by measuring) in order to check whether it is within permissible limits. Monitoring functions are used for error detection. Glossary

P

Parameter

Device data and values that can be read and set (to a certain extent) by the user.

PELV

Protective Extra Low Voltage, low voltage with isolation. For more information: IEC 60364-4-41

PLC

Programmable logic controller

Power stage

The power stage controls the motor. The power stage generates current for controlling the motor.



Warning

If the term is used outside the context of safety instructions, a warning alerts to a potential problem that was detected by a monitoring function. A warning does not cause a transition of the operating state.