



130

| Part no.:     | Quantity |                     |
|---------------|----------|---------------------|
| 871-9533      | 1        | (part of OM-820742) |
| 880-5259      | 1        | (part of OH-0440)   |
| 803-0686A     | 15       | (part of OH-0440)   |
| 803-1005      | 24       | (part of OH-0440)   |
| 803-8587      | 12       | (part of OH-0440)   |
| 803-8590A     | 4        | (part of OH-0440)   |
| 872-0030A-001 | 1        | (part of OH-0440)   |

Put these parts  
in the Zip Bag  
872-0030A-001

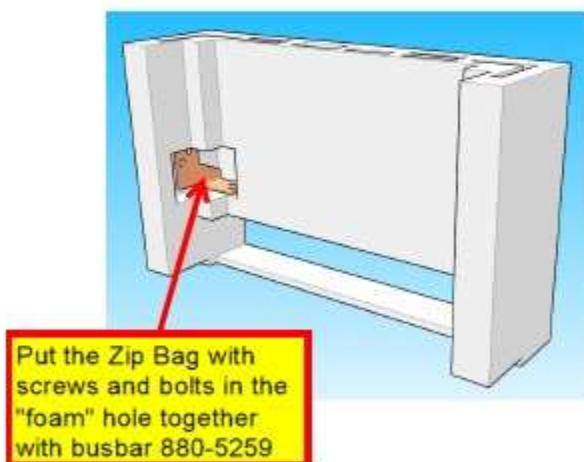


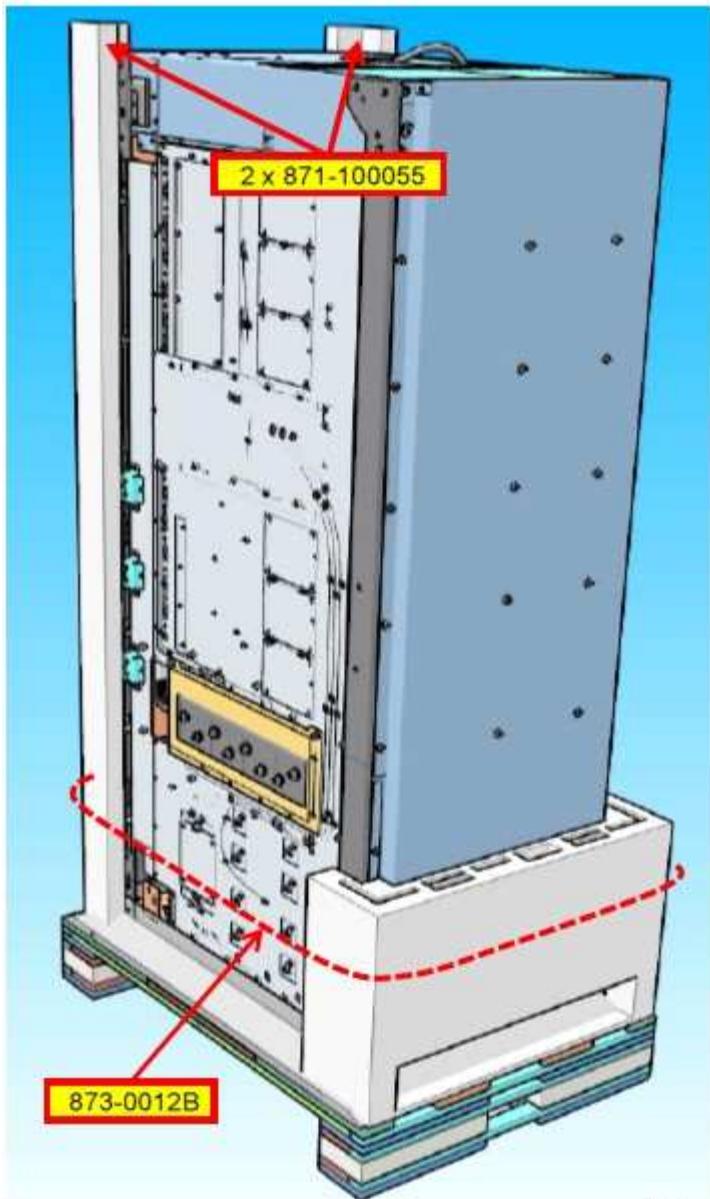

140

| Part no.:  | Quantity                   |
|------------|----------------------------|
| 871-100055 | 2<br>(part of OM-820742)   |
| 873-0012B  | 3mt<br>(part of OM-820742) |


Align 871-9533 with hardware around the rear of ON-9360 together with the 2 front foam corner profiles 871-100055. Use some tape 873-0012B to hold all the foam pieces together.

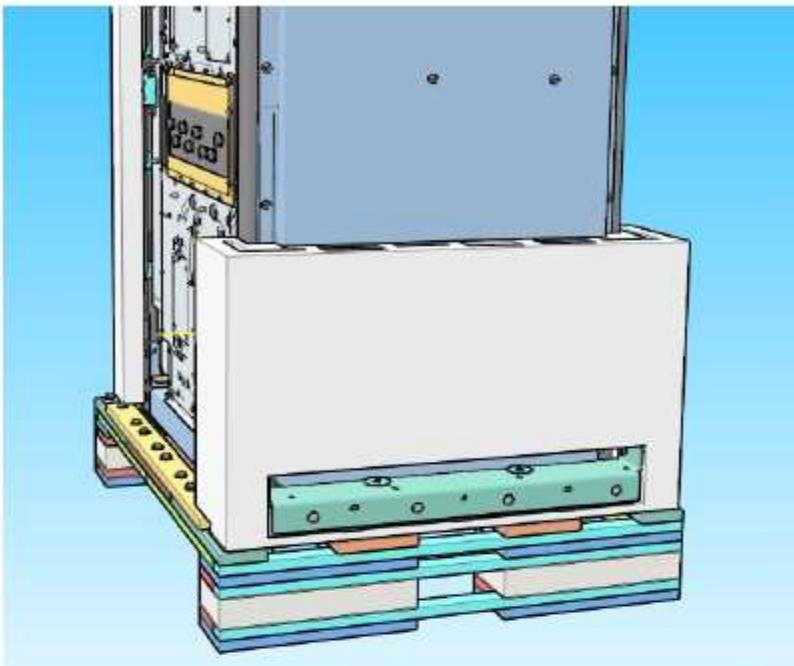


150

| Part no.:  | Quantity |                   |
|------------|----------|-------------------|
| 0M-816684A | 1        | (part of OH-0440) |
| 0M-818242A | 1        | (part of OH-0440) |
| 872-0214A  | 1        | (part of OH-0440) |
| 873-0012B  | 1mt      | (part of OH-0440) |


Before inserting start by putting 0M-816684A onto the piece of wrap. Wrap this with 1 "turn" before adding 0M-818242A and finishing the wrapping. By doing this we will avoid the two 0M# damaging each other. Finally use tape 873-0012B to secure the wrap.

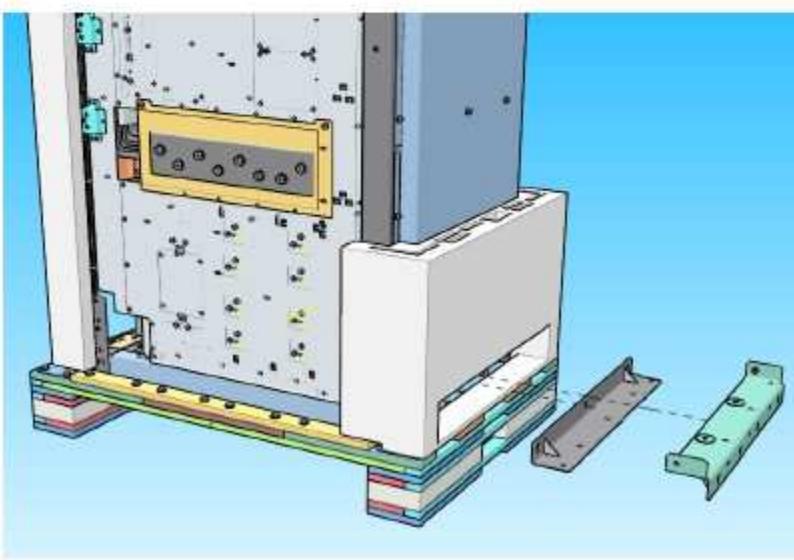


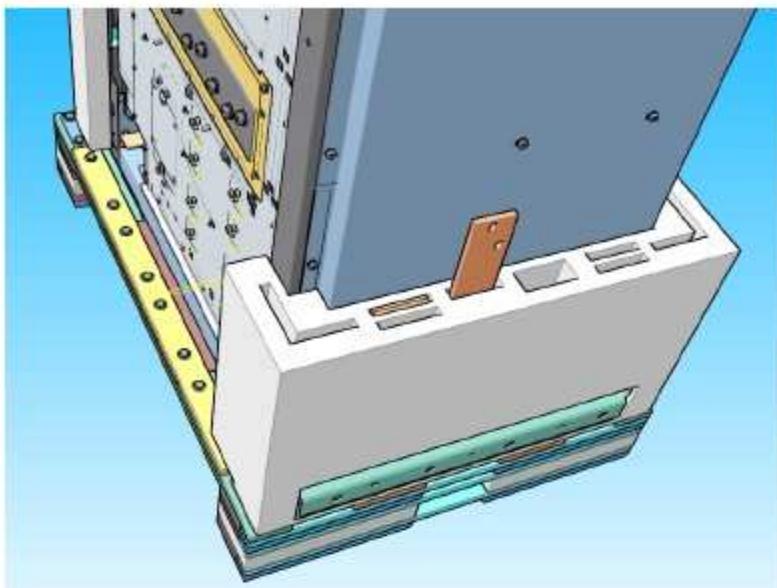

160


| Part no.:  | Quantity               |
|------------|------------------------|
| 880-10146A | 1<br>(part of OH-0440) |
| 0M-140035A | 1<br>(part of OH-0440) |

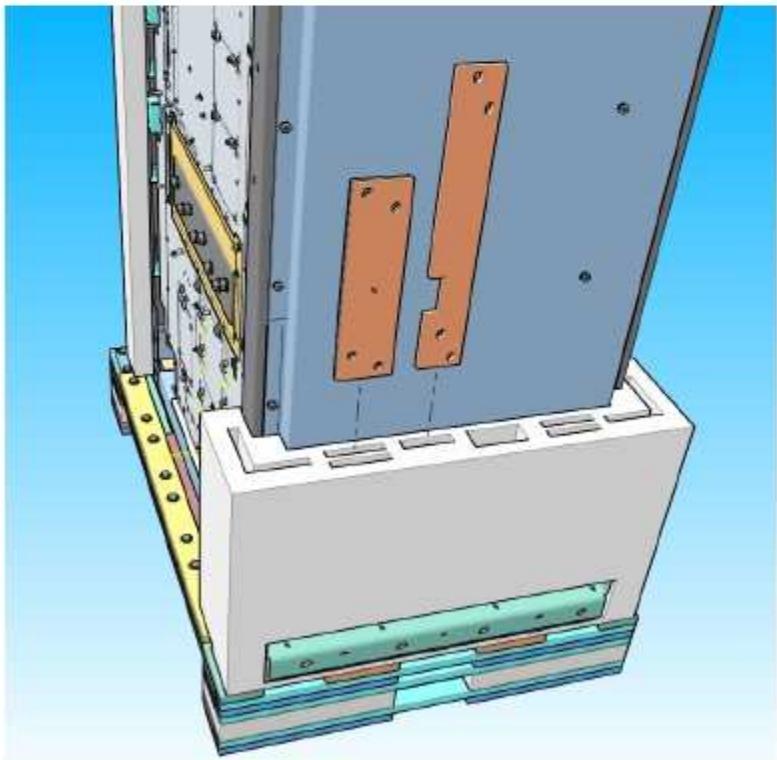


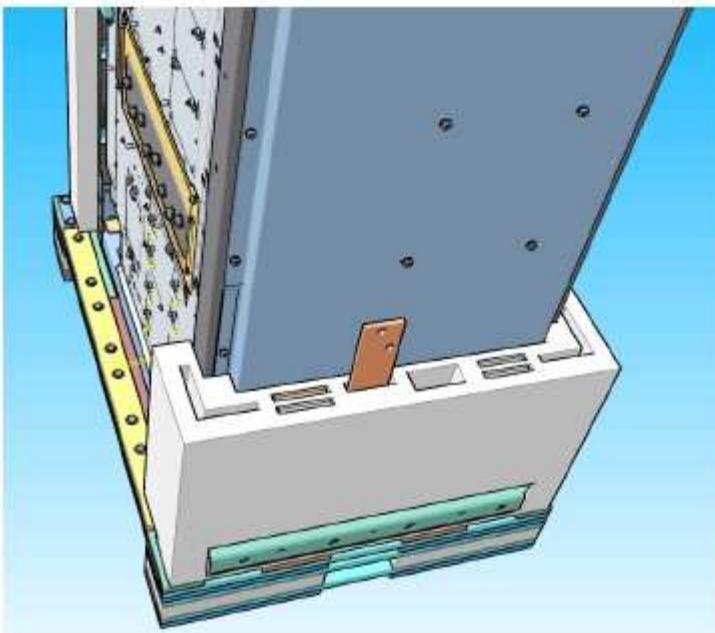

170


| Part no.: | Quantity               |
|-----------|------------------------|
| 0M-97886A | 3<br>(part of 0H-0440) |

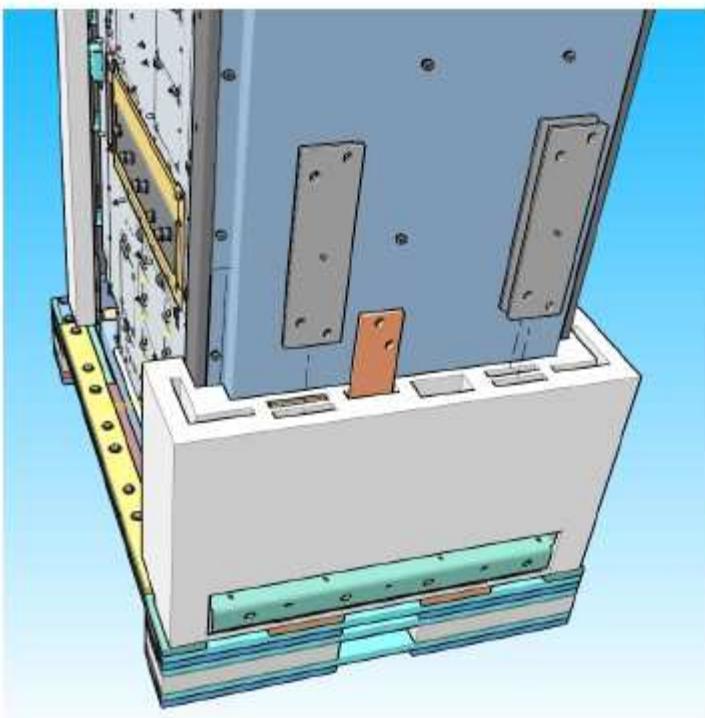


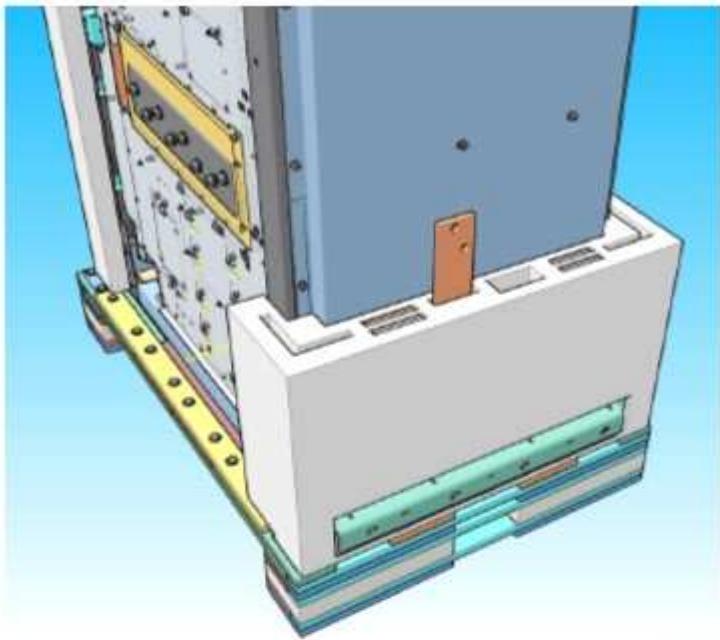

180

| Part no.:  | Quantity               |
|------------|------------------------|
| OM-819336B | 1<br>(part of OH-0440) |

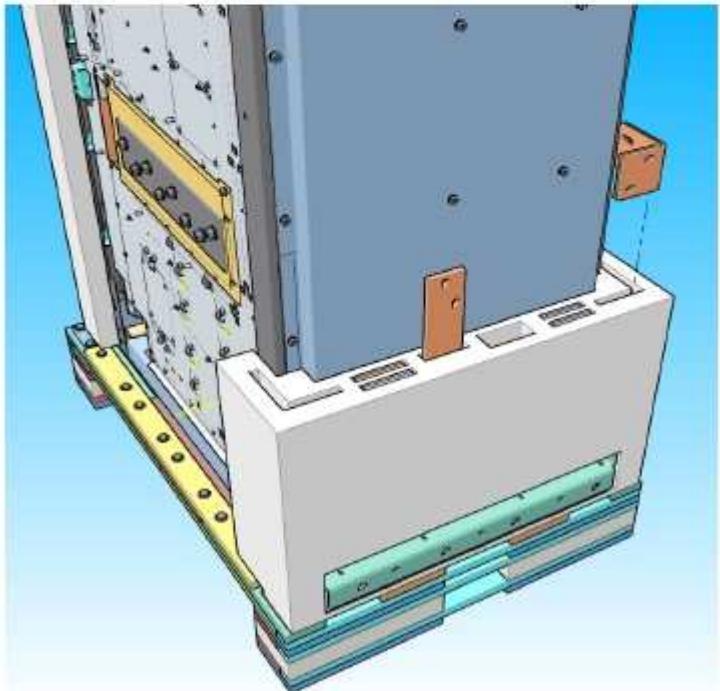

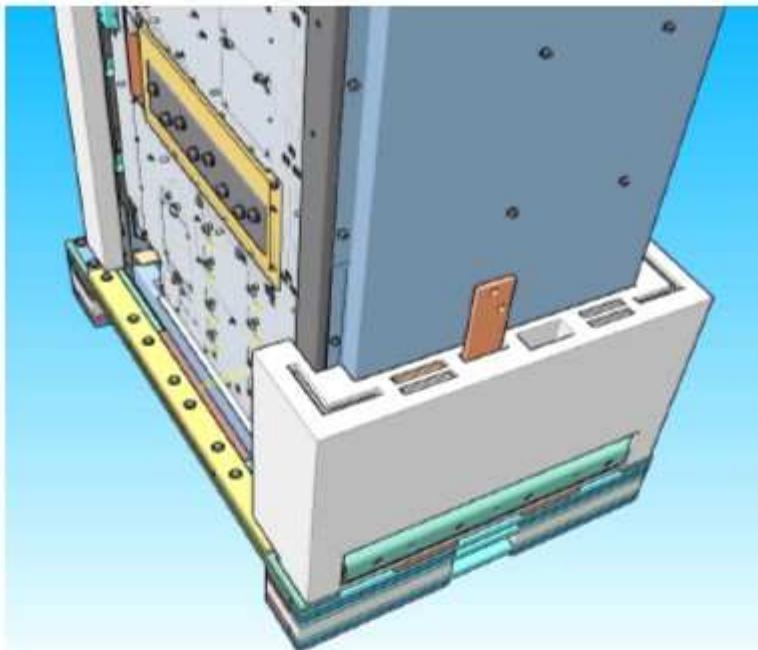



190

| Part no.: | Quantity               |
|-----------|------------------------|
| 0M-97885B | 3<br>(part of OH-0440) |
| 872-5000A | 2<br>(part of OH-0440) |
| 885-3326  | 2<br>(part of OH-0440) |

Wrap these 2 0M-97885A in 1 piece of wrap 872-5000A each before inserting into the foam to avoid them from scratching the busbars below.

Paste 1 label 885-3326 to each 872-5000A.

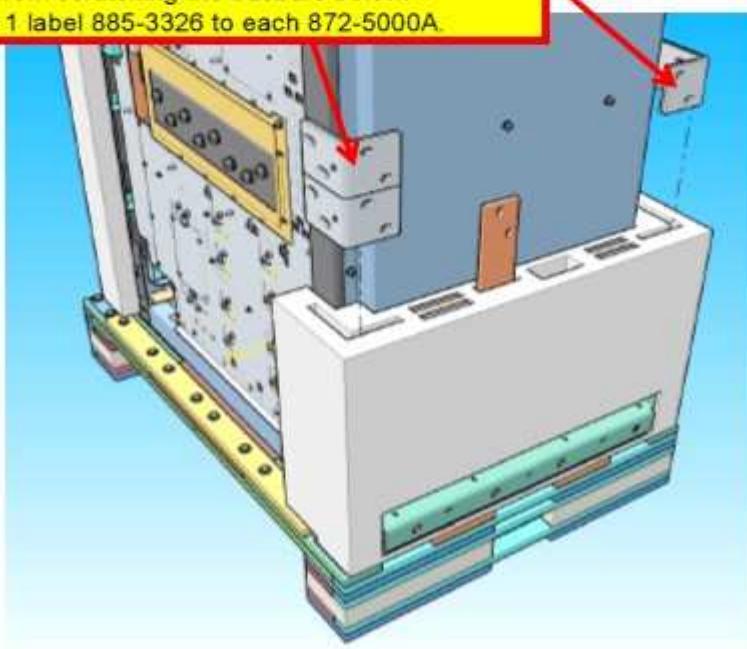

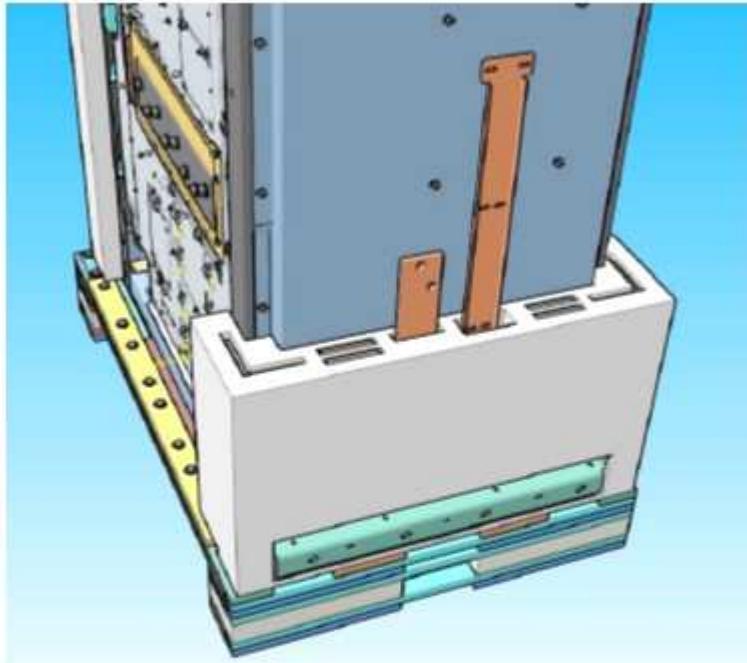

200

| Part no.: | Quantity |
|-----------|----------|
| 0M-821220 | 1        |
| 872-0214A | 1        |
| 873-0012B | 1mt      |

Wrap 0M-821220 in wrap 872-0214A before inserting.  
Secure the wrap with tape 873-0012B

