




Bulletin H-IM-73A

June 2000

Part Number 90800801

Replaces H-IM-73 and H-IM-74

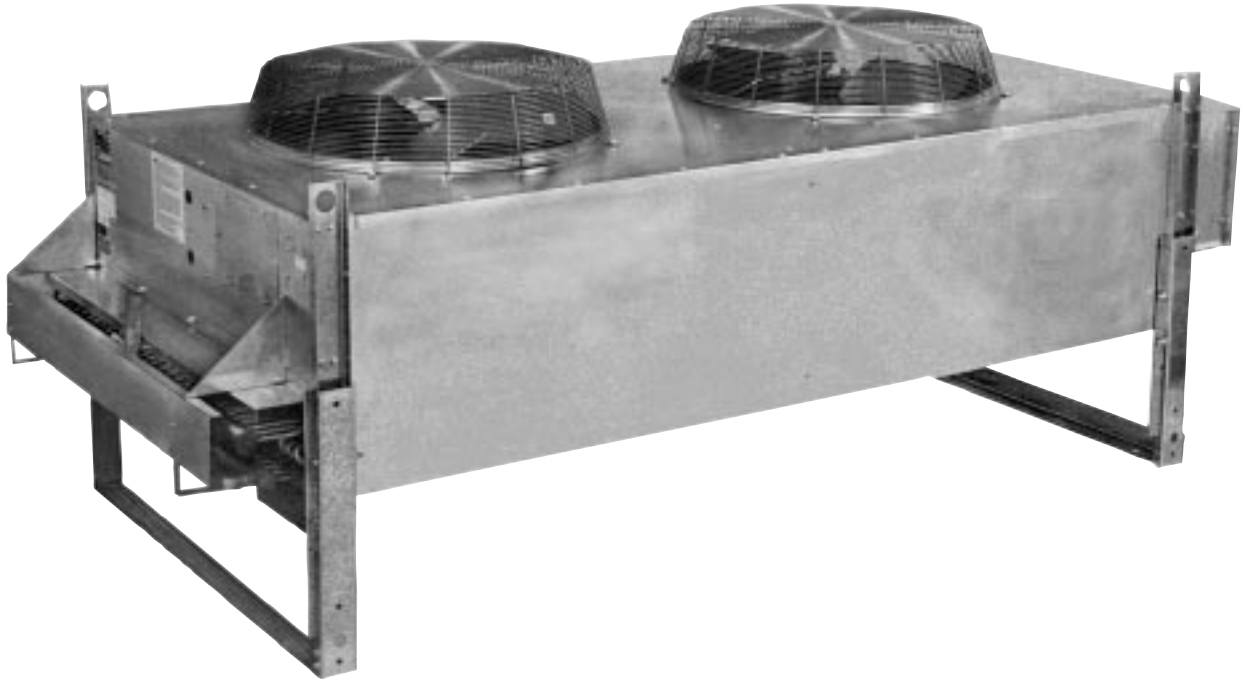

REMOTE AIR-COOLED CONDENSERS

Models 1-26

Installation and Maintenance Data

Table of Contents

Inspection	
Installation	3-4
Leg Assembly	5
Space and Location	6
Piping	7
Line Sizing	
Electrical Wiring	8-9
Start Up and Operation	10
Head Pressure Control	10
Refrigerant Charges	11-12
FHP Charge Factor	
Replacement Parts	13
Dimensional Data	14
Unit Specifications	15

Inspection

Responsibility should be assigned to a dependable individual at the job site to receive material. Each shipment should be carefully checked against the bill of lading. The shipping receipt should not be signed until all items listed on the bill of lading have been accounted for.

Check carefully for concealed damage. Any shortage or damages should be reported to the delivering carrier.

System Warranty

This equipment is designed to operate properly and produce rated capacity when installed in accordance with accepted industry standards. Failure to meet the following conditions may result in voiding of the system warranty:

1. System piping must be installed following industry standards for good piping practices.
2. Inert gas must be charged into piping during welding.
3. System must be thoroughly leak checked and evacuated before initial charging. High vacuum gauge capable of reading microns is mandatory. Dial indicating pressure gauges are not acceptable.

Damaged material becomes the delivering carrier's responsibility, and should not be returned to the manufacturer unless prior approval is given to do so. When uncrating, care should be taken to prevent damage. Heavy equipment should be left on its shipping base until it has been moved to the final location.

4. Power supply to system must meet following conditions:
 - a. Voltage for 208/230 motors not less than 195 volts or more than 253 volts.
 - b. All other voltages must not exceed $\pm 10\%$ of nameplate ratings.
 - c. Phase imbalance not to exceed 2%.
5. All controls and safety switch circuits properly connected per wiring diagram.
6. Factory installed wiring must not be changed without written factory approval.

Installation

NOTE: Installation and maintenance to be performed only by qualified personnel who are familiar with local codes and regulations, and experienced with this type of equipment.

CAUTION: Sharp edges and coil surfaces are a potential injury hazard. Avoid contact with them.

Unit Location

Units are designed for outdoor application and may be mounted on a roof or concrete slab (ground level installation). Roof mounted units should be installed level on steel channels or an I-beam frame to support the unit above the roof. Use of vibration pads or isolators is recommended. The roof must be strong enough to support the weight of the unit. Concrete slabs used for unit mounting should be installed level and be properly supported to prevent settling. A one-piece concrete slab with footings extending below the frost line is recommended.

The condenser should be located no closer than four feet from any wall or other obstruction to provide sufficient clearance for air entrance. Do not attach ductwork to the coil inlet or fan outlet. Care should be taken to avoid air recirculation conditions that can be caused by sight screening, walls, etc. Also keep unit fan discharge away from any building air intakes. See page 6 for space and location requirements.

Sound Vibration

Units should be installed away from occupied spaces and above or outside of utility areas, corridors and auxiliary spaces to reduce the transmission of sound and vibration to occupied spaces. The refrigerant piping should be flexible enough to prevent the transmission of noise and vibration from the unit into the building. If the refrigerant lines are to be suspended from the structure of the building, isolation hangers should be used to prevent the transmission of vibration. Where piping passes through a wall, it is advisable to pack fiberglass and sealing compound around the lines to minimize vibration and retain flexibility in the lines.

The unit needs to be secured in its final location. Holes are provided in the base runner for this purpose.

WARNING: This equipment may contain a substance which harms the public health and environment by destroying ozone in the upper atmosphere. Venting of certain refrigerants to the atmosphere may be illegal in your location. Refrigerant recovery devices should be used when installing or servicing this product. Consult your local codes for requirements in your location.


WARNING: There may be more than one source of electrical current in this unit. Do not service before disconnecting all power supplies.

Rigging and Moving Units

The exact method of handling and setting the unit depends on available equipment, size of unit, final location, and other variables. It is therefore up to the judgement of the riggers and movers to determine the specific method of handling each unit. All units are shipped on heavy skids and enclosed in open


crating. Generally, it is advisable to bring the unit as close to its final location as possible before removing crating.

Units are provided with lifting ears near the four corners. Under no circumstances should the coil headers or return bends be used for moving these units.

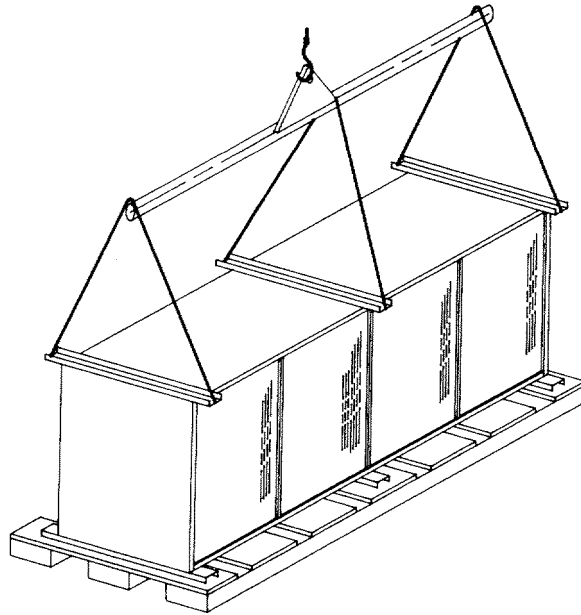

NOTE FOR ALL MODELS:

1. **Spreader Bars Must Be Used. (Contractor Supplied)**
2. **Safety Sling Should Be Used When Making Lift.**

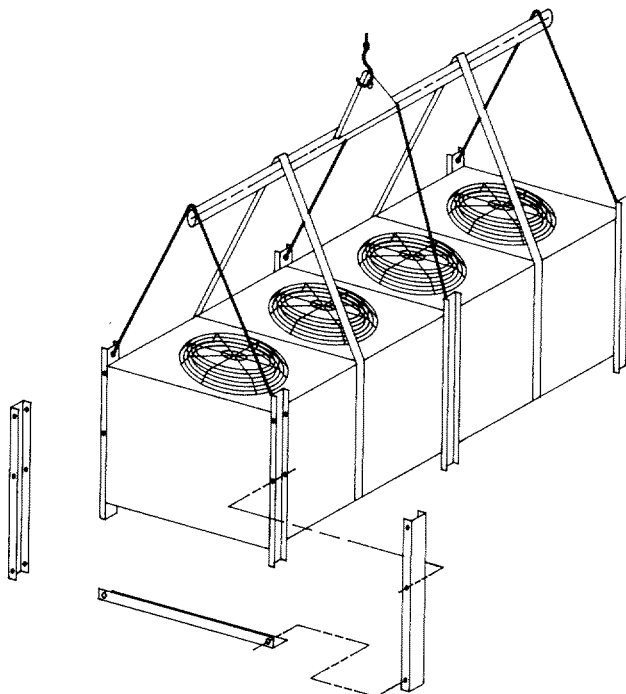

Horizontal Condenser


Horizontal airflow type units should be installed with the coil (inlet air side) facing the prevailing winds. Where strong winds are common, it is recommended that a wind deflector (Wind deflector by others) be used to discharge the air vertically from the unit, so as to prevent loss of capacity during varying wind conditions. The wind deflector should be installed on the fan side of the unit. If horizontal airflow units are installed with air inlet facing a wall, a distance of at least 48 inches should be maintained between unit and wall. If it is absolutely necessary to have the unit positioned so that the air discharge is toward

a wall, it should be spaced from the wall a distance of not less than 3 times the coil face heights.

Vertical Condenser

Vertical airflow type units should be located no closer than the width of the unit from a wall or other obstruction. If two or more units are to be positioned in the same area, a similar distance should be maintained between adjacent units. Sufficient free area should be left around and below unit to avoid air restriction to coil.


Figure 1. Leg Assembly (Vertical Airflow)

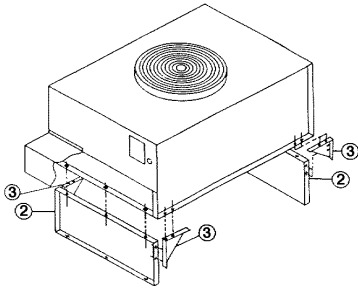

Leg Assembly for Vertical Airflow Installation (Models 1-3)

1. Assemble to the unit two legs, item 2 as shown in figure 1, using three each 1/4 - 20 x 3/4" long bolts per leg. Captive nuts are provided on unit for this assembly.
2. Four gussets, item 3, are provided for leg support as shown in figure 1.
3. Assemble the gusset in each corner with 1/4 - 20 x 3/4" long bolts and 1/4" nuts.
4. Discard the four mounting angles, item 1.


Figure 2. Leg Assembly (Horizontal Airflow)

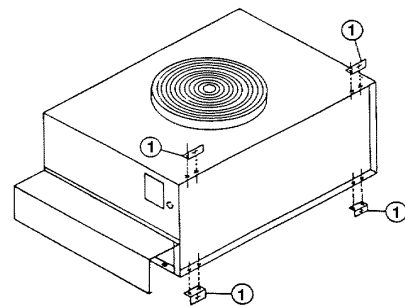

Leg Assembly for Horizontal Airflow Installation (Models 1-3)

1. Attach to the units four mounting angles, items 1 as shown in figure 2, using two each of the 1/4 - 20 x 3/4" long bolts and 1/4" nuts per mounting angle.
2. Discard the two legs, items 2, and four gussets, item 3, in figure 1.


Figure 3. Leg Assembly (Vertical Airflow)

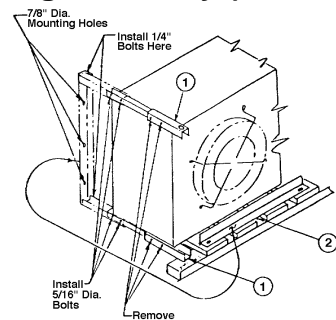

Leg Assembly for Vertical Airflow Installation (Models 5-26)

1. Remove fasteners securing condenser to skid.
2. Remove leg extensions (item 1) by removing four 5/16" x 3-1/2" bolts.
3. Install as shown in dotted lines with same four bolts.
4. Install mounting angle (2) as shown (dotted lines) with four 1/4 - 20 x 3/4" bolts provided.
5. Condenser can be hoisted by attaching hooks into 1-1/2" holes in leg assemblies.
6. Attach condenser to base using 7/8" diameter holes in the base angle.

Figure 4. Leg Assembly (Horizontal Airflow)

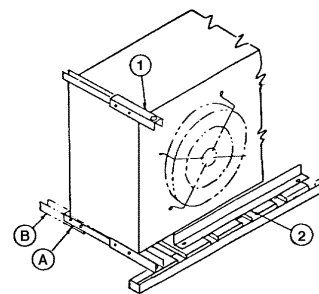

Leg Assembly for Horizontal Airflow Installation (Models 5-26)

1. Remove bolts securing condenser to skid.
2. Remove item 1 and attach to rear of bottom leg "A" to complete mounting base. Item 2 is not required in the horizontal discharge application and may be discarded.
3. Condenser can be hoisted by the 1-1/2" holes in leg assemblies.
4. Attach unit to base using mounting holes on leg extensions at "B".


Space and Location Requirements

The most important consideration which must be taken into account when deciding upon the location of air cooled equipment is the provision for a supply of ambient air to the condenser, and removal of heated air from the condenser area. Where this essential requirement is not adhered to, it will result in higher head pressures, which cause poor operation and possible eventual failure of equipment. Units must not be located in the vicinity of steam, hot air or fume exhausts.

Another consideration which must be taken is that the unit should be mounted away from noise sensitive spaces and must have adequate support to avoid vibration and noise transmission into the building. Units should be mounted over corridors, utility areas, rest rooms and other auxiliary areas where high levels of sound are not an important factor. Sound and structural consultants should be retained for recommendations.


Walls or Obstructions

The unit should be located so that air may circulate freely and not be recirculated. For proper air flow and access all sides of the unit should be a minimum of the width of the unit "W" away from any wall or obstruction. It is preferred that this distance be increased whenever possible. Care should be taken to see that ample room is left for maintenance work through access doors and panels. Overhead obstructions are not permitted. When the unit is in an area where it is enclosed by three walls the unit must be installed as indicated for units in a pit.

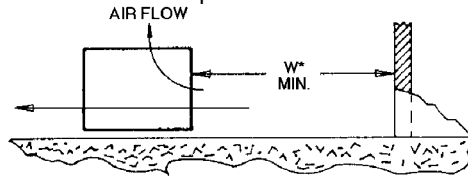

Multiple Units


For units placed side by side, the minimum distance between units is the width of the largest unit. If units are placed end to end, the minimum distance between units is four feet.

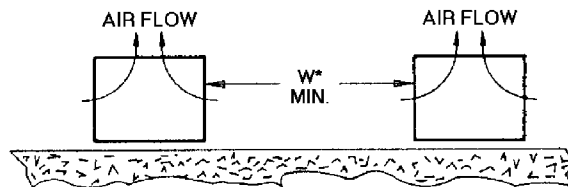

Units In Pits


The top of the unit should be level with the top of the pit, and side distance increased to "2W".

If the top of the unit is not level with the top of pit, discharge cones or stacks must be used to raise discharge air to the top of the pit. This is a minimum requirement.

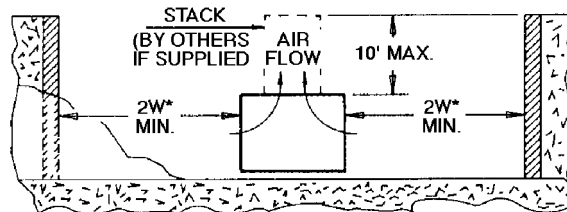

Decorative Fences

Fences must have 50% free area, with one-foot undercut, a "W" minimum clearance, and must not exceed the top of the unit. If these requirements are not met, unit must be installed as indicated for "Units in pits".

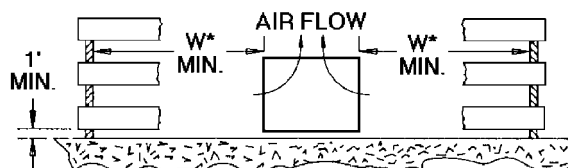

W = Total width of the condenser.

Typical Arrangements

Figure 5 illustrates a typical piping arrangement involving a remote condenser located at a higher elevation, as commonly encountered when the condenser is on a roof and the compressor and receiver are on grade level or in a basement equipment room.

In this case, the design of the discharge line is very critical. If properly sized for full load condition, the gas velocity might be too low at reduced loads to carry oil up through the discharge line and condenser coil. Reducing the discharge line size would increase the gas velocity sufficiently at reduced load conditions; however, when operating at full load, the line would be greatly undersized, and thereby create an excessive refrigerant pressure drop.

This condition can be overcome in one of two following ways:

1. The discharge line may be properly sized for the desired pressure drop at full load conditions and an oil separator installed at the bottom of the trap in the discharge line from the compressor.
2. A double riser discharge line may be used as shown in Figure 6. Line "A" should be sized to carry the oil at minimum load conditions and the line "B" should be sized so that at the full load conditions both lines would have sufficient flow velocity to carry the oil to the condenser.

For more complete information, refer to the ASHRAE Handbook on Systems.

Figure 5


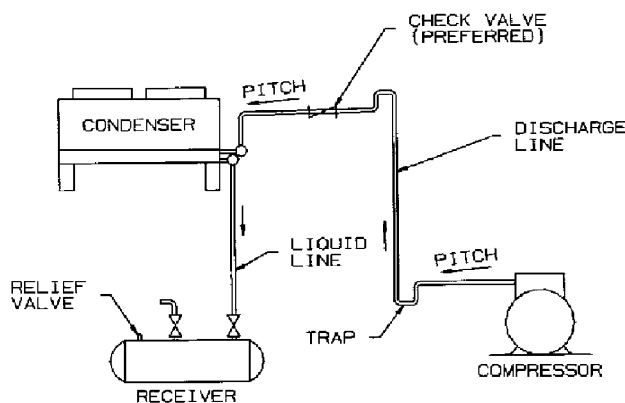


Figure 6

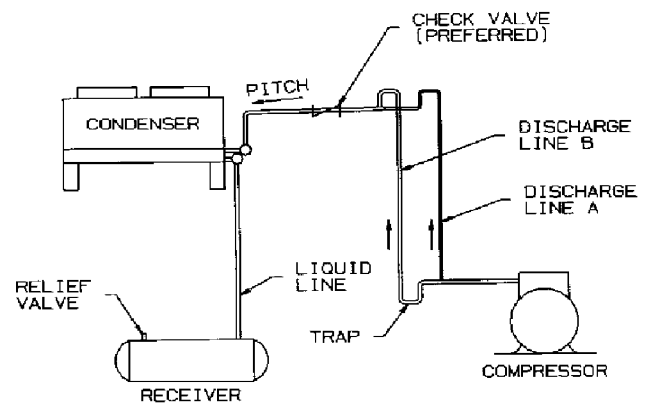

NOTES:

1. All oil traps are to be as short in radius as possible. Common practice is to fabricate the trap using three 90 degrees ells.
2. Pressure relief valves are recommended at the condenser for protection of the coil.
3. A drain line check valve is recommended for applications where the condenser may be at a lower temperature than the receiver.

Installation, Refrigerant Piping

Install piping according to standard accepted refrigeration practice. The following recommendations should be adhered to:

1. See Tables 1 and 2 for discharge and liquid drain line sizes for remote condenser connections.
2. Use only refrigeration grade copper tubing.
3. Soft solder joints are not acceptable.
4. Put dry nitrogen through lines while brazing.
5. Do not leave dehydrated piping or components open to the atmosphere any longer than is absolutely necessary.

Table 1. Tons of Refrigeration

Line Size Type L Copper OD	Discharge Line						Drain Line	
	R-22			R-404A/R-507			Velocity 100 FPM	
	Sat. Suction Temp (°F)						Refrigerant	
	-40	0	40	-40	0	40	R-22	R-404A/R-507
1/2	0.75	0.8	0.85	0.56	0.63	0.7	2.3	1.5
5/8	1.4	1.5	1.6	1.0	1.2	1.3	3.7	2.3
7/8	3.7	4.0	4.2	2.7	3.1	3.4	7.8	4.9
1 1/8	7.5	8.0	8.5	5.5	6.3	7.0	13.2	8.3
1 3/8	13.1	14.0	14.8	9.6	10.9	12.1	20.2	12.6
1 5/8	20.7	22.0	23.4	15.2	17.2	19.1	28.5	17.9
2 1/8	42.8	45.7	48.5	31.4	35.6	39.5	49.6	31.1
2 5/8	75.4	80.4	85.4	55.3	62.8	69.5	76.5	48.0
3 1/8	120.2	128.2	136.2	87.9	99.8	110.5	109.2	68.4
3 5/8	178.4	190.3	202.1	130.5	148.1	164.0	147.8	92.6
4 1/8	251.1	267.8	284.4	183.7	208.4	230.9	192.1	120.3

Source: ASHRAE Refrigeration Handbook:

1. Line sizes based on pressure drop equivalent to 1°F per 100 equivalent feet.
2. Values in Table are based on 105°F condensing temperature. Multiply Table capacities by the factors in Table 2 for other condensing temperatures.
3. If subcooling is substantial or the line is short, a smaller line size may be used. Applications with very little subcooling or very long lines may require larger sizes.

Table 2. Condensing Temperature Correction Factor

Condensing Temperature	Discharge Line	
	R-22	R-404A/R-507
90	0.88	0.91
100	0.95	0.97
110	1.04	1.02
120	1.10	1.08
130	1.18	1.16

Electrical Wiring

The electrical installation should be in accordance with National Electrical Code, local codes and regulations. Proper overcurrent protection should be provided for the fan motors. Wiring diagrams shown are only basic and do not show fuses, disconnect switches, etc., which must be provided in the field.

All standard motors have internal inherent overload protectors. Therefore, contactors can be used instead of starters requiring thermal protectors, eliminating the problem of furnishing the proper heating elements.

All air cooled condensers are furnished with either single phase or three phase fan motors which are identified by the unit dataplate.

Electrical leads from each motor terminate at the unit junction box. Field connections must be made from these leads through a contactor, fuse and disconnect in accordance with local, state and national codes.

Three phase motors must be connected to three phase power of voltage to agree with motor and unit dataplate.

The motors are wired into a common junction box. Where fan cycling is furnished and factory installed, the motors are completely wired through the control and to the contactors. The motors must be checked for proper rotation. Be sure to check that motor voltage and control connection agree with electric services furnished.

Warning: There may be more than one source of electrical current in this unit. Do not service before disconnecting all power supplies.

Diagram 1. Typical Wiring Diagram for 208-230/1/60

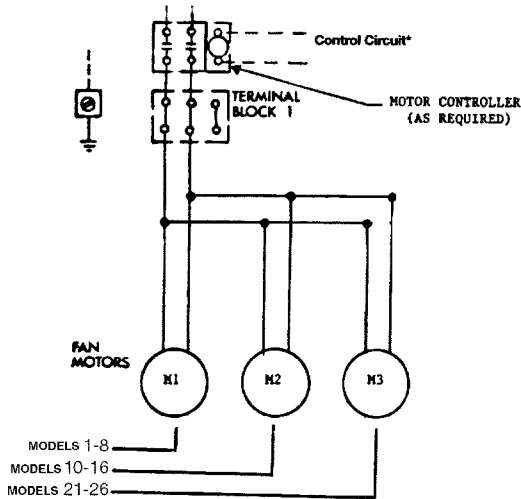


Diagram 2. Typical Wiring Diagram for 208-230-460/3/60

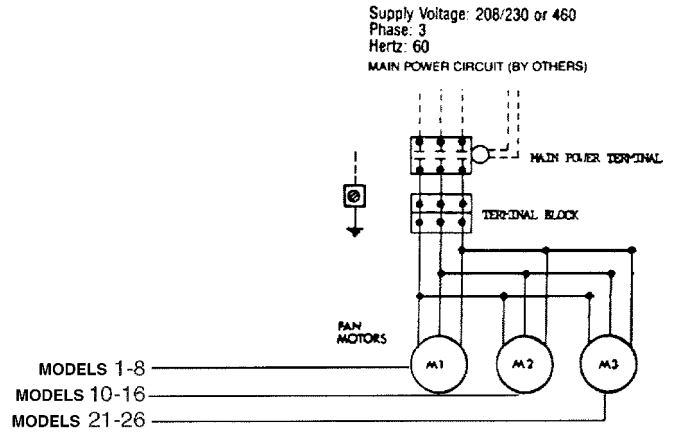


Diagram 3. Typical Wiring Diagram for 208-230/1/60 with Fan Cycling.

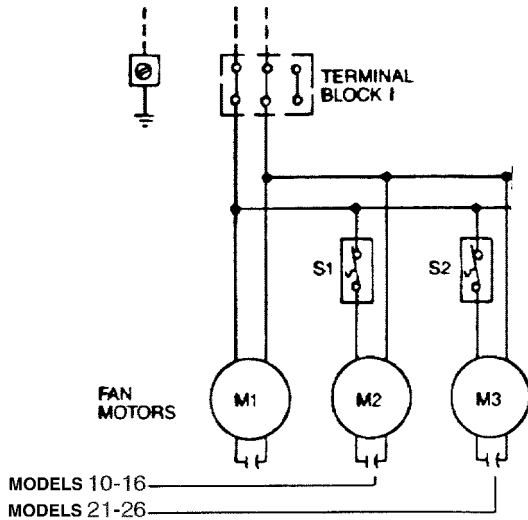


Diagram 4. Typical Wiring Diagram for Models 1-3.


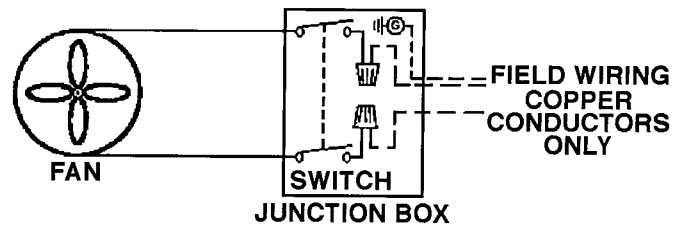


Diagram 5. Typical Wiring Diagram for 208-230-460/3/60 with Fan Cycling.

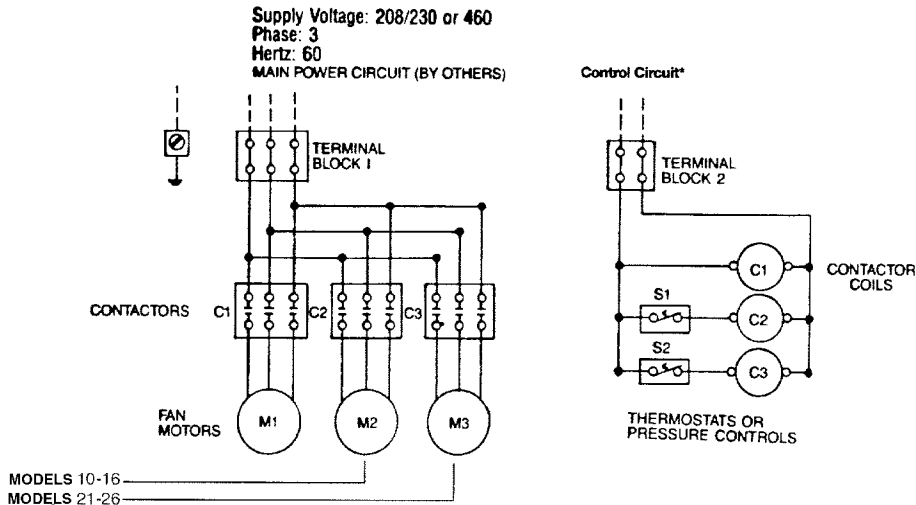

* CONTROL CIRCUIT: May be 24 volt, 120 volt, or 230 volt (as specified).

Start Up

Check for proper fan rotation. Air is drawn through the coil on all units. Be sure the fans turn freely.

Rotation of the motors and blades should be in a "CW" direction looking at the unit from the blade side. On three phase units, it may be necessary to reverse two of the three power leads to the unit.

NOTE: The manifold assembly is not designed to support field piping. Any damages to the condenser due to excessive weight, pressure or vibration will not be covered by our standard warranty.

Operation

Winter Operation Head Pressure Control

The capacity of an air cooled condenser varies with the difference between the entering air dry bulb temperature and the condensing temperature of the refrigerant. Since air temperature in some regions varies as much as 100 degrees from summer to winter, some means must be employed to keep the condensing temperature sufficiently high to insure proper operation of the refrigerant expansion valve during low ambient operation, and also allow sufficient capacity so that excessively high condensing temperatures do not result during high ambient conditions.

The low limit of the head pressure is dependent upon the required pressure drop across the thermostatic expansion valve. For normal air conditioning applications, head pressure should be maintained above a condensing temperature corresponding to 90°F. This, in effect, corresponds to a normal lower limit of about 60°F ambient air. Since air conditioning is not normally required at these lower ambient temperatures, condenser head pressure control may not always be necessary. However, for those applications which are of such a nature that operation is required below 60°F ambient air temperature, two methods of condenser head pressure control are available to meet specific job requirements and engineer/owner preference: **FAN CYCLING** and **FLOODED HEAD PRESSURE CONTROL (FHP)**.

Fan Cycling Method

This is an automatic winter control method and will maintain a condensing pressure within reasonable limits by cycling fan motors in response to outside air temperature entering the condensing coil. When voltage other than 230/208 is supplied to the unit, a transformer will be provided for field installation. Electrical protection must be provided for this transformer.

Fan Cycling Operation and Installation

The fan cycling control package consists of a weather-tight enclosure with motor starting contactor(s) as required and thermostat(s). The contactor coil is 24 volts, 115 volts or 240 volts as ordered. The thermostats and contactors are wired within the panel and the factory as shown on Diagrams 1 through 5.

Factory installed packages are mounted on the unit and have all motor connections completed. Field wiring consists of connecting this panel to a power supply and fused disconnect(s) together with the control circuit to the contactor coils.

It is suitable for outside temperatures above those shown in Table 3. The thermostat should be field set to shut off the fan

when the condensing temperature is reduced to approximately 90°F. Table 4 lists approximate settings for several system T.D.'s. These settings are approximate as they do not take into account variations in load.

Where operation at ambients below the range shown on Table 3 were required, FHP must be added.

Variable Speed

Condenser head pressure control is provided by varying the air flow through the condenser by changing the RPM of the condenser fan. This control package is offered in combination with ambient fan cycling. The fan motor next to the header end of the condenser is the variable speed fan. The remainder of the fans are constant speed and are cycled separately using ambient sensing thermostats.

Flooded Head Pressure Control Valve (FHP)

The FHP system of head pressure control is a completely automatic control that maintains a preset condenser pressure without need of seasonal adjustment. The control maintains head pressure by backing liquid into the leaving side of the condenser, decreasing the effective condenser surface and therefore maintaining a constant head pressure upon a drop in ambient temperature.

Several styles of flooding valves or combinations of valves are available. Contact the valve manufacturer for specific recommendations.

Operation:

During normal ambient operation, the valve allows liquid refrigerant to flow through "C" port (see Figure 7) and "R" port to the liquid receiver. As the pressure drops with a drop in ambient temperature, the valve opens to allow high pressure discharge gas to enter "B" port, pass through the valve and pressurize the receiver to provide adequate liquid flow to the expansion valve (see Figure 8). This action raises the pressure on the discharge side of the condenser, reducing flow and flooding the leaving side of the condenser until the pressure rises to a proper level to close "B" port. The liquid receiver size is important in this type of control and must be large enough to hold the total system charge. If the receiver is not large enough, the liquid will be stored in the condenser causing high head pressure at normal ambient temperatures.

The refrigerant charge required will often be about two times the normal charge for cold weather operation. The amount of refrigerant that must be added to a system for winter or cold weather operation is determined by Tables 6 and 7.

Piping:

As on all systems, refrigerant migration must be prevented when using FHP. If the receiver is in a warm location, a check valve should be placed in the line between the FHP valve and the receiver. Good piping practice suggests a trap in the compressor discharge line and an inverted trap at the condenser outlet. Multiple valve applications must have valves piped in parallel.

Figure 7.


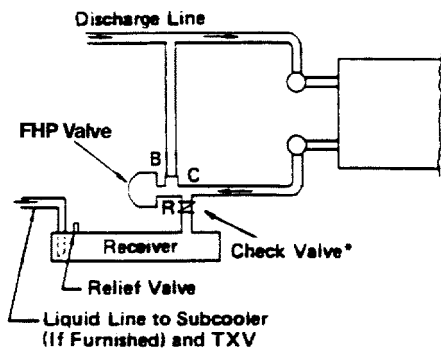


Figure 8.

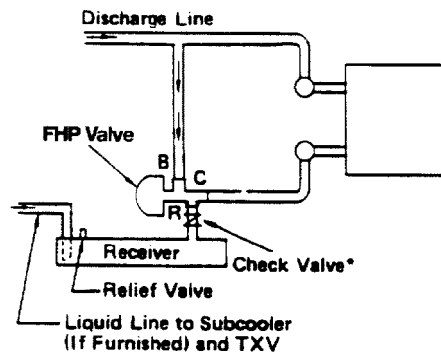

* If receiver is located in a warm ambient, a check valve in this location may be required to prevent receiver gas from migrating into the condenser during the off cycle.

Table 3. Minimum Ambient for Fan Cycling

Models	Design T.D.			
	30°F	25°F	20°F	15°F
2-fan units: 10, 12, 14, 16	45	55	65	70
3-fan units: 21, 23, 26	30	40	50	60

Table 4. Fan Cycling Thermostat Settings

Models	Design T.D. T.D.	Thermostat Settings	
		T1	T2
2-fan units: 10, 12, 14, 16	30	55	
	25	60	
	20	65	
3-fan units: 21, 23, 26	30	60	45
	25	65	50
	20	75	55
	15	75	65

NOTE: Fans closest to the headers should not be cycled on standard temperature or pressure controls. Dramatic temperature and pressure changes at the headers as a result of fan action can result in possible tube failure. Fan motors are designed for continuous duty operation. Fan cycling controls should be adjusted to maintain a minimum of five (5) minutes on and five (5) minutes off. Short cycling of fans may result in a premature failure of motor and/or fan blade.

Table 5. Refrigerant Charge, Lbs. for R-22

Model	Standard R-22 Charge	Additional Lbs. R-22 Charge for FHP at 20° T.D. °F Minimum Ambient at Condenser*				
		+50°F	+40°F	+20°F	0°F	-20°F
1	1.0	1.0	1.0	1.0	1.0	1.0
1 1/2	1.0	2.0	2.0	2.0	2.0	2.0
2	1.5	2.0	2.5	2.5	2.5	3.0
3	3.5	4.0	4.5	4.5	5.0	5.0
5	5.0	6.0	6.5	7.5	7.5	8.0
8	9.0	10.5	11.5	12.5	13.0	13.5
10	10.0	11.5	12.5	14.0	14.5	15.0
12	9.5	12.0	13.0	14.5	15.0	15.5
14	12.5	16.0	17.5	19.0	20.0	20.5
16	17.5	21.0	23.0	25.0	26.0	27.0
21	19.0	24.0	26.0	28.0	29.0	30.0
23	19.0	24.0	26.0	28.0	29.0	30.0
26	25.0	32.0	35.0	38.0	39.0	40.5

For R404A multiply charge by 0.91; For R134a multiply charge by 0.99.

* See charge factor chart, Table 7 for 25 and 30 T.D.

Table 6. Additional Lbs. R-22 Charge for FHP and FAN CYCLING Combination

Model	Additional Lbs. R-22 Charge for FHP and FAN CYCLING Combination											
	25 T.D.				20 T.D.				15 T.D.			
	+40	+20	+0	-20	+40	+20	+0	-20	+40	+20	+0	-20
10	4.5	10	13.6	16.3	8.1	12.7	16.3	18.2	12.7	16.3	18.2	20
12	4.5	10	13.6	16.3	8.1	12.7	16.3	18.2	12.7	16.3	18.2	20
14	5.5	12.7	18.2	21.8	10.9	17.2	21	23.6	16.3	21.8	24.5	27.3
16	7.3	17.2	23.6	28.2	13.6	22.7	28.2	31.8	21.8	28.2	32.7	36.4
21	0	7.3	17.2	23.6	4.5	16.3	23.6	30	15.5	24.5	31	34.5
23	0	7.3	17.2	23.6	4.5	16.3	23.6	30	15.5	24.5	31	34.5
26	0	11.0	22.8	31.8	5.5	21.8	31.9	40.0	20.0	32.8	40.1	47.3

Multiply all R-22 values by 0.91 for Lbs. of R404A; multiply by 0.99 for R134a.

Table 7. FHP Charge Factor for 25 T.D. and 30 T.D.

Minimum Ambient	Additional Charge Factor	
	25 T.D.	30 T.D.
+60°F	.66	.33
+40°F	.85	.71
+20°F	.91	.81
0°F	.93	.86
-20°F	.95	.90

In-Warranty Return Material Procedure

Material may not be returned except by permission of authorized factory service personnel of Heatcraft Inc. Refrigeration Products Division in Stone Mountain, Georgia. A "Return Goods" tag will be sent to be included with the returned material. Enter the information as called for on the tag in order to expedite handling at our factories and prompt issuance of credits. All parts shall be returned to the factory designated on the "Return Goods" tag, transportation charges prepaid.

The return of a part does not constitute an order for replacement. Therefore, a purchase order must be entered through your nearest Heatcraft Refrigeration

Products representative. The order should include part number, model number and serial number of the unit involved.

Replacement Parts

When writing to the factory for service or replacement parts, Refer to the model number and serial number of the unit as stamped on the serial plate attached to the unit. If replacement parts are required, mention the date of installation of unit and date of failure, along with an explanation of the malfunctions and a description of the replacement parts required.

Table 8. Replacement Parts List

Models	Motors			Fan Blades	Fan Guards
	Qty.	1 ph motor	3 ph motor		
1	1	2537974	—	2291820	2318491
1 1/2	1	2537974	—	2291820	2318491
2	1	2537974	—	2291820	2318491
3	1	2537974	—	2291836	2318491
5	1	2530355	2531193	2292422	23111026
8	1	2531191	2531193	2292625	23111026
10	2	2530355	2531193	2292422	23111026
12	2	2530355	2531193	2292625	23111026
14	2	2531191	2531193	2292625	23111026
16	2	2531191	2531193	2292625	23111026
21	3	2531191	2531193	2292625	23111026
23	3	2531191	2531193	2292625	23111026
26	3	2531191	2531193	2292625	23111026

Maintenance

Air cooled condensing units require a minimum of maintenance. The unit coil will require a periodic cleaning and this can be accomplished by a brush, vacuum cleaner, pressurized airstream or a commercially available coil cleaning foam. All of the condenser fan motors have sealed ball bearings. The only acceptable service to these bearings is replacement.

Cleaning Instructions

Heatcraft recommends that the finned surface of this unit be cleaned approximately every six (6) months; more frequent cleaning may be required if extreme

conditions cause clogging or fouling of air passages through the finned surface.

Calgon Corporation's CalClean 41352 (or equal) should be acceptable for cleaning this unit. CalClean should be applied liberally to entering air and leaving air surfaces of the finned area in accordance with the label directions.

CAUTION: Under no circumstances should this unit be cleaned with an acid-based cleaner.

CONDENSER SPECIFICATIONS

Diagram 6. Dimensions for Models 1 through 3 Tons

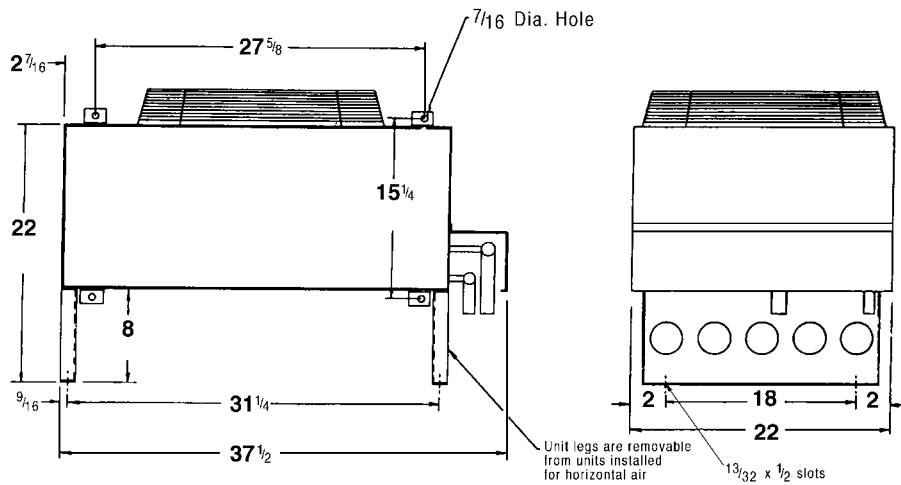


Diagram 7. Dimensions for Models 5 through 26 Tons with Vertical Air Flow


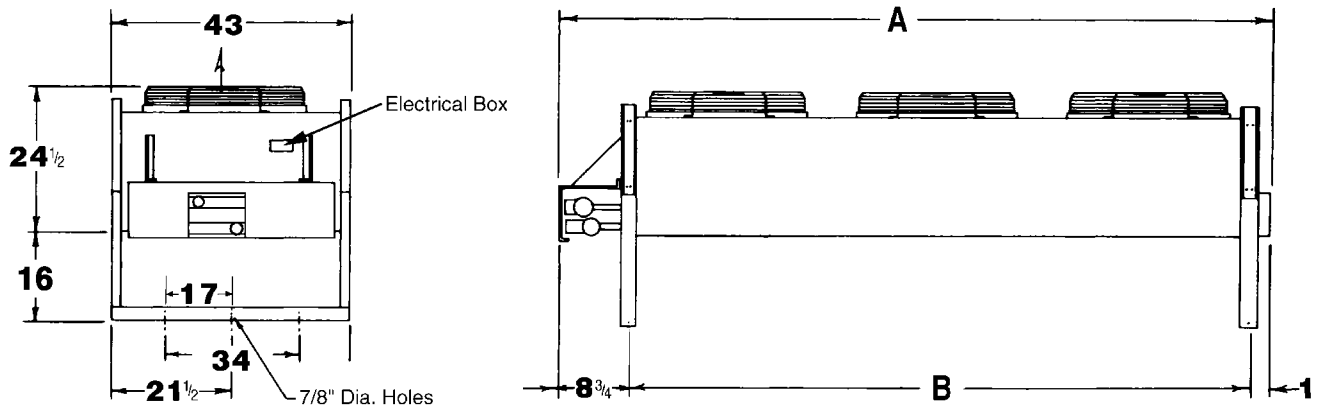


Diagram 8. Dimensions for Models 5 through 26 Tons with Horizontal Air Flow

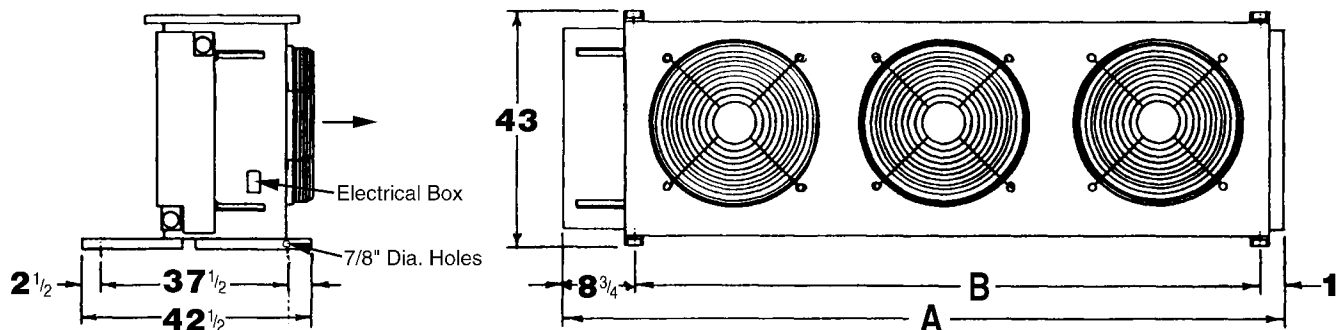

CONDENSER SPECIFICATIONS

Table 1. Specifications

Models	Dimensions Inches		CFM	Fan		Max. Circ. Avail.	Motor Data				Connections ODS		Approx. Net Wt. Lbs.
	A	B		No.	Dia. In.		HP ¹	FLA ¹	HP ²	FLA ²	Inlet	Outlet	
1	---	---	2,400	1	18	1	1/4	2.0	---	---	3/8	3/8	96
1 1/2	---	---	2,400	1	18	1	1/4	2.0	---	---	5/8	5/8	96
2	---	---	2,400	1	18	2	1/4	2.0	---	---	7/8	5/8	96
3	---	---	2,100	1	18	3	1/4	2.0	---	---	7/8	5/8	114
5	39 ³ / ₄	30	5,050	1	24	8	1/3	3.4	1/3	2.6/1.3	1 ¹ / ₈	7/8	180
8	49 ³ / ₄	40	6,450	1	26	16	1/2	3.9	1/3	2.6/1.3	1 ¹ / ₈	7/8	260
10	69 ³ / ₄	60	10,100	2	24	16	1/3	6.8	1/3	5.2/2.6	(2)1 ¹ / ₈	(2)7/8	450
12	69 ³ / ₄	60	12,400	2	26	16	1/2	7.8	1/3	5.2/2.6	(2)1 ¹ / ₈	(2)7/8	470
14	89 ³ / ₄	80	13,700	2	26	16	1/2	7.8	1/3	5.2/2.6	(2)1 ¹ / ₈	(2)7/8	510
16	89 ³ / ₄	80	12,900	2	26	32	1/2	7.8	1/3	5.2/2.6	(2)1 ³ / ₈	(2)1 ¹ / ₈	530
21	129 ³ / ₄	120	20,500	3	26	24	1/2	11.7	1/3	7.8/3.9	(2)1 ⁵ / ₈	(2)1 ¹ / ₈	550
23	129 ³ / ₄	120	19,900	3	26	24	1/2	11.7	1/3	7.8/3.9	(2)1 ⁵ / ₈	(2)1 ¹ / ₈	580
26	129 ³ / ₄	120	19,400	3	26	24	1/2	11.7	1/3	7.8/3.9	(2)1 ⁵ / ₈	(2)1 ¹ / ₈	625

¹Motor voltage 208-230/1/60; 1075 RPM

²Motor voltage 208-230-460/3/60; 1140 RPM

NOTE: Models 1-2 available in 115/1/60 voltage; models 5-26 available in 575/3/60 voltage

General Fan Layouts

Figure 9. Models 1-8



Figure 10. Models 10-16



Figure 11. Models 21-26



Electrical junction box is located on header end of units unless optional FAN CYCLING is ordered on 230 and 460 volt. In which case, three phase units electrical box is located on unit end opposite header end.

INSTALLATION CHECK LIST

Condenser

Start Up Date _____

Model Number _____

Serial Number _____

Electrical
Voltage _____

Amperage _____

Installer:	Name & Address

Please retain this information with the condenser.

Since product improvement is a continuing effort at Heatcraft, we reserve the right to make changes in specifications without notice.

